


VISIT...

LANZAROTE
Caliente.COM

FRAMING

HOUSE FRAMING
BARN FRAMING
ROOF FRAMING

by
RADFORD

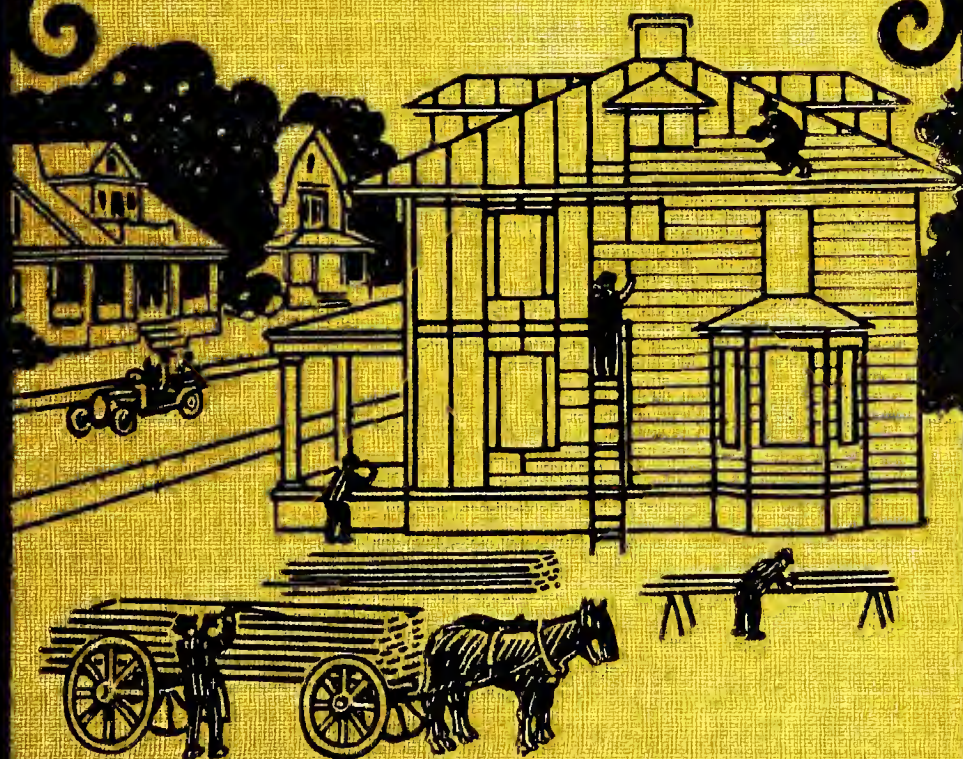

Framing

A Practical Manual of

APPROVED UP-TO-DATE METHODS OF HOUSE FRAMING AND CONSTRUCTION
TOGETHER WITH TESTED METHODS OF HEAVY TIMBER AND PLANK
FRAMING AS USED IN THE CONSTRUCTION OF BARNs, FACT-
ORIES, STORES, AND PUBLIC BUILDINGS; STRENGTH
OF TIMBERS; AND PRINCIPLES OF ROOF
AND BRIDGE TRUSSES

Edited under the Supervision of

WILLIAM A. RADFORD

PRESIDENT OF THE RADFORD ARCHITECTURAL COMPANY,
EDITOR-IN-CHIEF OF THE "AMERICAN CARPENTER AND BUILDER"
AND THE "CEMENT WORLD"

Assisted by

ALFRED S. JOHNSON, A. M., PH. D.

EDITOR IN CHARGE OF CYCLOPEDIA DEPARTMENT
THE RADFORD ARCHITECTURAL COMPANY

and

BERNARD L. JOHNSON, B. S.

EDITOR OF THE "AMERICAN CARPENTER AND BUILDER"

ILLUSTRATED

THE RADFORD ARCHITECTURAL COMPANY
CHICAGO, ILL.

COPYRIGHT, 1909

BY

THE RADFORD ARCHITECTURAL COMPANY

Table of Contents

HOUSE FRAMING PAGE 3

Laying Out Building Lines—Squaring a Corner—Foundation Work—Forms for Concrete—Cement Cellar Floors—Waterproofing Cellars—Braced Framing—Balloon Framing—Still Construction—Floor Joists—Bridging and Bracing—Beams and Supports—Studding—Wall Framing—Ledger-Board and Plate—Sheathing a House—Building Paper—Trussed and Braced Partitions—Party-Walls—Sound-Proofing—Cornice Construction—Putting in Show Blocks—Window Framing—Bays, Casements, Dormers, etc.—Transom—Triple Window—Octagon Bay—Window Ventilators—"Open-Air" Rooms—Trussed Openings—Door Framing—Flooring—Porch Framing—Steps—Fireplaces—Furring and Lathing—Interior Trim—Roof Framing—Hips and Valleys—Rafter Framing with Steel Square—Ridge-Pole—Purlins—Wind Bracing—Stair-Building—Types of Stairs—Laying Out a Stair—Treads and Risers—Landings—Strings—Handrail—Balusters—Framing for Cement House Construction—Concrete Walls—Metal and Wood Lath—Cement Surfacing—Artistic Finishing—English Half-Timbered Houses—Brick Veneer Houses—Waterproofing—Bonding of Masonry and Woodwork—Cement Block Veneer—Timber Framing for Stone and Brick Houses—Framing for Slate, Tile, and Other Heavy Roofing

BARN FRAMING PAGE 239

Heavy Timber Barns—General Principles—Location—Drainage—Foundation—Details, Sizes, and Spacing of Timbers—Joints—Bracing—Roof Construction—Plank-Framing—Relative Cost and Desirability—Balloon Framing—Support of Hay Track—Hanging of Doors—Water-Tight Floor—Cement Floor—Mangers

FRAMING OF INDUSTRIAL BUILDINGS PAGE 275

Mill Construction—Relative Fireproof Character—Cost and Desirability—Factories and Shops—Office and Public Buildings—Fireproofing—Saw-Tooth Roofs—Supports for Machinery, Shafting, etc.

STRENGTH OF TIMBERS; TRUSS FRAMING PAGE 293

Principles of Truss Construction—Safe Loads on Beams—Factor of Safety—Sizes of Beams—Simple Roof Trusses—Truss Loads—Chords—Diagonals—Ties—Struts—Tension and Compression Members—Trusses for Broad Spans—Curved Trusses—Plank-Framed Trusses—Lattice Trusses—Flat Roof Trusses—Strengthening Trusses—Cambering a Truss—Trussed Partitions

INDEX PAGE 335

Framing

The subject of Framing, taken in its broadest sense, includes pretty nearly the entire structural field. By one of the most common uses of the term, whenever two members are joined or fastened together they are said to be **framed** together. More especially, this applies to the heavy or supporting members of any structure. Thus we speak of the steel framing of a modern "skyscraper." Most framing, however, implies wood construction, as the timber framing of trestle bridges, heavy framing for barns or public buildings, and the framing for houses of various sorts.

To the carpenter especially, and to all others interested in wood in a structural way, this is a most important subject. The framing of a building has been likened to the skeleton of the human body; it is important that it be put together properly and connected up in the right way. The whole stability and success of the edifice depend on the strength and proper arrangement of the supporting frame. Also, when the framing in its various forms and with its various allies has been mastered, the whole structure will be understood.

In examining this subject with special reference to practical carpentry construction, framing may naturally be divided under the following heads:

- (1) Timber framing for houses;
- (2) Barn framing;
- (3) Framing of factories, stores, and public buildings;
- (4) Miscellaneous framing, including strength of timbers and the principles of truss construction.

The work, accordingly, will be taken up in this order. In some cases, certain subjects of an introductory or explanatory nature will be discussed, although, strictly speaking, they are no part of "framing," and, possibly, are not done by the carpenter. Yet a knowledge of them will add to the carpenter's equipment, and will help him to do his work more intelligently.



Frame Houses

Framing Complete from Foundation to Roof

Taking up the subject of **house framing**, it is to be noted at the outset, that certain very important work must be done before anything like a stable, permanent structure can be erected. The plan must be laid out, building lines determined and fixed, excavations made, and foundations erected.

Building Lines. After the site has been determined exactly—either in accordance with the architect's drawings or determined by the soil conditions, elevation, grade, etc.—it is in order to **stake it out**. This is done by placing stakes outside of each corner and connecting them with cords to guide the workmen in their excavating. It is very important that this be done with great care. Even in small buildings, it should be carefully attended to; while for large structures this work is entrusted to an engineer, who lays out the building lines with transit and level. The lines that have to be located are: the **excavation line** (which is outside of all); the **face line** of the basement wall; and, for masonry construction, the **ashlar line**, which indicates the outside face of the brick or stone wall.

The main rectangle of the plan is laid out

first; and then the supplemental rectangles—as for ells, porches, bays, etc.—are laid out with reference to it, in their proper places.

Squaring a Corner; the 6, 8, and 10 Rule. It is frequently required to square the excavation for a building with a tape line, without the use of other lines and stakes. The method is simple,

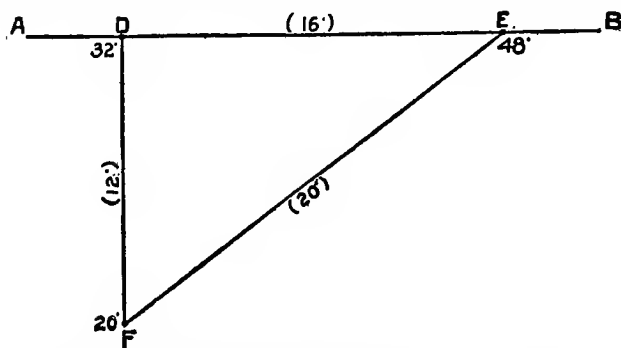


Fig. 1. Squaring Work by the 6, 8, and 10 Rule.

and may be quickly done by three parties, as follows: Run off 24 feet; then the first party should take the end of the tape, and hold it at the 24th foot. The second party should hold the line with thumb and finger at the 16th foot, and the third party in like manner at the 10th foot. Draw till the line is tight, and it will form a right-angled corner true enough for proving up excavation work. The figures given are absolutely correct; but, as a little is liable to be lost at the corners in not being able to hold the tape so as to make sharp bends, this may cause a trifle variation, but the results will be true enough for the purpose stated. The tape

will outline a triangle with its sides 6, 8, and 10 feet long; hence the method is called the **6, 8, and 10 Rule**.

Other figures may be used, provided they are in the same proportion—as 12, 16, and 20. The illustration, Fig. 1, shows the latter figures applied. Suppose we wish to square-cut from the line **AB** at **D**. Measure back on the line from this point 16 feet, as at **E**, and with the end of the tape drawn to 48 and stationed at **E**, the 32-foot mark will be at **D**, and the third point will be at the 20-foot mark at **F**; then **DF** will be at right angles to **AB**.

Another method which is very convenient to use at times is as follows: Draw a line, Fig.

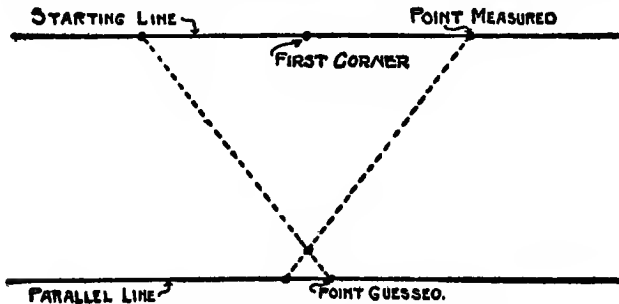


Fig. 2. Method of Squaring Work.

2, parallel to the starting line at opposite side or where there is to be an angle. Now, stick a pin in line at corner stake, and measure a given distance each way on the line—usually about as far as the parallel line is distance away. Now, from one of the points measured, draw a tape to as nearly square across from the corner


as can be guessed at, and place a pin there. Then measure the same distance from the other measured point, and stick another pin. Divide distance between these two pins, and you are "squared" across from first corner; and the rest is easy.

Concrete Foundations. Except in a few localities where native stone is to be had very cheaply, all foundation walls are coming to be of concrete. Builders have found that for strength, warmth, and enduring qualities, foundation and basement work in this material is far superior to brick or to wood piles; and for economy and ease in handling, it has an advantage over stone.

This growing popularity of cement for the foundation and basement work of frame houses makes it exceedingly desirable for all carpenters to become familiar with the special problems of its use. The contracting-carpenter on a small job does not want to be obliged to call in a concrete specialist to show him how the foundations and cellar floor should be put in. It is not necessary. Also there are certain problems in connection with the joining of the wood construction onto the concrete that are worthy of attention.

There are a number of types of concrete foundation walls now accepted in general use. Two are illustrated in Fig. 3. They are: first, the entire foundation wall of cement blocks;

CEMENT BLOCK VENEER ON BLOCK FOUNDATION.

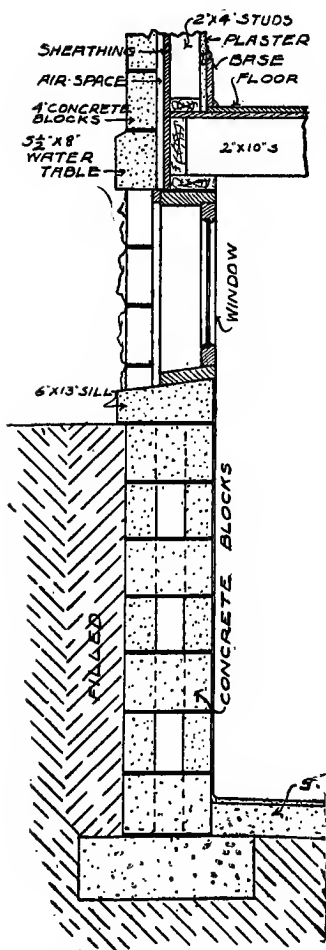

FRAME CONSTRUCTION ON COMBINED BLOCK & POURED CONCRETE FOUNDN.

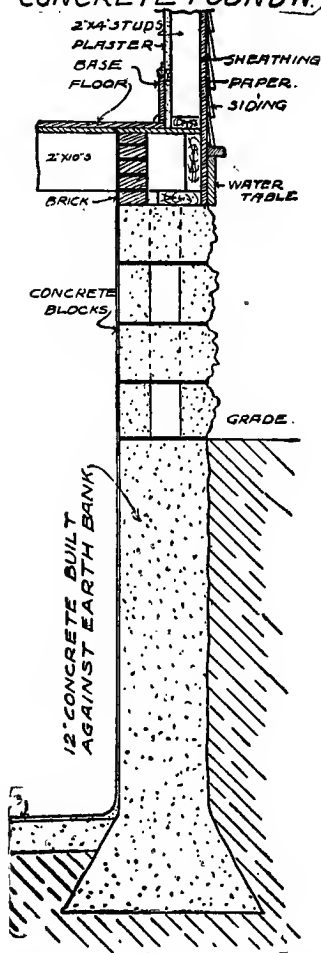


Fig. 3. Two Standard Types of Concrete Foundations for Houses.

second, the combination wall (poured concrete to grade, and blocks or dressed stone above).

A wall of the first kind is shown to the left. Excavation for foundation of this kind is made in the usual way, deep enough to provide a footing below frost (3 to 5 feet down). It is well to make the footing twice the width of the wall, and 10 inches thick. If the soil is firm, as it should be, no forms will be needed for this, the concrete being poured into the trench to harden.

A special large-size block is good for the wall, 8 by 12 by 24 inches. These are laid up in the regular way with cement mortar. When finished, the wall may be thoroughly waterproofed by painting the exterior face with a paint made of Portland cement and water. The inside of the wall should also be finished with a quarter-inch coat of neat cement.

The second type or combination wall is shown to the right in Fig. 3. This is very good, especially where the soil is firm; for, in that case, only the inside forms need be used. Excavation is carefully made, stopping just at the outside foundation line; the bank is hollowed back in under, for a sloping footing below frost; and the inside forms are set up. Concrete, composed of 1 part cement, $2\frac{1}{2}$ parts sand, and 5 parts crushed stone or gravel, is then carefully shoveled in and tamped solid. This wall will be waterproof, dense, impervious to water, if, before the Portland cement was used, hydrated lime in the proportion of 1 to

10 was thoroughly mixed through it. When this foundation has hardened sufficiently, the upper wall of blocks or dressed stone is laid up in the regular way.

Fig. 3 shows also two methods of framing for the superstructure—one for an ordinary frame building, standard construction, and the other for a frame building veneered with four-inch-thick concrete blocks. These should be secured to the framework, either with patent anchors or with large spikes driven into the wood with the heads built into the joints.

An **economical foundation wall** sometimes used where the building code prescribes thick walls, is a combination of hollow block and monolithic construction. Its economical features are not confined alone to the saving of concrete, but include the forms also, as scarcely any form is necessary for the footing; and after that the piers are built, requiring but a few forms, which can be used over and over again without resawing or wasting lumber. Fig. 4 shows the arrangement. Piers 6 or 8 feet apart are erected, using a grooved block. Between these piers the curtain walls are placed after the piers become hard.

On small work, where only two or three men are employed, no stop need be made if four piers and three sections of curtain wall forms are used.

The water-table is made after the piers and curtain walls are self-sustaining.

By the use of hollow blocks for piers and monolithic curtain walls, this method of construction is surprisingly rapid and effects a great saving of cost, especially in localities where the hauling adds much to the cost of concrete.

The appearance of this wall is preferable to

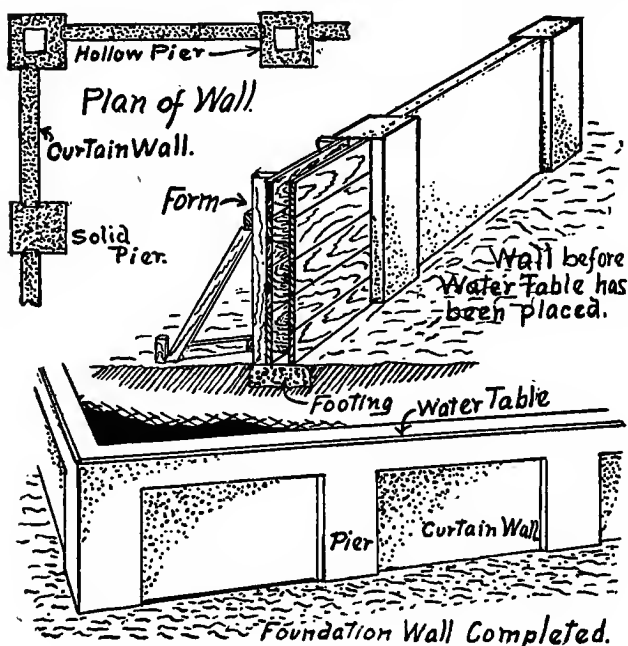


Fig. 4. An Economical Concrete Foundation.

that of the straight plain type. Besides, when building codes class concrete with rubble stone walls in thickness, only the piers need be the thickness required, while the curtain wall is usually acceptable if six inches thick. Walls

of this type have been made as light as four inches, and have stood every test.

With this method, a single wagon carries all forms and tools from one job to another; the cost of the forms, made of surface lumber, is about \$18.00, while the waste of lumber on a complete form for a dwelling foundation wall 30 by 40 by 7 feet high, for a 12 or 18 inch wall, will be \$25, to say nothing of discoloring about \$150 worth of good lumber.

By adding about one pound of ultramarine blue to each barrel of cement used for curtain walls, a beautiful effect is obtained, as it gives the piers and water-table a lighter color and more massive appearance.

Cement Cellar Floors. No matter what kind of foundation walls are used, the floor of the up-to-date basement or cellar is of concrete. The construction is very similar to that for cement sidewalks. No sub-foundation is, however, necessary as a general thing. Level and pack the earth surface and lay down 5 inches of concrete. Float smooth, giving all sections a slight slope toward some common drain point. When the concrete has become slightly hardened, apply a half-inch top dressing of neat cement, or a rich cement mortar. This dressing should be rounded up in the corners and made continuous with the side wall finish.

To provide for cleaning water, or for any other moisture that may get in at any time, a

tile drain leading outside the basement wall should be provided.

Securing Dry Cellars. In localities where a porous or sandy soil exists to the depth of six or more feet, cellars are usually dry without the use of any preventative to dampness; but where compact soil exists, usually about 80 per cent of all present cellars are more or less subject to dampness, as few have been waterproofed. That concrete, like brick and stone, is a conductor of dampness is known; but that it is more readily adapted to waterproofing only those experienced in waterproofing walls below the grade line have appreciated.

Physicians have long realized that a large amount of sickness is caused by damp cellars, but as waterproofing does not add to the appearance while adding to the cost, it is usually omitted, though medical bills more than make up this additional cost in a few years.

In the illustration, Fig. 5, it must be remembered that the piping shown is for drainage only, and no provisions are shown for sewerage plumbing, which will require separate piping and should never be connected to the drainage sewer nearer to the building than beyond the last trap shown.

A monolithic concrete wall below grade is the cheapest and strongest; and when waterproofed on the outside and on the top with the offset shown, with any positive waterproofing, it will insure dry walls. It, however, causes

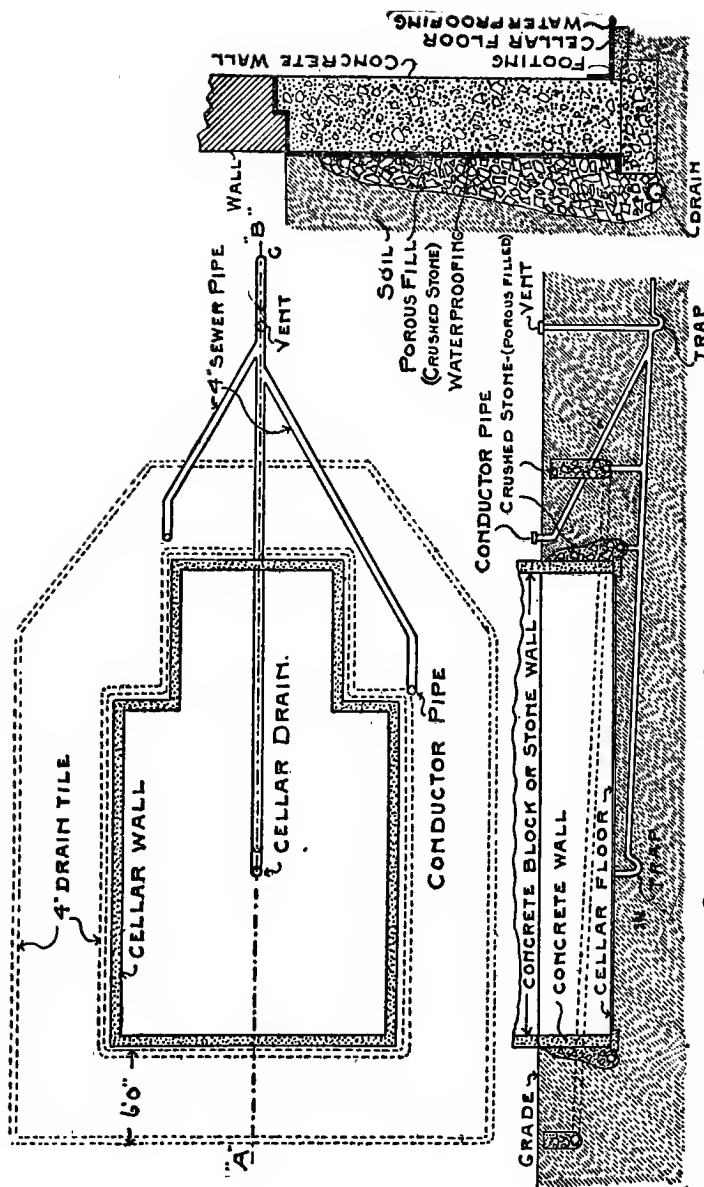


Fig. 5. Waterproofed Cellar with Drainage Piping.

water to remain on the outside, which is also injurious to health; and nothing but proper drainage will overcome this evil.

Perhaps the best method of securing the necessary drainage consists in loosely placing crushed rock against the wall, with a four- or six-inch porous drain tile, joints not cemented, placed in the bottom of the trench. The drain tile must have no less than one foot fall or drop in twenty feet. The size of the drain tile depends upon the length of wall, and four-inch is sufficient for buildings less than sixty feet long.

In localities where clay soil or hardpan is found, it is necessary to place another drain six feet from the building wall, which is placed in a trench of sufficient depth to be free from frost; this drain is also covered with crushed stone or brickbats, allowing space to cover with soil of sufficient depth to insure proper nourishment for the lawn. There are numerous materials that can be used for the porous fill, crushed sandstone or brickbats being perhaps the best; but gravel or coarse cinders are acceptable.

In no instance should any part of the drain nearest the wall be above the cellar floor level, but it may be much lower, the outside or lawn drain depth being governed by frost depth.

The cellar and conductor drains should be made of socket sewer-pipe well cemented at the joints, and have a trap at every opening on the inside of the building, and one trap after

all connecting drains have been entered into the outlet; and this trap must have a vent-pipe to prevent the formation of noxious gases. Some contend that the conductor pipe having an iron pipe from the grade to the eaves of the roof, makes the best vent possible; but drains connected with street sewers often carry gases from the sewers when the traps are not water-sealed, in which event the conductor would be an outlet for such gases.

Waterproof Cellar near a Stream. It is frequently necessary to build a cement cellar close to a stream where water is liable to seep in

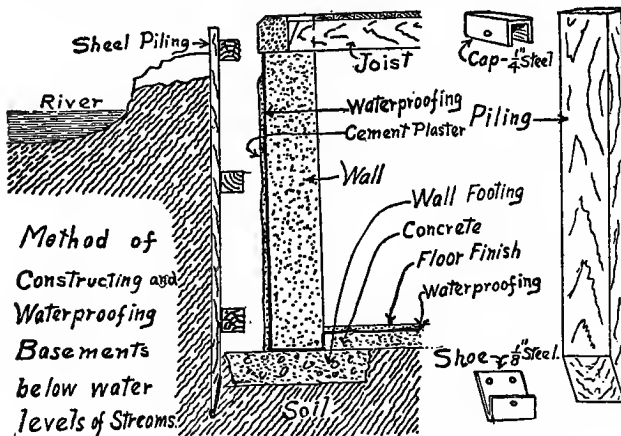


Fig. 6. Waterproofing Cellars below Water Level.

from the bed to the bottom of the cellar when the water rises during the spring freshet. Waterproofing for basements so located must be strong and well made, as it must **resist pressure**. A good method is to apply the water-

proofing on the outside of the wall, covering same with cement plaster as shown in Fig. 6. On the bottom apply the waterproofing on the concrete body, and cover with the half-inch cement finish (wearing coat). Care must be taken to cover the entire surface to make it absolutely water-tight. On old walls and floors, the waterproofing must be applied on the interior.

The use of sheet piling made of wood, with a sheet-steel shoe for each plank, and a driving cap of sheet steel as shown, saves labor, time, and cost on even the smallest job requiring cribbing; but on large work, sheet-steel piling should be used.

When it is necessary to operate a continuous pump, the footing concrete should be mixed and placed dry; thus it may be placed when the trench is filled with water.

HOUSE FRAMING

After this preliminary work has been done and the foundation walls erected, the real work of framing for the carpenter begins. There are in general use at the present time two distinct types of framing, known respectively as **braced framing** and **balloon framing**. The first is the older and stronger method, and is favored, especially in the Eastern States, for the more expensive houses. The latter has come into much favor during the past fifty years, is

decidedly cheaper than the other, and is entirely satisfactory for most residence work.

Balloon Framing. Since the "balloon" system of framing is now most in use, it will be chiefly considered here, with some references to and comparisons with braced framing, as opportunity offers. It may be said in passing, however, that in a full braced frame all the pieces are fastened together with mortise-and-tenon joints; but this is modified in actual practice, spiked joints and corner braces being used.

Sill Construction. The sill is that part of the side walls of a house that rests horizontally immediately upon the foundation or underpinning, to which it should be securely fastened.

In former times it was required that sills should be of squared, solid timbers of good size, 6 by 8 or at the least 6 by 6 inches. In connection with the other economies introduced with balloon framing, however, several types of **box sills** have come into use, and are thoroughly satisfactory if laid on a good wall foundation. They will not do on posts or piling.

Box Sills. As is always the case where rules governing construction and design are yet in a changing and unsettled state, so-called box sills of various kinds have been used under houses—not altogether satisfactorily. In some cases the studs are set on top of sill or wall-plate, and the floor-joist spiked to the studs, so that when floor is laid out to studs it leaves an opening the height of joist and width of studding from

underneath the building up between siding or sheathing and plaster, thereby allowing rats, mice, and cold air free access.

Some carpenters try to remedy this by blocking in between the studs, which, if well done, will answer the purpose of closing the opening; but another objection still remains.

The sills, joists, studs, and other rough lumber, are generally right from the saw, and, upon seasoning, will shrink from $\frac{3}{4}$ to 1 inch to the

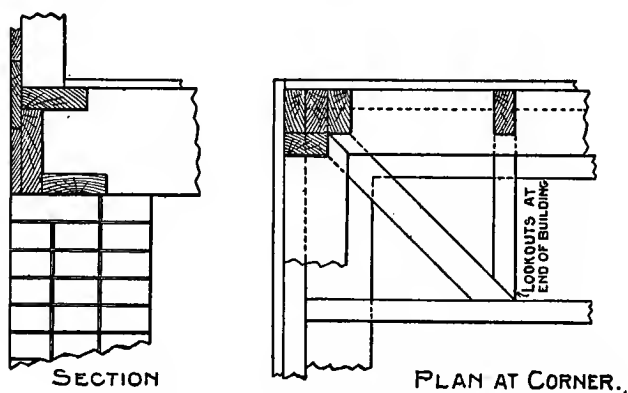


Fig. 7. Box Sill Construction.

foot in width, while the shrinkage in length is scarcely perceptible. So the joists are on top of sill and nailed to studs, and floor laid out to studs, and base fitted close to the floor and nailed to the studs. This looks all right, and would be if it stayed so; but in a few months the joist will shrink and take the floor down with it, leaving the base nailed to the studs, and a crack from $\frac{1}{2}$ to $\frac{3}{4}$ inch under the base.

A much better plan is shown in Fig. 7. Lay a 2 by 8 on foundation wall flatwise, and size the ends of floor-joist on top to receive a 2 by 6 around the entire building, and set studs on this directly over joist. Then, when floor is laid, it will lap 2 inches on the 2 by 6 if 2 by 4 stud is used, or 1 inch if 2 by 5 stud is used, thereby effectively stopping all openings

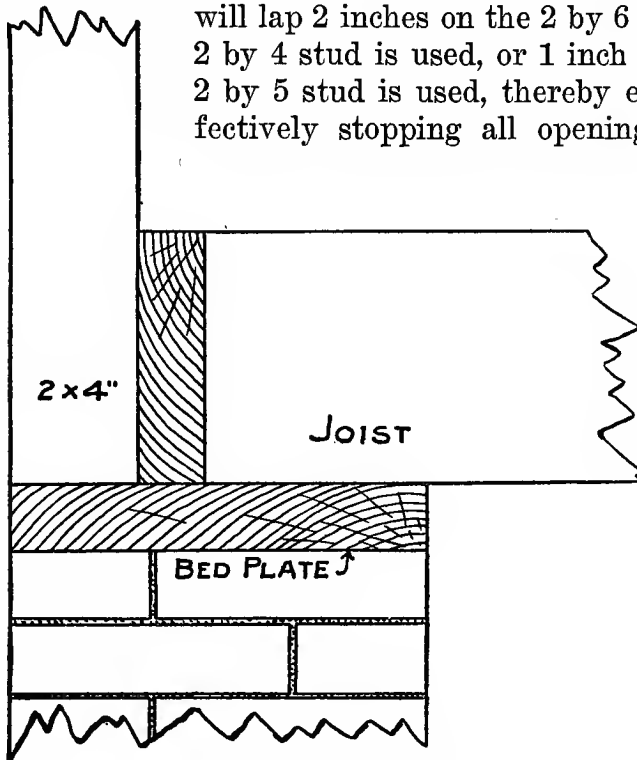


Fig. 8. Box Sill Construction.

for draughts of vermin. But this is not all; when the floor-joists shrink, the studs go down with them, thus keeping base, floors, doors, etc., in their original position relative to one another.

In case posts are used instead of solid wall, it is then necessary to use a sill instead of wall-plate, and joist should be gained down level with top of sill. With a box sill or built-up sill of any kind for a post foundation, too much dependence is placed on the nails; and in a climate like ours, and especially in oak tim-

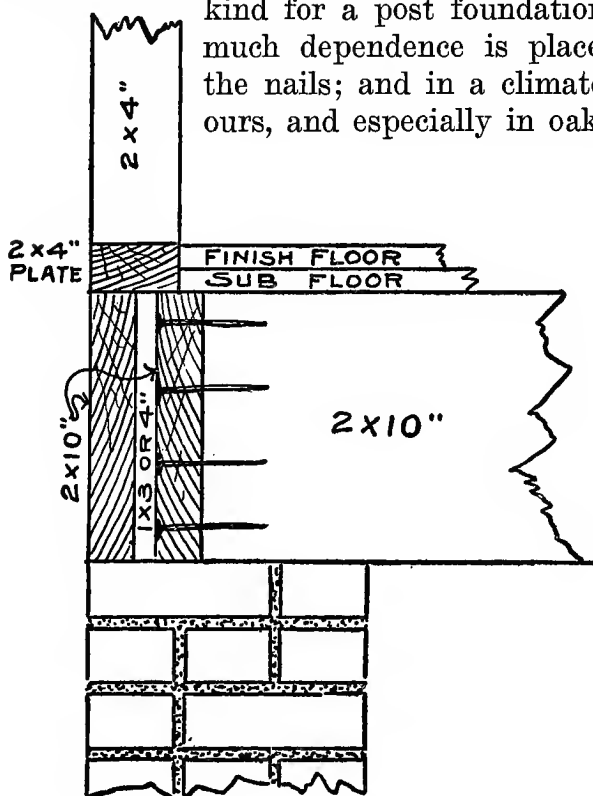


Fig. 9. A Built-Up Sill.

ber, the nails, in the course of a few years, become very weak and brittle from rust.

Another box sill that is claimed to be strong, warm, and "rat-proof" is shown in Fig. 8.

First there is a wall-plate or bed-plate, say of 2 by 8 inches, and an upright the same width as joist, thus allowing the studding to rest on the bed-plate and be spiked to the upright.

With a sill made this way, you get the full strength of the studding; there is less work cutting same; and it is easier

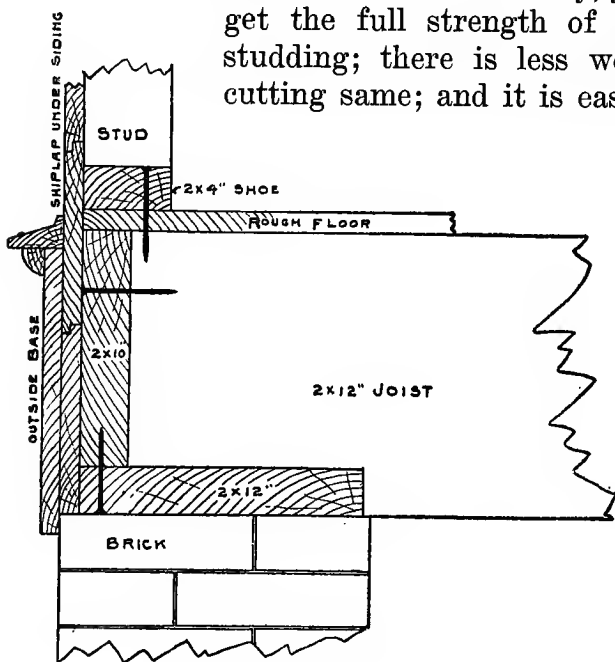


Fig. 10. Box Sill Construction.

to lay the floor, as there is no studding to cut around.

A **built-up sill** that has a number of good points is illustrated in Fig. 9. This construction makes a very strong sill for a solid wall foundation, and makes the walls perfectly rat-proof and also draught-proof. In case of using

a sub-floor, the sill makes a good support for the ends of the sub-floor.

A box sill of still another type is detailed in Fig. 10. With it the building rests on a twelve-inch bearing on the foundation wall. You will notice that the top piece is not put on until the under rough diagonal floor is laid; then the shoe on top of the rough floor is put in place and spiked down to every joist. This shoe is just the width of the studding, and makes good nailing for the bottom edge of the base after the plaster is on.

Laying Out Joist and Studding. In laying out the framing for a house, there are a number of factors in addition to the straight construction that should be borne in mind and provided for. One of them we wish to take up is in regard to laying out the framing of a house for the convenience of cutting the openings for furnace pipes. Many houses are heated with the warm-air furnace, which makes it necessary for openings to be cut through floors and partitions to accommodate the pipes. Now, when a contractor has a house to build that is to be heated with a furnace, the first thing he should do is to properly locate all the registers on the plans, if they have not been located by the architect. Some architects leave the location of the registers to the furnace contractor, but a competent architect can locate the pipes and outlets for furnace heating to just as good advantage as the furnace contractor, and in making plans the

architect should locate the place for registers and everything pertaining to the heating of the house.

When the carpenter lays out the joists and partitions, he should see that the joists on the

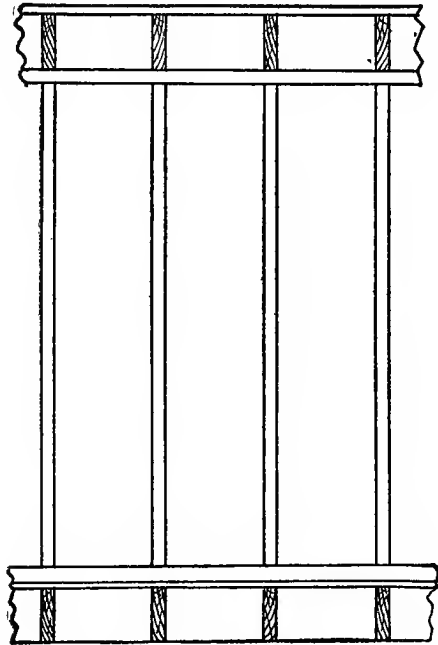


Fig. 11. Proper Arrangement of Joist and Studding.

floor above are directly over the lower ones, and that the studding are directly under the joists and in line with them, as in Fig. 11. When this is done, there is no trouble in cutting the opening for the pipes and registers. On the other hand, if this is not done, and the studding and joists are put in without any regard to

furnace pipes, then the contractor will find his troubles begin to multiply as soon as he begins to cut for the furnace pipes. He will find studing that must be moved; he will find joists that must be moved or cut into and headers put in; all this will consume three or four times as much time as will be required to cut the openings where a little care is exercised in spacing and setting the joists and partitions. The time taken to set the partitions to accommodate the pipes is practically nothing.

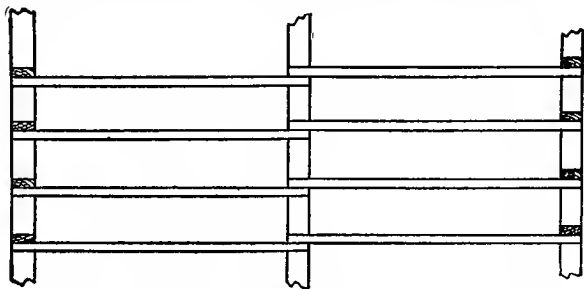


Fig. 12. Proper Arrangement of Joist and Sills.

We have heard a contractor state that he would take a contract for a house heated with hot water or steam for fifty dollars less than he would if heated with a warm-air furnace, because of the immense amount of cutting the furnace work requires. The above statement is not well founded; a contractor with such an opinion surely does not properly lay out the framing of the house, if such has been his experience. If the house has been properly laid out, the cutting for the furnace pipes should not cost

over five dollars. No man should be over one day cutting for furnace pipes in the average residence, and in some cases half this time would be plenty. The way to cut for furnace pipes is to have every pipe located, and to have one man, skilled in this kind of work, do the cutting; then, when he starts to cut, let him keep at it till the job is completed.

It is a great loss of time for a contractor to take men haphazard to do this work, calling a man away from his usual work at various times to cut for the furnace man as he happens to want it. All the cutting should be done at one time, in advance of the furnace man, by someone who understands it. Working here and there, and cutting for furnace pipes by piece-meal, does not pay.

If a contractor has the cutting to do for steam or hot-water heating, he finds that there is no great amount of difference between cutting for steam or hot-water heating and in cutting for the furnace, if some care is taken in setting joists and partitions.

Fig. 12 shows how studding and joists should be laid out on sills and girders where they lap by one another, to keep them in line across the building. The studding on one sill are set the thickness of the studding to one side of the studding on the opposite sill. Then, when the joists are placed, they can be lapped on the girder in the center, and each tier of joists will line up square across the building. How often

we see joists put in lapped on a girder or partition, and scarcely a joist in the entire floor is square with the building. This frequently makes it bad in setting partitions that run parallel with the joists, and sometimes makes extra cutting necessary.

It pays to be a little particular and exact in laying out work. The little extra time it takes is a mere nothing, while its advantages are very great, and are apparent everywhere about a building laid out by a competent man who looks ahead a little in his work. The old saying, "Never cross a bridge till you come to it," may be handy for people to say at times, but be sure the bridge is there when you want it; it saves trouble.

Wall Framing. Fig. 13 may be taken as a typical exterior wall section, sill to plate, in the ordinary cottage or small house. Studs 2 by 4, set about 16 inches on centers, are stood on the wall-plate, to which they are toe-nailed. They are also securely spiked to the floor-joists.

At the ceiling line, a **ribbon or ledger board**, usually 1 by 5, is notched into the studding and nailed, to support the ceiling joist. At the top a 2 by 4 **plate** is applied, which supports the roof rafters through the bearing known as the **seat cut**.

For cottages, the ceiling joists frequently project out and meet the rafter ends, thus making an easily constructed box cornice.

Sheathing. We often hear it said that to

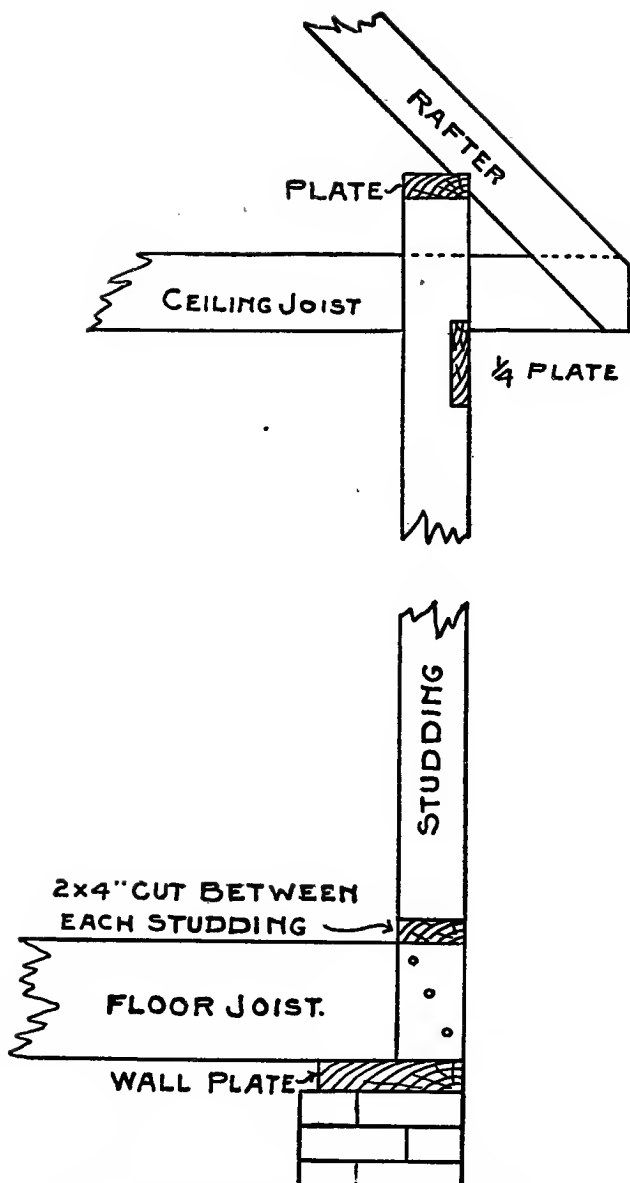


Fig. 13. Wall Construction, Sill to Plate, in Small House.

sheath a house horizontally makes a poor job, while to put the same lumber on diagonally makes a first-class job. Now, we do not condemn diagonal sheathing, for if it's well done it makes a good job, and in some respects is much better than it would have been if put on horizontally.

Some put it on diagonally at each corner until they come to an opening, and then put the rest on horizontally. Some claim that makes a good job, while others claim it makes a very poor one. Now, if bracing the house is what is wanted, this arrangement does it, to some extent at least, though unless the joint is reinforced with a 2 by 4—which is not often done—it makes a weak and bad job where the diagonal and horizontal work come together.

A good way is to make both corners braced, and then come together in the middle the best you can.

Ordinarily the sheathing is applied to the **outside** of the studding; then comes the **building paper**, and then the finish siding. From time to time discussions occur, looking to the reversal of this order, or, in other words, putting the sheathing on the **inside** of the studding. Among the arguments for this is that the sheathing would then furnish a sound and positive backing for the plaster walls. Another argument is that when the sheathing is put on the outside and then the weatherboard, there is some tendency for the moisture to get

in between the two and cause decay; so it was thought better to have the sheathing inside, and the weatherboarding simply as an outside protection on the outside of the studding.

Sound-Proof Walls. Every builder is at some time or other interested more or less in what might be termed **noise-proof** or **sound-proof** walls and floors. It is always desirable to have floors and partition walls as non-productive and as non-conductive of sound as practicable; and there are several different kinds of composition and methods of construction resorted to for this purpose. It is, however, a bigger task than one might think to make an absolutely noise-proof wall. It is said that what is indorsed by Prof. S. I. Franz as the one noise-proof room is a room about 8 feet square and high, on the top floor of the University of Utrecht. Its walls are about 11 inches thick. From the inside, these are made up of successive layers of horse-hair felt, porous stone, dead air, wood partition, ground cork composition, and a plastered surface. The ceiling, though somewhat simpler made, has similar layers. The boards of the floor were sawed, and the joints filled with lead to stop vibration; a layer of lead was then covered over all, to the thickness of more than an inch; and over this, in turn, is used a carpet nearly half an inch in thickness.

This only goes to show to what lengths it is

necessary to go to secure absolutely sound-proof walls.

A method sufficient for all practical purposes, and one that is very often used as a cheap way to deafen the center wall in a double house, so that the occupants of one side cannot hear the other, is shown in Fig. 14. Set a double row of studding, as shown; they are of 2 by 4 inch stuff, set in the usual way, but set staggered, so that the face lines will be 6 inches apart. This will leave a space of 2 inches between the studs and the plastering. Then, on



Fig. 14. An Inexpensive Sound-Proof Wall.

the inner edges of the studs, heavy felt paper or hair insulator quilt should be stretched, and made secure by nailing a lath over the stud, as shown in the section. Two by six-inch plate can be used at the top and bottom. The floors should be deafened, and this can be done very satisfactorily by putting down a rough floor of shiplap, and after all rough work is done, cover this with felt or hair cloth and lay the finished floor. As to back-plastering the wall to deaden the sound, it is not as effective as the above method.

Substitute for Back Plaster. Tar paper

may be used to very good advantage instead of back-plastering a house, provided it is tough enough. The ordinary tar paper, such as is used for covering the sheathing, is generally too soft and is very liable to puncture while the work is being carried on. The accompanying sketch, Fig. 15, shows two ways of doing the work. In the first, by using 32-inch paper and putting it on vertically, it will cover two spaces. All laps should be on solid bearing. Then strip

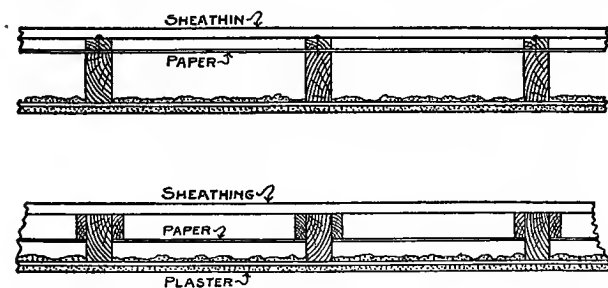


Fig. 15. Wall Sections, Showing Use of Paper Backing.

with $\frac{7}{8}$ -inch pieces, and put on the sheathing, which should also be covered with paper, and sided in the usual way. Or it may be done as shown in the second sketch in the figure. This, however, requires more cutting and fitting of the paper. The former is preferable in many cases, on account of giving a wider fall at window jambs. The object in this construction is to give as nearly a dead-air space as possible. Therefore every part should be made thoroughly tight, or the object sought will be of no avail.

Double, Trussed Partition. In framing the wide door opening and double partition for a large sliding door, the first thing to be considered is the foundation on which to rest the jambs at the sides of the door. If it is not convenient to have a partition under the door, the joist should be doubled, and especially so if the joist above the door rest or break over the same. If there is great weight there, the

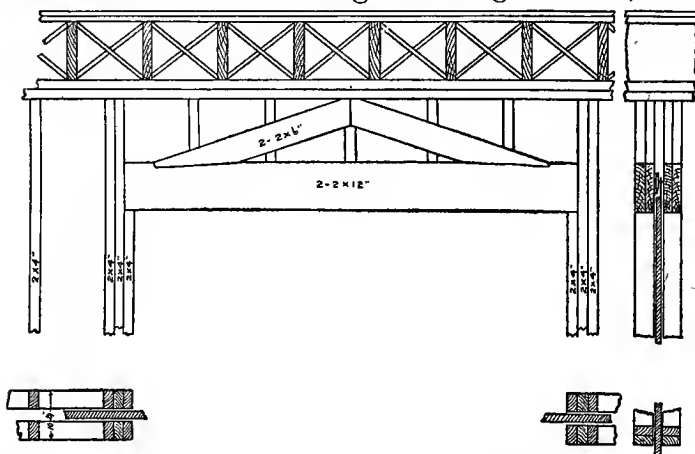


Fig. 16. Double Trussed Partition for Sliding Doors.

joist should be doubled under both partition walls of the sliding door. Fig. 16 shows good construction where the joists run at right angles with the door opening. The truss may be omitted where the joists run parallel to the door; but it is a good idea to put in the double joist at the head of the opening, as it furnishes an excellent bearing on which to fasten the track.

Braced Partitions. Quite recently the writer noted for the second time only, in a somewhat wide experience of construction, a very curious and mistaken way of putting braces in a partition. The carpenter had placed the head and sill in position, and then cut and nailed up all the studs in position before the braces. The latter were cut in between the studs, as shown in Fig. 17 (left sketch); and while they did their duty, perhaps, in preventing to some extent the racking of the partition, yet they were not

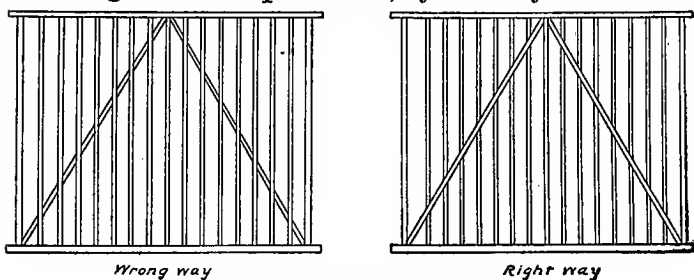


Fig. 17. Bracing a Partition.

nearly so effective as if they had been fitted in first in one piece, and the studs cut in after, as shown in the right-hand sketch in Fig. 17.

By putting the braces in first, not only is their full strength obtained, but the frame of the partition can be properly squared by measuring or testing the diagonals with a rod in the usual way, and adjusting if necessary—an almost impossible thing to do if the studs are all spiked into position first. Numerous small details of this sort mark the difference between the thoughtful craftsman and the bungler.

Such mistakes come from carelessness or lack of knowledge.

Cornice Construction

A good form of cornice that is very popular, especially for cottages, is shown in detail in Fig. 18. It is what is known as a **boxed cornice**.

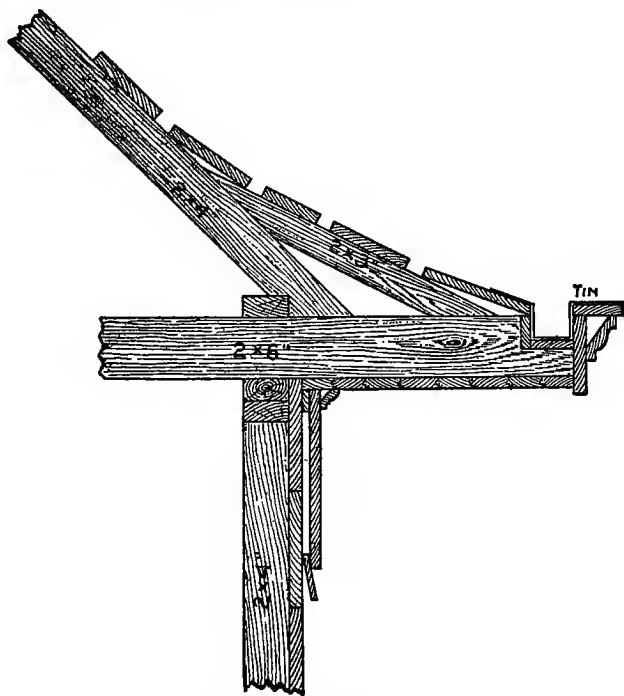


Fig. 18. Cornice Construction.

It represents a very easy method of constructing cornice and gutter where the bottom of the roof is concaved. Many will put on the rafters to form the concave portion of the roof, but

this is not at all necessary. The concave portion can be made much easier and quicker by cutting in 2 by 3 pieces as shown, and placing the sheathing boards so that the center of the boards will break over the joints of the 2 by 3 where it connects with the rafters and lookouts. Then, when the shingles are put on the roof, they will have just as nice a curve as can be made in any way and at much less cost.

It takes much less time to put in these 2 by 3 pieces than to work out the circular pieces, and

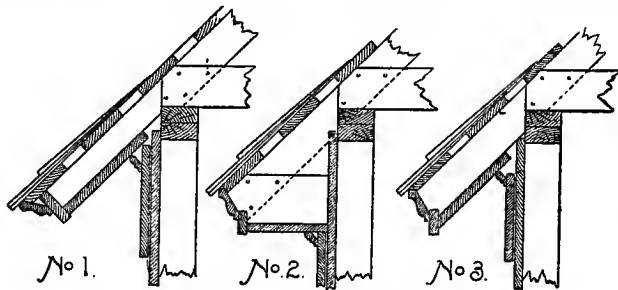


Fig. 19. Cornice Construction.

then the trouble with hips is much less with the straight pieces than it is where hips have to be worked to the circular form. The straight pieces for the hips have to be a little longer than those on the common rafter, but this is very easily found in more ways than one. A little sketch will show it, or it can be figured out mathematically.

Other good cornices are shown in Fig. 19. As illustrated, they are **box cornices**. No. 1 and No. 3 could be used very easily as **open**

cornices—now so popular for bungalow construction—by simply omitting the plancher boards and moulding, the roof sheathing boards at the eaves having been matched and the rafter ends dressed and fashioned as desired.

Where two roofs come together with a valley, it is often a question just how the rafter ends should be cut, square or plumb with the building. If it is a cornice like No. 1, it is proper to cut the ends at the rafters square; but if it is a box cornice like No. 2, then the crown-mould should be set plumb. A cornice like No. 3 will not work well where there are gables, because the crown-mould will not member with that of the gable.

How to Join Members of Cornice. A point that frequently gives trouble is to connect cornice on a frame house where a gable end is flush with the side of the house. This, making the fascia mould member with a like mould on the raking cornice, cannot be done, because the mould on the fascia of the gable is resting on a plumb backing, while that on the raking cornice is at right angles to the pitch of the roof. Consequently, they cannot directly member without making a return connecting the two, as in Fig. 20. This can be very small, just enough to fill the inverted V-shaped gap, where the top edge of the two are on a line, or it may be got over by letting the gable extend a few inches so as purposely to make the return longer and

thereby destroy what otherwise may seem to be a blunder on the part of the workmen.

There is another point in connection with a roof of this kind that we wish to call attention to, and that is the cut on the plancher of the gable to member with that of the raking cornice. We have seen carpenters who could readily frame a hip and valley roof, but when they came to make the above cuts, were puzzled to know how to apply the square.

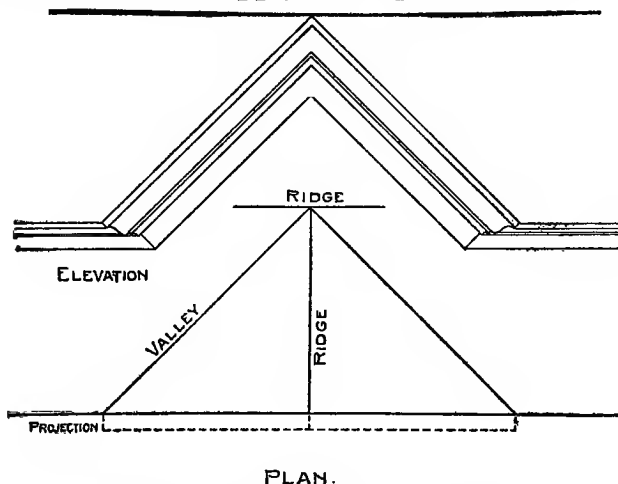


Fig. 20. Gable Flush with Side of House.

The trouble is in this, as in most all other framing problems: they did not stop to think. We make haste sometimes by going slow, and this is one of the times.

Now, let us stop and think. To begin with, the plancher of the gable lies in exactly the same position as the jack rafter. Consequently,

the figures that give the plumb and side cuts of the jack will give the cuts for the plancher, but are reversed; that is, the plumb cut becomes the edge cut, and the side cut becomes the face cut across the board. As for the cuts of the raking plancher, it lies in exactly the same position as the roof board just above it, consequently the same figures that are used for the roof boards will give the cuts for the plancher.

Putting in Show Blocks. Fig. 21 is a sketch showing a way of putting in show blocks in a gable end. The way they are commonly put

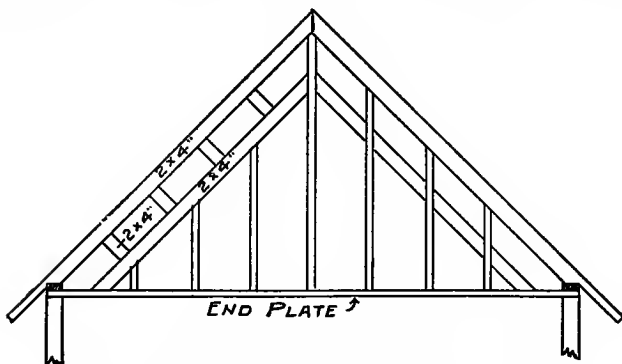


Fig. 21. Two Methods of Putting in Show Blocks.

in is always more or less of an annoyance. In the sketch, both the common and approved ways are shown. In the common way, the blocks are pieces of 2 by 4, cut in between the gable studs, which, if not extremely well nailed, will become loosened in nailing on the siding. In the other way, the blocks are in one continuous piece, fastened in the center to the gable stud just low enough to receive the siding and cornice.

While this plan may be old to some, it may be new to many. It is often some of the simple things that are of much importance.

Framing for Windows

One of the most important parts of house framing is the construction connected with the window openings. This is a comparatively simple matter, yet it should be done with care to insure against leaks. One of the best ways

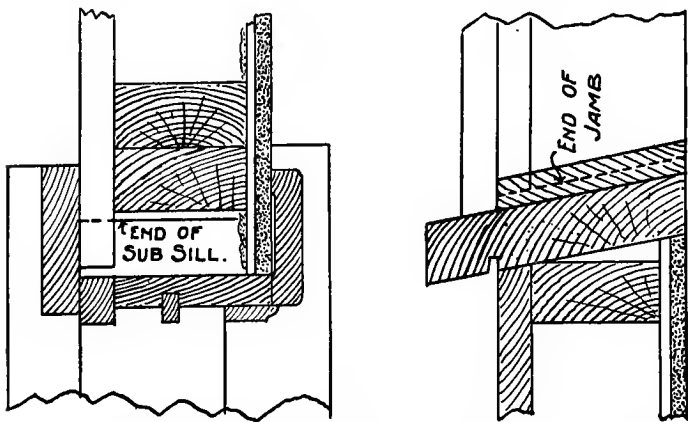


Fig. 22. Simple Window Construction.

to frame to prevent leaks is to gain the jamb into the sub-sill, letting the end of this sill project same as for window sill, and only notch out enough of the back corners to fit nicely in opening for the window as shown by the sectional drawing, Fig. 22. The joints should be set in white lead, and well painted on the outside.

Single-Sash Windows. How to make a window-frame for the attic, or a single-sash frame for any place, which will admit of hanging so that the sash can be opened and at the same time keep out the snow and rain in stormy

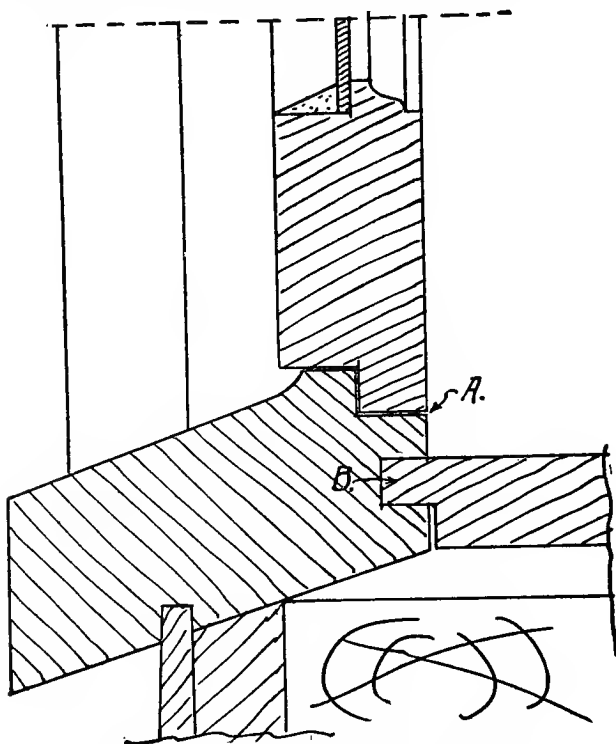


Fig. 23. Framing for Single-Sash Windows.

weather, is a problem that has caused the carpenter more or less study for years.

We have found no better way to accomplish the work than the arrangement shown in Fig. 23.

The sill is made with a lip and then rabbeted, as shown at **A**. The sash is also rabbeted to fit the sill. The sill is plowed at **B**; and the stool rabbeted to fit into the sill. This allows the sash to be hung at the top; and when closed over the rabbeted sill with the lip, it prevents rain and snow from beating in under the sash. If the sash is tightly closed, it is just about storm-proof—so nearly so that not enough rain or snow will get through to do any damage.

With the ordinary window sill, it is impossible to hang a single sash either at the top or on the side, on account of the bevel on the sill; and then the stool is in the way. Our experience has been that almost any attempt to hang a single sash in the frame such as ordinarily made, results in a very unsatisfactory job. If the window happens to be in some place much exposed, it will be found to be a great annoyance on account of leaks.

A frame constructed with the sill and sash rabbeted as shown in the sketch is as near storm-proof as it is possible to get and have the sash hung so that it can be opened readily.

Outward-Opening Casements. Fig. 24 illustrates the construction of an ordinary casement window opening out. The construction is quite simple, and is of the type commonly used in well-constructed frame buildings of the medium class.

The wall is constructed of 2 by 4-inch studs placed 16 inches on centers and doubled about

sides, head, and sill of each window opening.

The exterior of the wall is covered with matched sheathing boards, laid diagonally or horizontally, preferably the former way, and well nailed to every stud. Over this sheathing is placed a heavy building paper well lapped and tacked, and carried under outside architraves of windows. Over the sheathing paper the shingles, clapboards, or other final enclosing material are placed.

The course of shingles over window-caps and in similar places is given the required cant by means of a cant strip **K**, tacked to the sheathing boards. The shingles at jambs of windows butt against the outside architraves of same, which architraves should, for this reason, be at least one and one-quarter inches thick. The course of shingles under the window-sills are fitted up in a groove on the under side of the sill. Shingles should be well nailed with two galvanized nails to each shingle, and any shingle over six inches should be split.

At the top of the figure is a vertical section taken through the head of the window. The head of the frame is rebated, and extends from the outside architrave to the trim. The window-cap is flashed with tin as shown, extending up under shingles about 6 inches. Copper is usually used for this flashing in the better class of cottages.

The trim is worked out of $\frac{7}{8}$ -inch material, is blocked at the back (**B**), and has a $\frac{7}{8}$ -inch

back-band. The back-band has a feathered edge at **A**, which is planed off to fit the uneven-

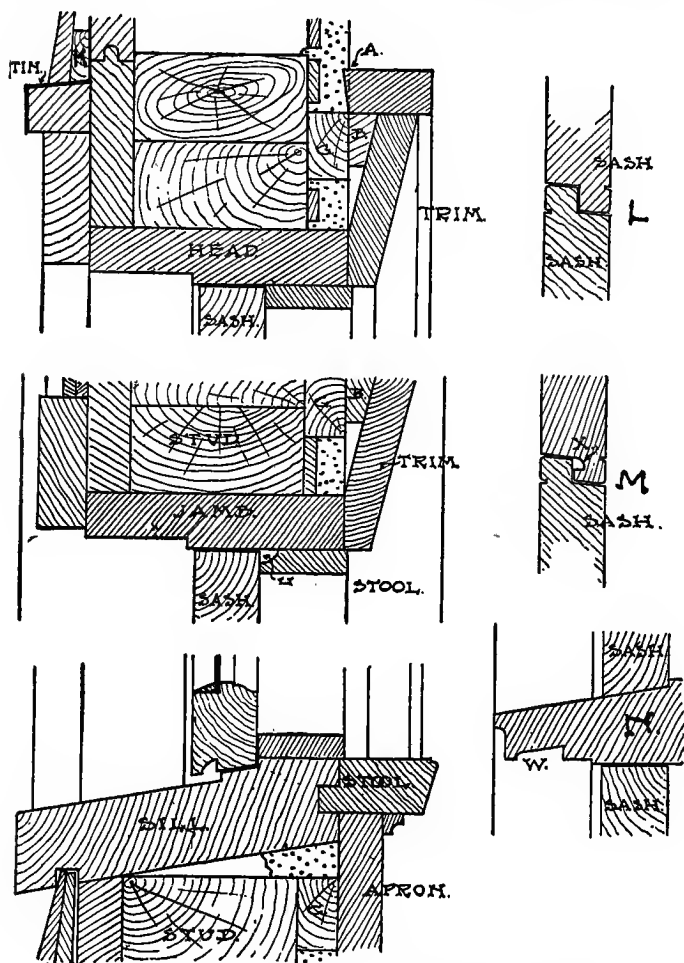


Fig. 24. Framing for Outward-Opening Casements.

ness of the plaster. Frequently a small mould is provided in the angle formed by the inter-

section of the back-band with the plaster; and in such cases the feathered edge is omitted, as the small wall mould is pliable enough to fit the uneven surface of the plaster. Grounds (**G**) are set about all openings to give a nailing for the trim. The plastering between the grounds and the window-frame should never be omitted, as it makes the window wind-proof.

In the central part of the figure is a horizontal section taken through the jamb of the window, and shows it rebated the same as the head. The inside stop bead is hollowed at **H** to form a channel down which any water that may beat in between sash and jamb will pass. The water passes out through a similar channel in the sill. The stop beads should be secured in place by means of round-head brass screws and countersunk brass sockets, which will permit of adjusting the stop beads one way or the other by loosening the screw a little. These screws should, of course, be set equidistant.

Below is a vertical section taken through the sill of the window, which shows it rebated for sash and plowed for stool. Stool is moulded and should have returned ends. Bed-mould and apron should also have returned ends. Sash is grooved on the under side for a drip. Glass should be bedded in putty, sprigged, and back-puttied. Where plate glass is used, wood beads should be used to hold the glass in position, and putty should be used as a bed for the glass.

Where it is desired to have sashes light in appearance—that is, using as little wood as possible—the stiles and rails are worked in cherry or other hardwood.

L is a section showing the construction of the meeting stiles of casements opening in two leaves. The joint is rebated one-half inch, and edges are beaded as shown.

A somewhat better form of construction is shown at **M**, which shows the sashes rebated and beaded as above described, but with an additional groove at **X** which serves as a conductor for any water that may beat in at the joint, discharging it on the sill outside of the sash.

N is a section showing the construction of a transom bar. A water nose is formed on the projecting part of bar by cutting a hollow, as at **W**.

Another outward-opening casement window is illustrated in detail in Fig. 25, showing one of the best methods of making the frame and sashes, and incidentally showing how the outside architrave may be omitted, which feature is frequently considered desirable from the standpoint of appearance.

The frame wall is constructed in the usual manner of 2 by 4-inch studs, placed 16 inches on centers, and doubled for jambs, heads, and sills of openings. The studs are covered on the outside with matched sheathing boards, heavy building paper, and shingles. The inside of the wall is wood-lathed and plastered. Plaster,

than one and three-eighths inches, so that the shingles or other exterior wall covering may butt against it. This manner of allowing the frame to project to take the shingles, does away with the necessity for an outside architrave. This is considered a desirable feature when it is important that as little wood as possible shall show about the window. The head of the window is made water-tight by flashing with tin or copper in the manner shown. The flashing is carried up behind shingles at least 4 inches, and down over top of frame, so that the metal projects sufficiently to form a drip, which prevents water from trickling down under head of frame. In the better class of work the joints of the shingles with the jambs are also flashed in the manner shown.

After the frame is set, the spaces about the frame should be made weather-proof by calking with oakum and plastering over, or by filling up the interstices with plastering mortar.

The sashes are rebated, and are fitted with wood beads for holding the glass in place, instead of using putty. The glass, however, is bedded in putty before the wood beads are affixed. A drip moulding is let into the lower rail of sash to catch any water drippings and prevent them from beating in under the sash.

Jambs of frame have a groove cut in the rebate as shown at **A**. This groove catches any water which may beat in between sash and jamb, and conveys it downward, as indicated by the

dotted lines, and discharges it on the sill as indicated by the arrow.

At the top of the figure is a vertical section taken through the head of the window. The cant strip shown is required over the head to give the first course of shingles the proper tilt. The trim is of $1\frac{5}{8}$ by 5-inch moulded and hollow-backed material, mitered at angles, put together with slip tongues, and glued. A small wall mould follows about all trim.

The middle part of the figure to the left is a horizontal section taken through the jamb of the window, and shows the trim and inside stop bead finishing on a moulded stool.

Below is a vertical section taken through the sill, which shows the joint of stool with sill put together with a slip tongue and glued. The sill has an undercut into which the shingles are fitted.

B is a horizontal section through the meeting stiles of casements in two leaves. This makes a tight joint, but requires that both leaves be opened and closed together. The crescent-shaped space between the two stiles is required for the play of the sashes when thrown forward, owing to the hinges turning on a center outside the sashes.

C is a vertical section taken through the transom bar. The projecting portion is pitched to throw off water, and the under side is grooved to form a drip. The upper or transom sash is stationary, and joints are put together with

white lead. The inside of the transom bar is moulded to correspond and miter with a portion of the trim.

Inward-Opening Casements. Fig. 26 shows the construction of inward-opening casements in frame walls. The construction is very good for the reason that all precautions are taken to make the window proof against rain and wind.

The sash and frame are rebated at the jambs and sill, and a small mould is tongued into the jambs and head outside of the sash in the manner shown. This mould is undercut so as to form a channel to catch any water which may beat in at the edges of the sash. This water discharges on the sill.

The bottom rail of the sash has a moulded drip let into it, so as to shed any water which may trickle down the outside surface of the sash. The under side of the bottom rail of the sash has an undercut; and directly under it, in the sill, a channel is cut. This channel catches any water which may beat in between the sash and the sill during driving rainstorms, and is discharged on the sill through perforations in the raised lip of the sill, as at **X**. These perforations consist of holes bored and reamed smooth. Three are usually provided for a window of ordinary width.

The frame and sash are constructed and set so as to form a reveal on the inside of the window; and when this is required, care should be exercised to allow ample space for window

shades between the inside surface of the sash, when open, and the jamb lining. To secure this

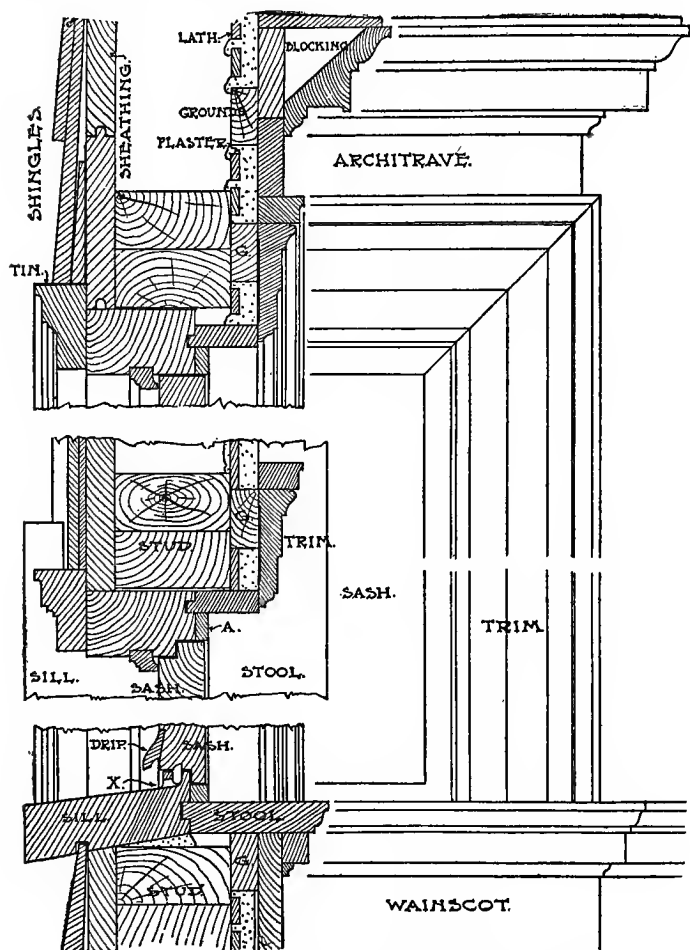


Fig. 26. Framing for Inward-Opening Casements.

space, it is usually necessary to thicken the jamb of the frame and provide the filling piece **A**.

Shades for inward-opening casements are usually placed on the sashes, and the filling piece should be of a slightly greater width than the thickness of the shade when rolled up. The shade can, of course, be placed on the jamb of the window above the sashes; but this necessitates rolling the shade up entirely whenever the windows are to be opened.

Storm sash, blinds, or insect screens may be hung on the outside casing of the window; but, if required, the sill should be rebated for them. The outside casing is moulded, and mitered at angles, and at the head is flashed with tin, copper, or other suitable sheet metal carried up about six inches behind the shingles. The sill is grooved on the under side for the shingles, and on the inner edge for the inside stool.

The wall is constructed in the usual manner of studs, sheathed, papered, and shingled on the exterior, and lathed and plastered on the interior. Grounds (**G**) are set wherever necessary for a nailing for the trim, base, wainscot, and other interior finishing woodwork.

The trim is moulded and hollow-backed, and at the angles is put together with slip tongues or dowels, and mitered. A moulded back-band follows about same. It has an architrave head, and the fascia is plain and blocked at the top for the crown-moulding. This moulding may be cut out of one and one-eighth inch stock, or built up of several members. Crown-mouldings,

except where they abut the ceiling, should be capped on top; otherwise they form a lodging place for dust and dirt.

The trim finishes on a stool with moulded edge. This stool, with its bed-moulds, corresponds to the cap of the wainscot, which is shown skirting the room. Walls behind wainscots, base, trim, and other interior finishing woodwork, should be plastered to the floor, but the white coat may be omitted. The jamb and head linings are tongued into the frame.

A simple inward-opening casement is illustrated in Figs. 27 and 28, adapted to the several types of wall construction, masonry, brick veneer, and stud frame.

Many architects think it necessary to rebate their casement sash. One carpenter who has employed this type of casement with all success for twelve years, has found in practice that rebating the sash simply weakens it and adds practically nothing to its tightness against weather. Rebated sash are objectionable because of the difficulty of fitting them accurately and the difficulty of refitting old sash which have, for any reason, ceased to fit properly through shrinkage, swelling, settlement, sag, or slight distortion of the sash.

Casement sash should be strongly made. For good work, sash should be $1\frac{3}{4}$ inches thick, and the sides and top 3 inches wide exclusive of glass rebate; the bottom members should be 1 inch wider, and all made of clear white pine

stock thoroughly tongued and pinned together. There is little danger that sash so made will ever sag. Large-sized butts should be used,

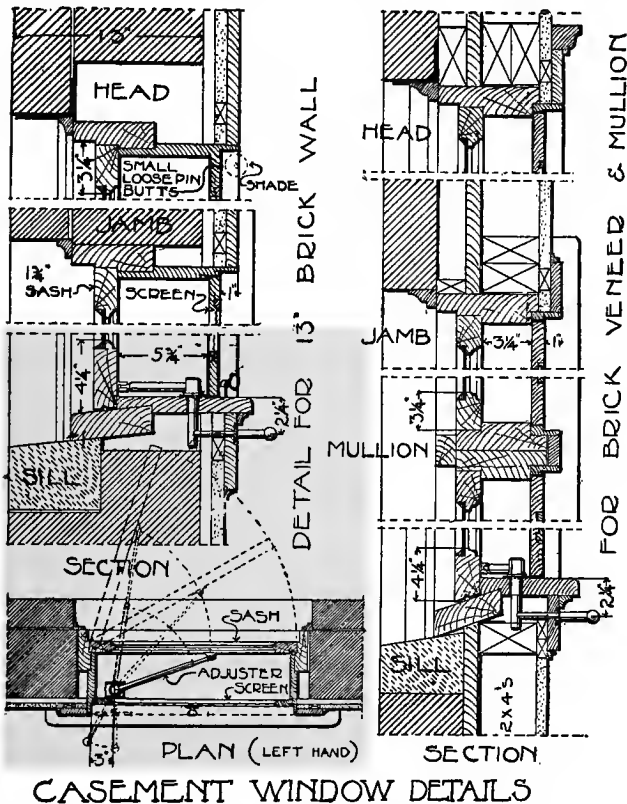


Fig. 27. Framing for Inward-Opening Casements.

preferably 4 by 4, galvanized, with brass pins to insure their always working easily.

Except in the South and in California, casement windows should be equipped with weather strips. If it can be afforded, some good form


of metal weather strip should be used. Both interlocking and friction strips are sufficiently tight.

For the general run of residence work, however the ordinary cheap wood and felt strip answers the purpose very well, making casements tighter than double-hung sash. Wooden strips are not only cheap and easy of application; but they never cause the sash to stick, as is often the case with metal strips if they are sufficiently weather-tight. When the felts are worn out, it costs little to put in new strips. For the better class of buildings, casement frames should be rebated out of solid $1\frac{3}{4}$ -inch stock.

Where each mullion assists in supporting the weight of the floor or wall above—in other words, where this weight is not entirely carried to the sides of a group of casement windows by means of a heavy lintel—at least one 2 by 4 stud should be inserted between the frames of each mullion. First-story casement windows, unless otherwise protected, should be provided with projecting hoods in order that they may be left slightly open for ventilation in warm, rainy weather. The same is true of second-story casements in gables or elsewhere where not protected by the eaves.

The best method of fitting screens and storm sash to casements is to hinge them at the top, fitting them with a small bolt or catch to hold them in position at the bottom so that they will

not be blown in by the wind. Thus fitted, they can be readily opened to give access to the hook or adjuster by which the sash is held open, without interfering with curtains or shades.

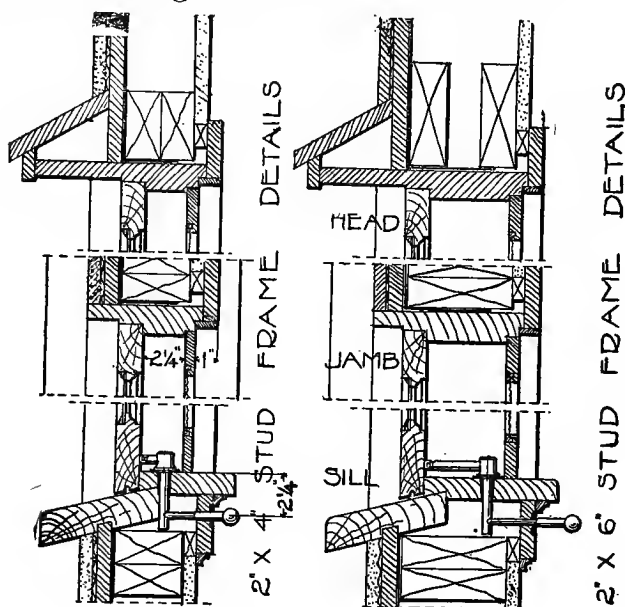

CASEMENT WINDOW DETAILS

HEADS JAMBS & SILLS 1 3/4" STOCK
 SASH 1 3/4" THICK 3 1/4" WIDE OVER ALL
 BOTTOM RAILS 4 1/4" " " "
 SCREENS 7/8" STOCK HUNG AT TOP IN
 SMALL LOOSE PIN BRASS BUTTS

Fig. 28. Framing for Inward-Opening Casements.

The accompanying details all show sufficient space in the jamb-lining next to the screen for window-shade fittings, which are much neater so applied than on the face of the casing. They show the application of one of the new forms

of casement adjuster which operates the sash through a locking plate secured to the apron, doing away with the necessity of opening the screens in order to open, close, or adjust the sash. Several devices which accomplish this have recently been placed on the market, and, although more expensive than the old-fashioned adjusters, they are well worth the extra cost, as to open the screen in order to operate the sash is always more or less of a nuisance. In fact, the bother of doing this has been one of the chief reasons why the building public in the United States has both loath to adopt casement windows, in most parts of the United States insect screens being a necessity. In England, where screens are seldom used and little needed, casements are the universal window.

With the removal of the difficulty involved in the use of screens, it is not improbable that casements will eventually replace largely the old-fashioned double-hung sash for residence work, as most people appreciate their beauty as well as their great superiority as ventilators, particularly during warm weather.

Transom Window-Frame. Fig. 29 shows a detail of a transom window-frame, allowing for a three-inch bar with hinged transom light. This has the appearance of a moulded transom bar. The sash being hung the same as in the ordinary window, it allows it to be lowered at will, leaving no open joints for the wind and rain to get in when closed. It is well-nigh

impossible to construct a transom when hung with butts, and have it weatherproof. In such cases, the most satisfactory way is to hang the sash at the bottom similar to that shown at the right in Fig. 29. This makes a fairly tight job and is simple in construction.

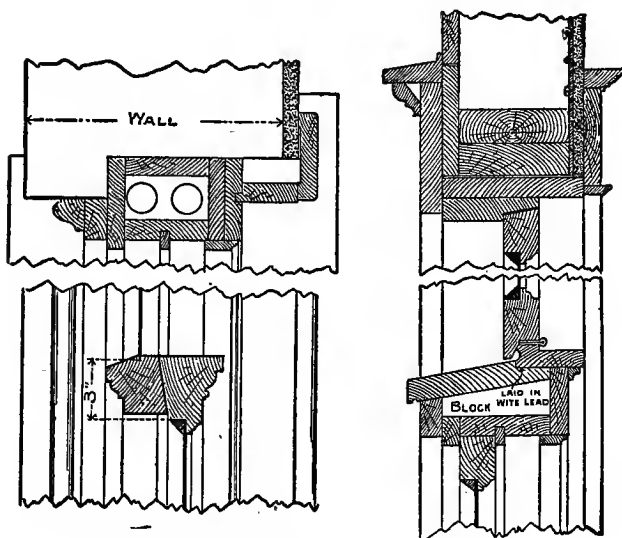


Fig. 29. Framing for Transom Windows.

A Triple Window. A triple window, with two side sash casements, while the center sash is stationary, presents an interesting problem in window framing.

Fig. 30 shows detailed sections through the sills of both the center and side windows. Both the outside sill and the inside stool continue through in line, and should be in one piece;

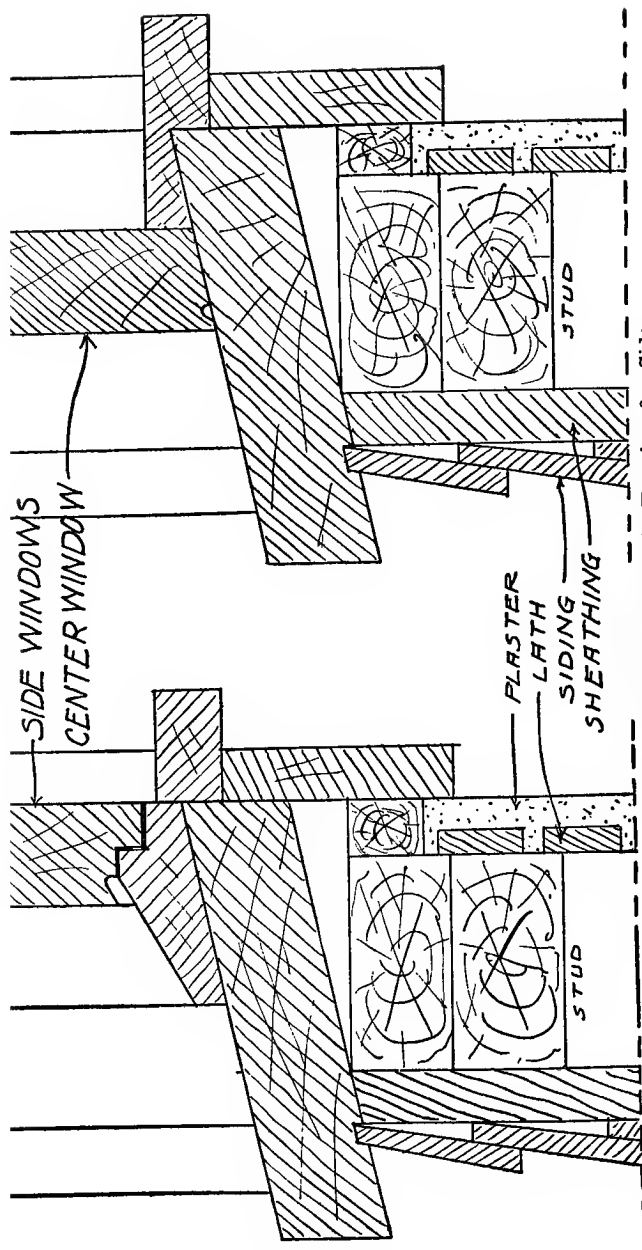


Fig. 30. Triple Window Arrangement—Framing for Side Casements and Center Sash.

and the casements have an additional sill, as shown, which raises the sash sufficiently to clear the stool. The writer has used this method many times in actual practice, and same has always given satisfaction.

Framing for Octagon Bay. Another point in the construction of windows is in **bay windows** of the octagon pattern. Many bay win-

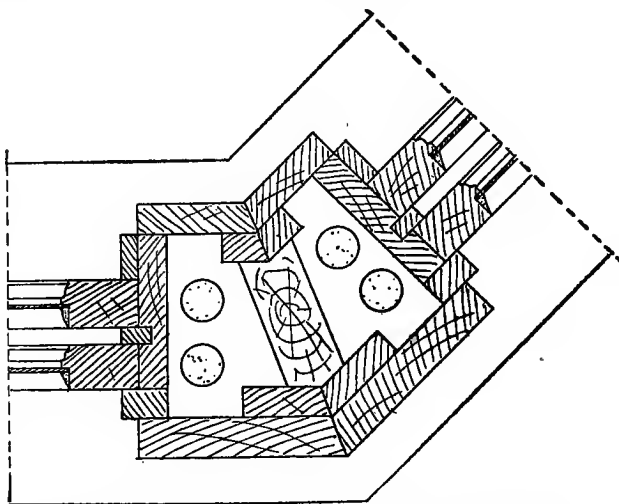


Fig. 31. Construction at Corner, Octagon Bay.

dows are made so that the casings join in the angle. When casings join in this manner, it is necessary to know just how to set the studing, and just the exact width of outside casing necessary to use to make room for the weights, and have it finish up right on the inside.

Referring to Fig. 31, it will be seen that it requires an outside casing at least 7 inches wide

to get the frame in; and then the studding must be set directly in the center of the angle. Wherever the frames join as in this case, it is best to set a 2 by 4 stud in the angle as shown. It prevents the frames from drawing apart in the miter. The sketch shows that 7 inches is the least width of casing that will do; and this would leave the inside casing to finish up only about $3\frac{1}{2}$ inches in width. The outside casings should be 8 inches wide; then the inside casing would finish up about $4\frac{1}{2}$ inches, which is a better width to make the finish.

It is much better to leave a space of six to eight inches or more between the windows when this can be done, and put on siding with mitered corners. It makes a nicer looking job, and is easier to finish on the inside, when each frame is independent of the other. Care should be taken in setting frames for a bay window, to get them evenly divided and all set to the same height exactly, so that in spacing up the siding there will be no difficulty in coming out right.

A Simple Window Ventilator. Among the several theories as to the proper method of ventilating rooms where numbers of persons may be congregated at one time, there is one detail upon which the advocates of the several systems are agreed—namely, that the supply of fresh air should be admitted above the heads of the occupants of the room. This applies equally to warm-air or cold-air inlets; the reason being that the fresh air rapidly mixes with the air in

the room without causing a draught to strike the occupants.

There are many houses, schools, and other premises where regular systems of ventilation will never be installed, but yet which should be supplied with some means of changing the air in their rooms. In the course of his professional

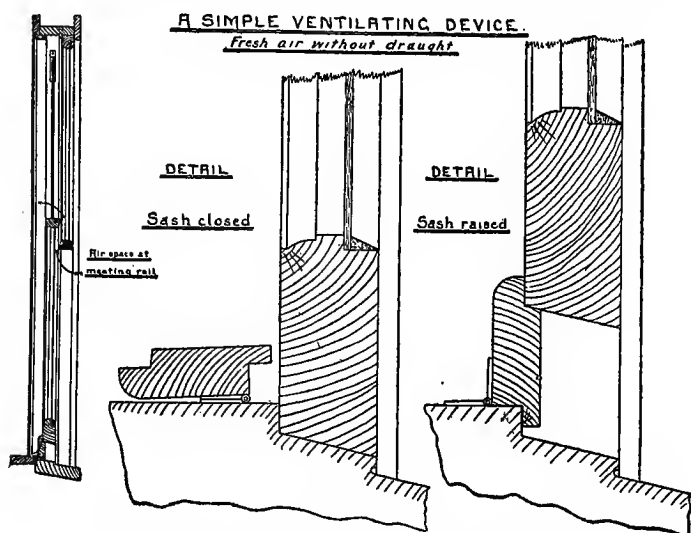


Fig. 32. Arrangement for Window Ventilating.

duties, the writer has been able to meet the needs of many rural and small town schools for some cheap and easy means of ventilation, by a simple device which is illustrated in Fig. 32.

It has, of course, nothing new in the idea, for most writers on ventilation have suggested that a strip of wood could be employed at the bottom of the window-sash, so as to admit air

at the meeting rails. The writer has found it best, however, to hinge the strip to the stop or to the window-board, and also to rabbet it as shown.

When hung in this way, it is always ready at hand, and cannot be taken out and lost. The rabbets are useful in preventing any draught from blowing in upon persons sitting near the windows. The cold air passes in an upward direction between the meeting rails of the upper and lower sash, and, mixing with the warm air of the upper part of the room, comes down to the occupants without making any perceptible draught.

Of course, some outlet for the foul air should be provided; and for this there is nothing better than an open fireplace with a fire burning in it. Where this is not available, an opening should be made into some flue or duct provided for the purpose.

The merits of the device are: First, its cheapness; second, its simplicity; and third, it is always in sight, and therefore its operation cannot be tampered with by ignorant persons.

Window Framing for "Open-Air" Room. How an apartment may be constructed and arranged to give the fresh-air advantages but none of the hardships of the ordinary outdoor sleeping place, is an interesting problem. For most of us—working more or less out of doors—the day-time supply of fresh air is all that it ought to be. It is with the air we breathe at

night that there is often room for improvement. This point has been most emphatically presented during the past three or four years by various eminent physicians, and by societies for the prevention and cure of tuberculosis. It has been proved conclusively that the germs cannot develop or live in the presence of fresh, out-of-

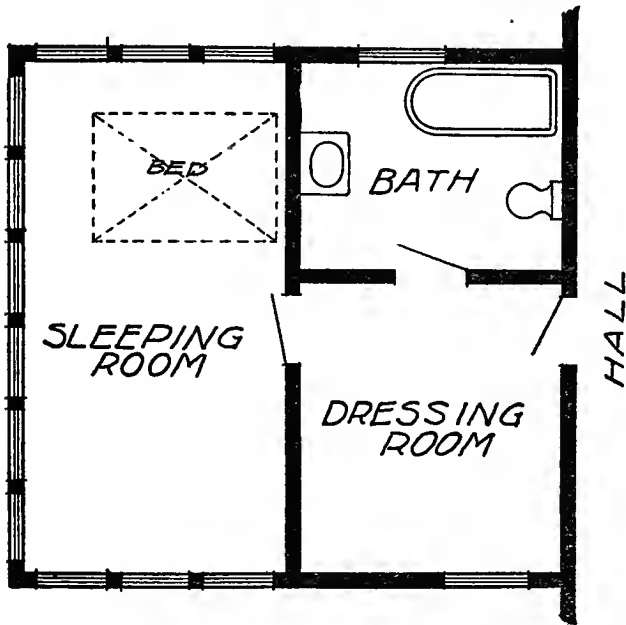


Fig. 33. Plan, Second Floor—"Open-Air" and Adjoining Rooms.

door air; but they do thrive, multiply, and flourish indoors, in unventilated rooms. Stuffy sleeping rooms are their especial romping place.

Fig. 33 shows the plan of a well-designed "open-air" sleeping room. It is on the second floor, open three sides to the weather. The openings, however, are fitted with sash glazed

with tinted ondoyant glass to close when the weather is extremely windy or stormy. Next to the sleeping room, is a dressing room and bathroom, both of which are kept comfortably warm; but the sleeping room has no artificial heat. A person can sleep comfortably in a tent

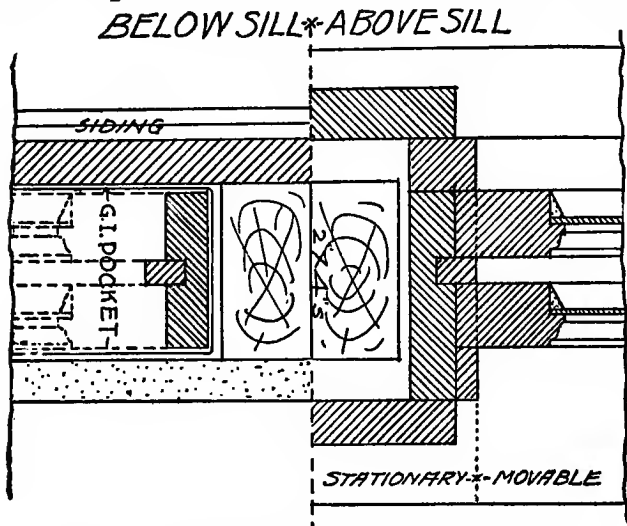


Fig. 34. Detail Window Jambs for "Open-Air" Room.

out on the lawn in winter, but a warm dressing room is not only a great comfort but a necessity.

All the windows have curtains made out of cotton duck, which may be drawn down and buttoned to stud buttons screwed into the casing. In summer the windows are all left open, the only protection being the outside wire fly-screens. On windy nights some of the canvas curtains are lowered and fastened to prevent the wind from blowing in too strongly.

With rooms below on the first floor, great care has to be taken to guard against injury from sudden storms. The windows and floor of the sleeping room are very carefully made for this reason; in fact, you could play a hose on the floor of this room without in any way injuring the room below.

The detail drawings, Figs. 34 and 35, show how the windows are constructed to be perfectly storm-proof and water-tight. The jambs extend down, so that the sash may be lowered into pockets below the floor. These pockets are lined with galvanized iron, made water-tight, and

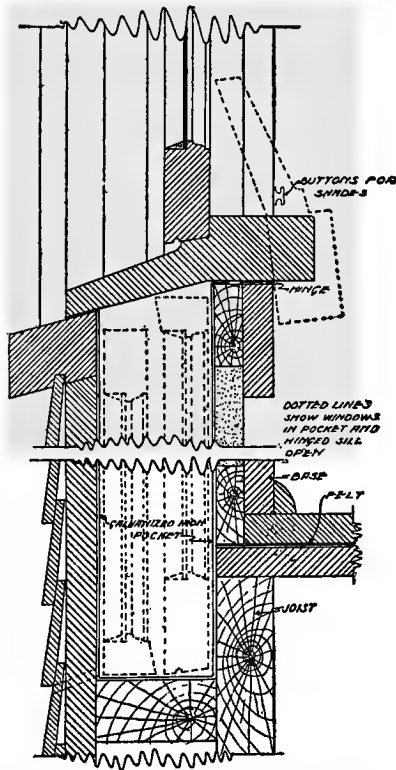


Fig. 35. Storm-Proof Box and Sill.

connected with a gutter outlet. All sash are balanced with heavy coil steel sash springs, so that the sash may be easily raised or lowered. When down, the opening is covered with a hinged cap.

In making the floor for such a room, great care must be taken to have it water-tight. In the first place, a matched pine floor should be nailed to the joists in the usual way. This should then be mopped over with tar, and covered with a layer of tarred felt carefully tacked down along the edges of each sheet. This layer is then mopped over with fresh hot tar, and another layer of tarred felt laid to break the joints, and tacked at the edges. In all this work, provision should be made for a good joint around the outside edge by carrying the tarred felt over the edge of the galvanized-iron lining in the window pockets. On top of this foundation, a solid tongued-and-grooved white oak floor is laid in narrow strips, the groove of each strip filled with white lead before driving it up.

Door Framing

Setting Door Jambs. In building construction, one thing that deserves more attention than it usually gets is setting door jambs, and the fitting and hanging of doors. You have often noticed that doors do not shut securely as they should; that is, they stand in or out at the top or bottom of the door frame, as if the door was in a wind, or in a twist. Of course, carpenters have a handy way of getting out of this trouble by saying the door is in a twist, and that they cannot help it. Sometimes this may be the case; but more often the trouble is in setting the door jambs.

To begin with, good, straight studding should be selected to set next to the door jambs; but how often we find that the poorest studding brought to the job is used in the partitions next to the door. This is owing to the fact that the partitions are the last place where studding is used; and by the time the partitions in the house are to be set, all the good studding has been picked out and used, and nothing is left but the crooked studs.

Scarcely anyone cares to use crooked studding; so he always picks out the straight studs, until at last nothing but the crooked ones remain. This may be used without harm in many places about the building—for example, for short rafters, headers, over and under windows, and for lookouts in the cornice. The contractor should see that they are used in these places, and enough good, straight studding reserved to use around the door openings next to the door jambs.

The trouble with doors being in a twist more often comes from the door jambs being set out of plumb. If crooked studs are used, it is difficult to plumb them up securely, and two-thirds of the carpenters will get the studding more or less in a twist, or, as it is commonly called, **in a wind**. When the man who sets the jambs comes along, he will nearly always set his jambs to conform to the plastering; otherwise the jamb would stick out too far on one side of the door, and not far enough on the other. It is

the edge of the jamb that is mostly neglected and gives the most trouble. Many workmen set the jambs with the wall, regardless of whether they are plumb or not.

In Fig. 36, at **E**, is shown a jamb set with the edge of one jamb out of plumb. Now, this

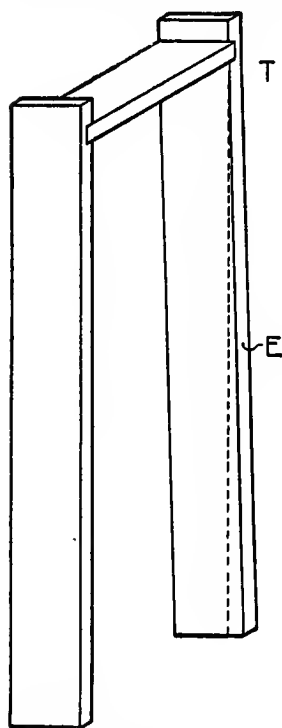


Fig. 36. Door-Frame Jamb Out of Plumb.

is just what is done about six times out of seven, where the doors seem to be in wind. If the jambs were set as shown in the sketch, the door would not close well at the top, but would stand as shown at **T**. The dotted line shows how much this line is out of plumb. In case it is found impossible to get the jambs exactly plumb, do not set the jamb plumb on one side of the door, and the other side out of plumb, as shown in the sketch. Be sure that you have both jambs alike. If one is out of plumb a trifle, be sure the other one is out the same

amount and in the same direction. Then your door will not come in wind, and if the amount is small no one will ever notice it.

Door jambs properly set facilitate hanging

doors, and a man can fit and hang more doors in a day to jambs that are set right. Most doors run one-eighth of an inch wider than the listed size; thus a door listed 2 feet 6 inches wide will in most instances measure 2 feet 6 $\frac{1}{8}$ inches; and it is safe, therefore, to make the jambs one-eighth of an inch wider than the width of the door. It makes a difference in the time of fitting the door when there is considerable to plane off, or if the door is so much wider that it has to be ripped.

Framing for Exterior Door. Fig. 37 shows the construction of an exterior door and frame in a frame house. The studs are doubled about the opening; and grounds (**G**) are set on same for the trim and the door jamb and head. The jamb is of seven-eighths-inch stuff with a moulded stop planted on. Another way of constructing the jamb is to get it out of one-and-one-eighth-inch stuff and rebate it for the door, thus doing away with the applied stop.

The door is veneered on both sides one-eighth inch thick, and on edges five-eighths inch thick, on a core of white pine strips glued together with the grains reversed. The core is frequently tongued and grooved together. Thicker edge veneer is required so as to permit of planing down the edges without exposing the core. In the better class of work, the face and edge veneers are mitered at the angles so as to conceal the end grain of the face veneer.

Panels should be set loose so that expansion

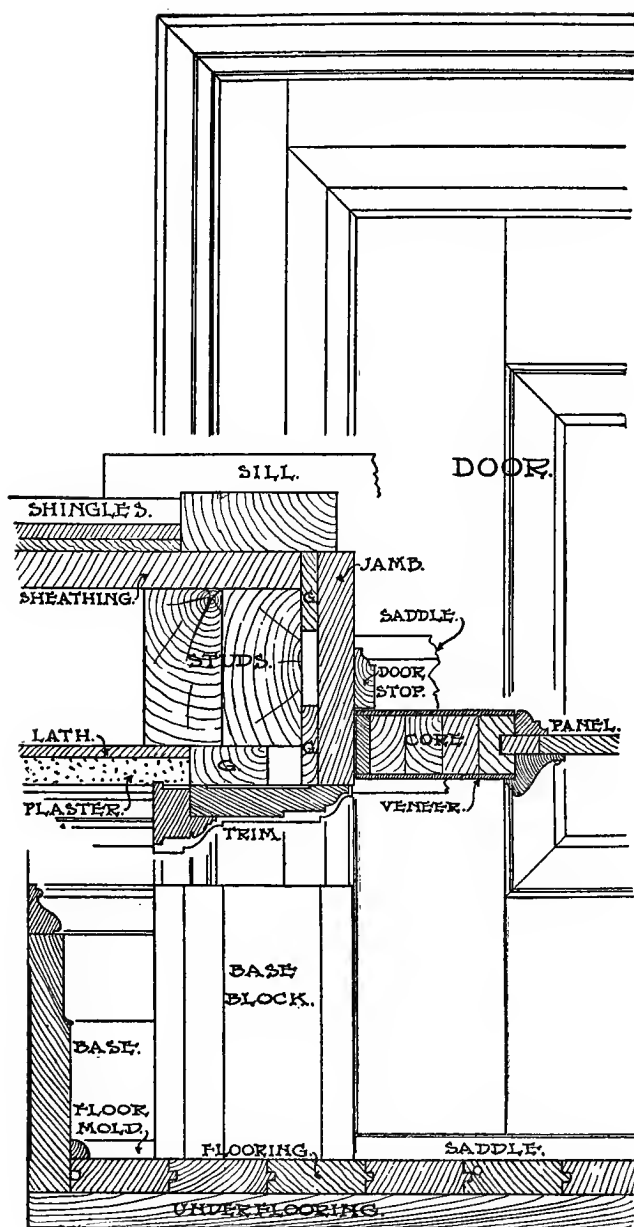


Fig. 37. Framing for Exterior Door.

and contraction will not split them. The mouldings are nailed to the stiles and rails and a pine fillet is set in between them.

The trim is worked out of seven-eighths-inch material, and has a moulded back-band. The little tongue left on back edge of back-band may be planed to fit the unevenness of the plaster.

Hanging Sliding Parlor Doors. There are now many patented hangers for sliding doors on the market, each possessing more or less

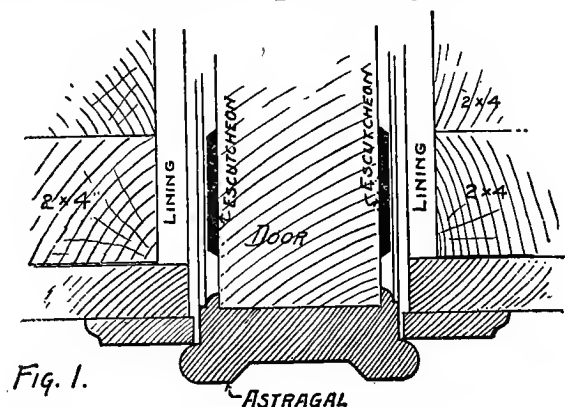


Fig. 1.

Fig. 38. Sliding Doors—Construction at Jamb.

merit. Full directions are furnished with each set. Any average workman should be able to put up the work. The main thing is to see that the partition rests on substantial bearings to prevent settlement, as this will necessarily throw the track out of level and affect the free working of the doors. Be sure to set the studding plumb and properly spaced for the pocket. Never set the studding flatwise with the door.

Never allow a hot-air pipe to run up beside the sliding door, when it is possible to place it in some other partition. Always double the stud-ding at the jambs; and be sure to make proper calculations for the opening so that when the finished work is in place, the full face of the door will show when closed. Be sure to have the woodwork over the opening perfectly rigid. Two well-seasoned joists spiked together and set up edgewise, make a good truss or lintel, and an excellent surface on which to secure the track. The short studs may rest on this lintel, and may be retrussed by cutting in cross-braces, or truss-shaped braces may be put in above the hanger. In this, the workmen should take into consideration the load that is to be carried above, and build accordingly.

In good work, the pockets should be lined with tongued-and-grooved boards, which may be done with thin stuff; but whether this is done or not, be sure to have the pocket openings cut off at the back end so that there will be no connection with other openings in adjoining partitions and outer walls. This should be done for several reasons—first, to heat the house, because these openings will create a draught; then again, if a fire gets started in a partition, these openings furnish an excellent draught to fan the flames.

Another point we might call attention to is the unsightly notching-out of the stops to allow the raised escutcheon to pass into the pocket.

This can be avoided by running a stop around both sides of the door, and membering with the astragal as shown in Fig. 38. The stops on the jambs are set as shown. Thus, it will be seen that the escutcheon is cleared; and that, when the door is shoved back, the astragal will cover the pocket opening, and to all appearance is simply a mould made fast to the jambs. The

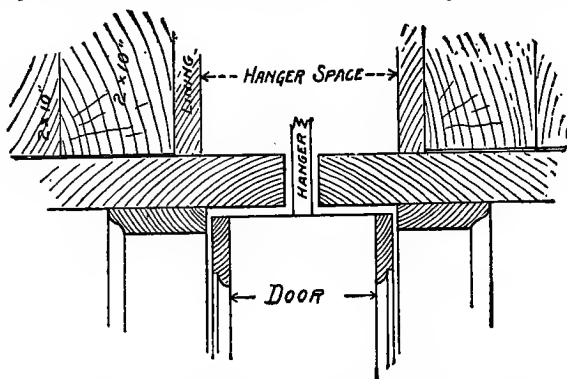


Fig. 39. Sliding Doors—Construction at Head.

head jambs should be set to allow only for the free working of the hanger, as shown in Fig. 39.

Value of Sub-Floors

As far as warmth is concerned, there may not be any necessity for the double floor for houses in warm countries. There are other reasons for double floors besides the heat and cold question. The rough floor is a great convenience to work on during the construction of the building; and in case of a brick, stone, or hollow block building, the rough floor is almost

indispensable. Even if one did do without it, there would be the labor of covering the greater part of the floor space with a temporary floor to work on during the construction of the building.

Then, again, the finish floor cannot be laid in advance, so that it can be used to work on; for if so, it would be spoiled, and unfit to be seen when the building was completed.

If hardwood floors are wanted, such as maple, birch, or oak, the best job can be obtained with the $\frac{3}{8}$ thickness laid over a $\frac{7}{8}$ sub-floor; the $\frac{3}{8}$ flooring is not thick enough for a single floor. Rough floors ought to be laid diagonal, and the finish floor laid across them. The finish floor should never be laid in a building till the plastering is all done and thoroughly dry; in fact, if a nice floor is wanted, it should be the very last part of finishing the building. All the base-boards, casings, and door hanging—in fact, everything should be done before the finish floor is put down. Carpets are not used as much now as formerly, and nice floors are much desired; and these are not possible without the first rough floor to take the wear and tear of the building construction.

If anything like a good building is desired, it is false economy to dispense with the rough floor, no matter what the climate may be; hot or cold, the rough floor has merits that make it worth while to put in. It also adds largely to the strength of a building, both in the floor

and to withstand wind pressure when it is a second-story rough floor.

How to Build a Screened Porch

Details for the enclosure of porches are given in Fig. 40. The question is sometimes asked whether it is best to use a screen made wide enough to cover the height of the porch in one piece, or to have the screens in sections.

The widest screen that is carried on the market is 48 inches; but so wide a screen could not be recommended, as it should be supported

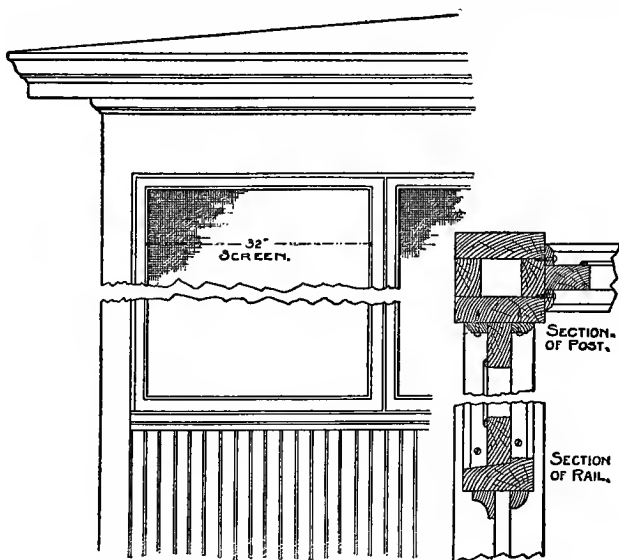


Fig. 40. Construction and Design of a Screened Porch.

with cross-pieces, anyway. We recommend using frames about the size or width required for an ordinary window. Regular stops should

be put on with round-headed screws. The frames can be easily removed in the winter-time; and solid panels made of ceiling can be set in their place, if desired. A few panes of glass set in these panels will give sufficient light, and thus make a very efficient storm-door enclosure. The accompanying sketch shows about as good a way as any for the construction of a porch of this kind.

Constructing a Circular Porch

Fig. 41 shows a method largely used for a number of years, which is probably as good as any other. The central part of the illustration shows the framework of the floor-joists, with a portion of the flooring in position.

There should be supports at **C**, **B**, and **D**. From **C** to **D** is one-quarter of a circle; and this is divided in the center, as at **B**; then the straight lines **C-B** and **B-D** are equal to the sides of an octagon with a circumscribed radius of seven feet and eight inches, which is the width of the framework of the porch; and the length of the sides may be found by the method shown in Fig. 42. By placing the square on a board from which the segment is to be cut, with the figures that give the octagon cuts, and laying off the radius in line with the blade, as shown, describe the arc, and it is ready to cut. The figures shown on the square will give all the cuts required in the framework about the octagon, as the blade will give all the cuts at **B**,

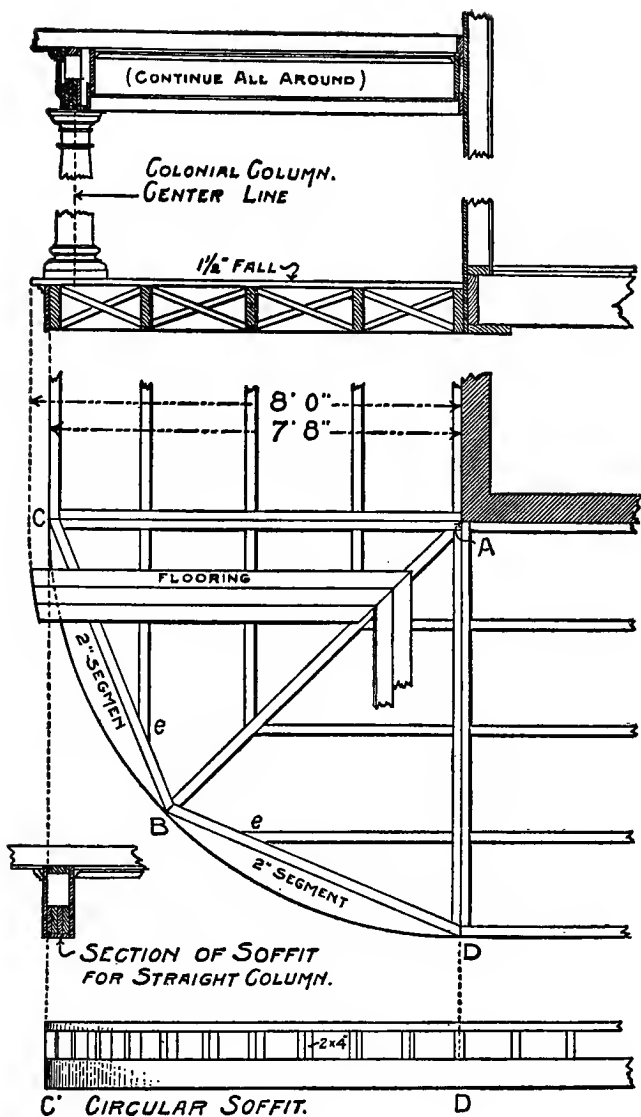


Fig. 41. Framing for Circular Porch.

Fig. 41, also at the other end of the side pieces at **C** and **D**. The tongue will give the cut at **e** and **e**. The other cuts are the square or on the 45-degree angle. Thus it will be seen that all the pieces can be successfully framed with-

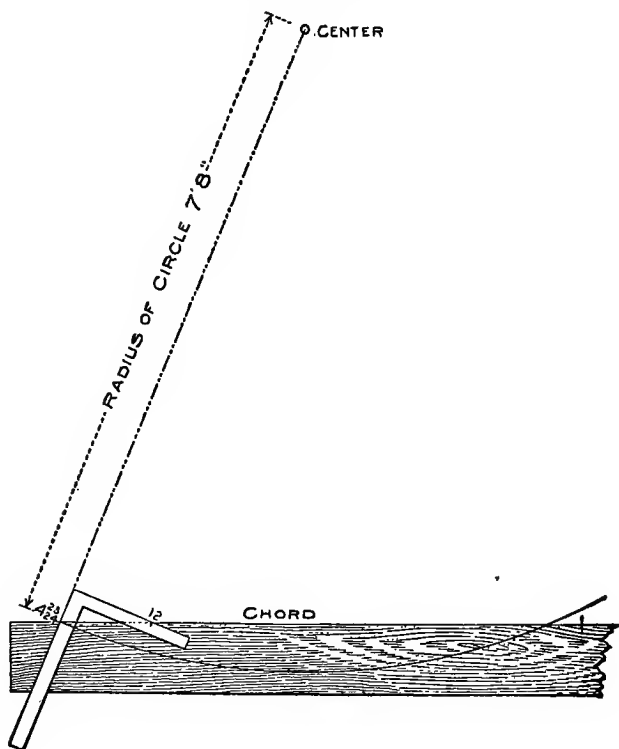


Fig. 42. How to Lay Out Circular Porch Work.

out first building a part of the framework and scribing the other pieces to it, as is the general custom.

There should be four of the segment pieces

got out, setting one flush with the top edge, and one at the lower edge of the joists. The upper ones should be of one and three-fourth inch stuff, same as the joists, while seven-eighths will be sufficient for the lower member. Set blocks between these segments, nailing them well to the joists; also set a few blocks flush with the face of the segments, which makes an excellent form to secure the base.

The ceiling joists are usually put on the narrow way of the porch with an angle piece same as at **A-B**, on which to form the miter joint of the ceiling.

To form the soffit, use seven-eighths by six or eight inch sized boards, and spring them to their proper place just the same as building a circular girder. The first board should be sprung to a form, and the next board well nailed to this one, and so on, till the soffit is the required thickness or strength. It is not always necessary to build to the full width desired, as it can easily be furred out to the required width. The soffit should be continuous—that is, for the straight part, as well as for the circle. Long boards should be used so as to lap well around the circular part, being careful not to break joints on the circular part or at **C** or **D**.

A soffit, if properly built in this way, will not necessarily need a column set at **B**, as it will be self-supporting. If straight columns are used, the outer face of the framework should be flush with the framework below; but if tapered

or colonial columns are to be used, then the center of the soffit should rest over the center of the column, as shown in Fig. 41.

In case a deep frieze is wanted, it may be had by building on top of the soffit girder with

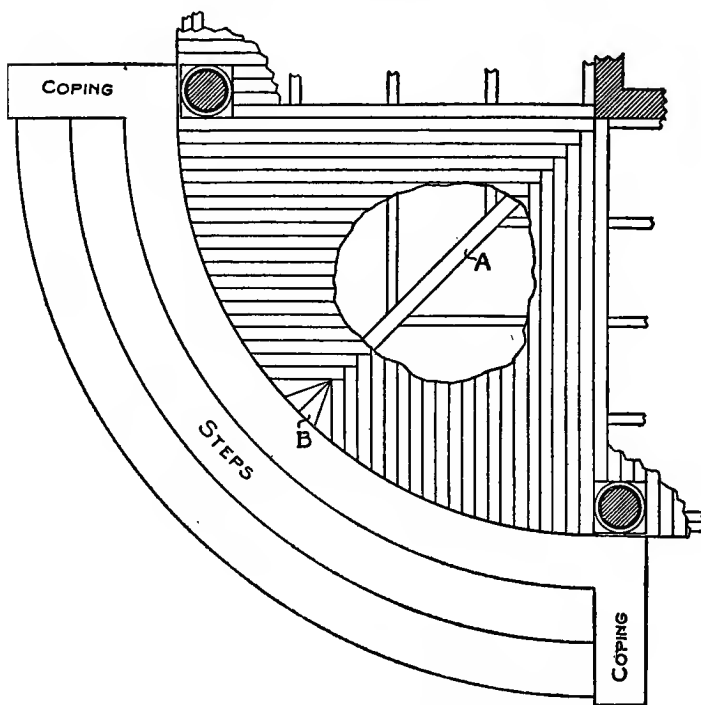


Fig. 43. Floor Construction—Circular Porch.

blocks, and putting a formed plate on these. For all circular mouldings, it is better to have them solid, and they will then always stay in place, as there will be no kerf joints to open up after the work is completed.

Another circular porch is shown in Figs. 43

and 44. It looks better than the mitered seam, is perhaps as good, and is cheaper.

At **A**, Fig. 43, is a 4 by 6-inch timber, which gives a good bearing for the ends of the flooring boards. **B** shows the method of finishing the

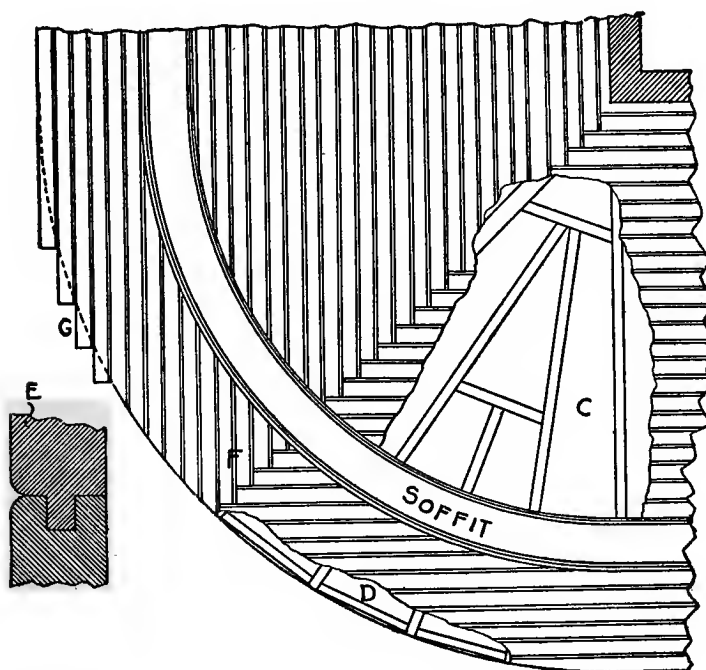


Fig. 44. Ceiling and Roof Framing—Circular Porch.

floor where steps come on the circle.

Opening **C**, in Fig. 44, shows how the heels of the ceiling joists are put in to give support for the heels of the rafters.

F in Fig. 44 shows the method used for put-

ting a ceiling plancher on a quarter-circle porch. **D** shows cripples fitted in between the joists to which the ends of the ceiling boards are nailed. Put the plancher on, and saw to the circle afterwards as shown at **G**.

The ends of the ceiling boards are pared with a gouge to match the boards running the

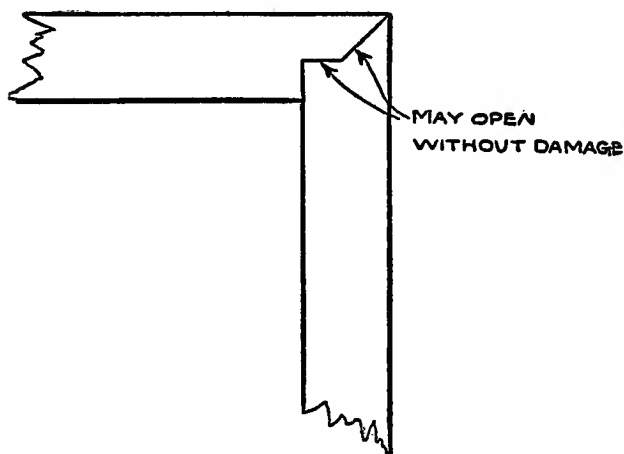


Fig. 45. Miter Joint for Solid Porch Plate.

other way. **E** shows a neat way to make a ceiling.

A good **miter joint** for a porch plate is shown in Fig. 45. It is especially good for the miter in a solid porch plate, or other places where it is desired that the mitered sides shall show and where the edge cut is not exposed. The timbers are often crooked, and this joint will allow for considerable variation from the square.

Framing for a Fireplace

In Fig. 46, two flues are shown, one to extend to the basement floor, and they are for use of stoves in adjoining rooms. When thimbles are put in to make connection with adjoining rooms, the brickwork should be corbeled out to the full thickness of the wood partition, and a long thimble used to extend through the brickwork, being careful not to let the thimble protrude into the flue space. At sketch **A**, another way of widening the brickwork at the thimble is shown, which is simply to cut in a cross-piece between the studding, and on this build the extra brickwork with all joints well filled with mortar. In all cases the thimbles should be set at the time of building the chimney, being careful that all joints are well filled and tuck-pointed on both sides; and in addition to this, it would be well to plaster on the inside of the flue from bottom to top.

In the illustration we have shown an ash-pit beneath the fireplace, where the ashes may be dumped and taken out later. This pit should have a vent into the flue, so that when the ash dump is opened a downward draught will be created which will prevent the ash dust from flying back into the room. For supporting the hearth, use iron bars made of $\frac{1}{2}$ by 2 iron; and on this, lay brick edgewise, leaving a space of three or four inches for concrete on which to lay the tile hearth. The fireplace should be lined

with firebrick, with the upper part of the brick slanted toward the top of the opening, as shown in the cross-section. The arch in front should be supported on a segment made of $\frac{3}{8}$ by 3 inch wrought iron, set back from the front so that

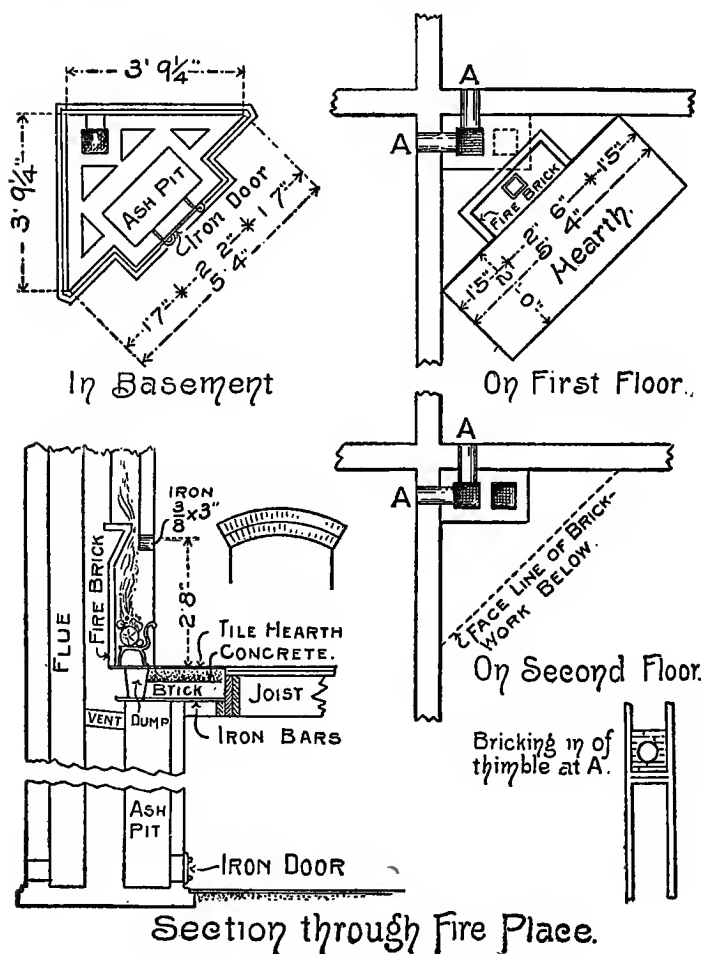


Fig. 46. Arrangement for Fireplace.

it will not show. If a straight-top opening is desired, then use a 3-inch by 3-inch angle iron, with the flange on the inside of the brickwork.

The dotted lines show the position of the flue for the fireplace, and will require the opening or throat to draw over to it; but it should start straight from the fireplace, and gradually draw over to its position as shown. The face of the brickwork should carry up to the ceiling of the first story; and this gives ample space to make the proper bend in the flue. The flues should be independent of other openings.

Cast-iron hoods with damper attachment are quite often used to form the top of open fireplaces, and are set in place at the time of building the chimney. The top should be capped with Portland cement, or with a 3 or 4-inch flat stone with openings cut to fit the flue openings.

Constructing a Cupboard

Fig. 47 is a sketch of a cupboard. It makes a very complete fixture for the kitchen, and is easily made. The flour bin is hung the same as a door, and swings outward as shown by the dotted lines in the plan. It is quarter-circle in shape, the back being made of zinc, with a roll rim at upper edge. A board $1\frac{1}{8}$ inches thick and 16 or 18 inches wide is used for the front and back. The bottom is grooved in about $1\frac{1}{2}$ inches from the bottom ends of these pieces,

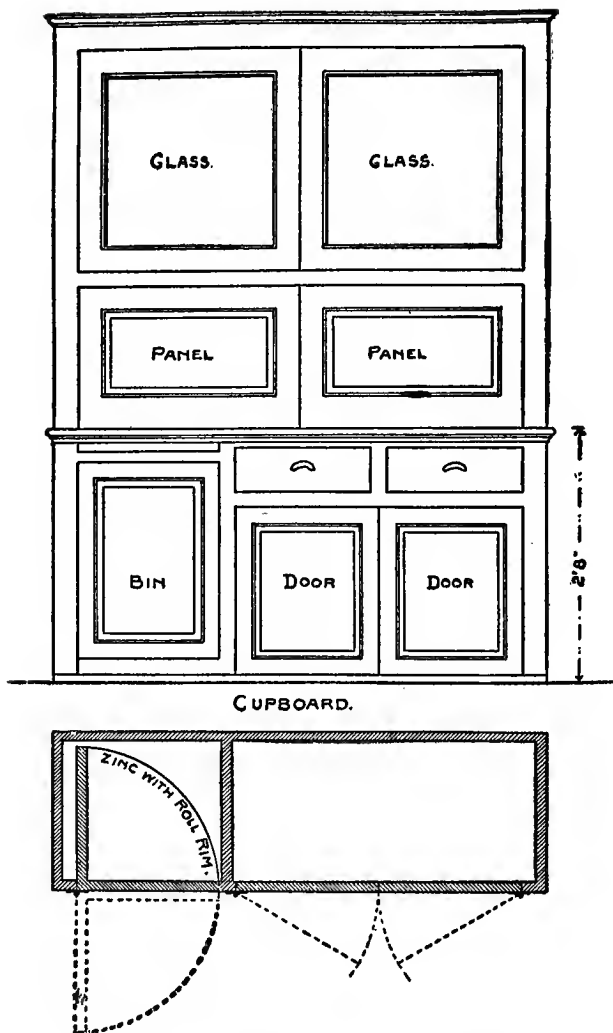


Fig. 47. Design for Kitchen Cupboard.

and gained in about $\frac{5}{8}$ inch deep. The front and back edges are grooved about $\frac{5}{8}$ inch wide

by $\frac{1}{4}$ inch deep, to receive the zinc back, which is made fast by nailing with round-headed tacks. The front may be paneled, as shown in the drawing, if a better finish is desired.

Shingling the Sides of a Building

It is the style in many sections of the country, to shingle the sides of buildings, not only for the smaller class of buildings, but for public buildings as well. See Figs. 48, 49, and 50.

When properly done, it makes a good-looking building, and the cost is generally less than for any other siding material, since wall shingles can be put on with more space exposed than in regular roof work; also a cheaper grade of shingles can be used for this purpose, with good satisfaction. One thousand will cover about 150 square feet of surface; and a man will put on about as many in a day as he can on the ordinary roof in the same length of time. As this kind of work is comparatively new, differing in some respects from roof shingling, it may be that some will be benefited by a few pointers concerning the work.

The building may have corner boards and water-table, though these are generally omitted. It makes a more weatherproof and at the same time a better-looking job, to run the shingles out to the corners. The first course at the bottom should be double. The first or under course furnishes a good place to work in some of the poorer shingles. In shingling the corners,

the shingles on one side should be kept flush with the corner, and those on the other side should be flush with the butts or a little beyond, so that they may be trimmed even by sawing in on the edge and cutting out with a knife.

There are several ways of getting the first course straight; a straight edge can be used by tacking a shingle at each end to hold it in place, and should be used for each course thereafter.

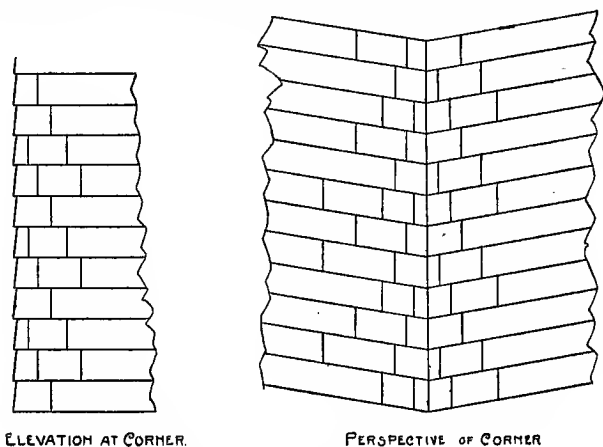


Fig. 48. Shingling a Corner.

The siding boards should be straight and level, and the first course should extend a little below to form a water drip. The courses should come even with the top and bottom of the window-frames, which can be easily done by varying the courses the same as in clapboard siding. It will be necessary to cut the tops of the two last courses under the windows, but the pieces can be used at the tops of the windows, which should

have a rabbeted cap. The shingles should be doubled at the point; one row should be put above the cap, and the other should drop below these. At the corners of the window-frames, it is better to cut out a corner of a few shingles so as to break joints.

When a first-class job is desired, it is better to put the cornice on and cut the shingles to fit under it. For some classes of buildings, it is all right to put the cornice on over the shingles; or, in case the cornice is already on, to drive the shingles up under it.

Do not use too large nails for shingling. If the boards are sound, three-penny nails are large enough.

Paper may be put under the shingles, and in some cases this is the best method; but as so many nails are driven

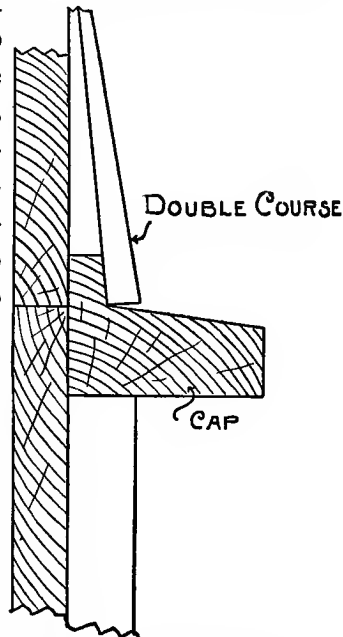


Fig. 49. Shingling Over a Window.

through the paper, it seems better to put it on the inside of the sheathing between the studs.

As to the cost of this method of building, boards for less than \$20.00 per thousand may

be used, which will answer. The shingles at \$4.00 per thousand will come to about two cents

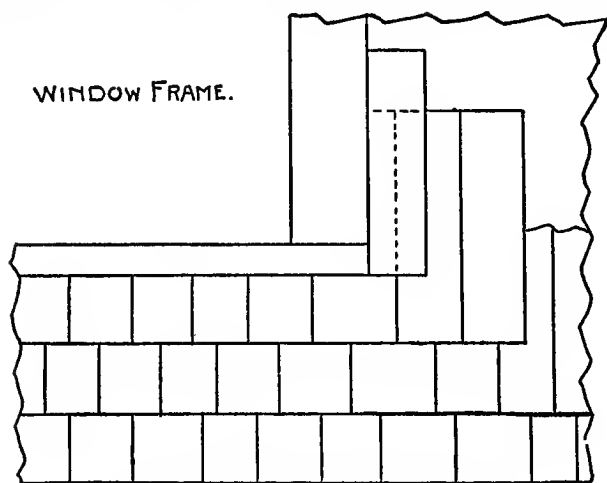


Fig. 50. Shingling Below a Window.

per square foot laid. Plaster will cost about one cent per square foot, so that five cents per square foot will cover the cost.



Roof Framing Simplified

The details of roof construction are comparatively simple, and are pretty generally understood. It is in the laying out of the different members, finding their proper lengths and cuts, that the difficulties of roof framing arise. Owing to the many different styles and pitches of roofs, this is considered a very complicated matter by a great many otherwise good mechanics, who accordingly resort to certain unsatisfactory "cut and try" methods and "rules-o'-thumb" to lay out the work.

The steel square is the carpenter's best assistant for laying out all framing; but it is for roof work that its use is most essential. By the use of the steel square—after a very few of the fundamental principles of roof framing are well understood—the whole subject becomes clear to an astonishing degree.

Roof Pitches and Degrees. Fig. 51 contains a whole volume on roof framing. The fractional pitch lines for the common rafter are shown for each inch in rise up to the full pitch; and their lengths are expressed in decimal figures to the one-hundredth part of an inch; while to the right of the blade, the same are expressed for the corresponding octagon and for the common hip or valley for a square-cornered building,

which are reckoned from 13 and 17 on the tongue respectively. However, neither is absolutely correct, though near enough so far as the

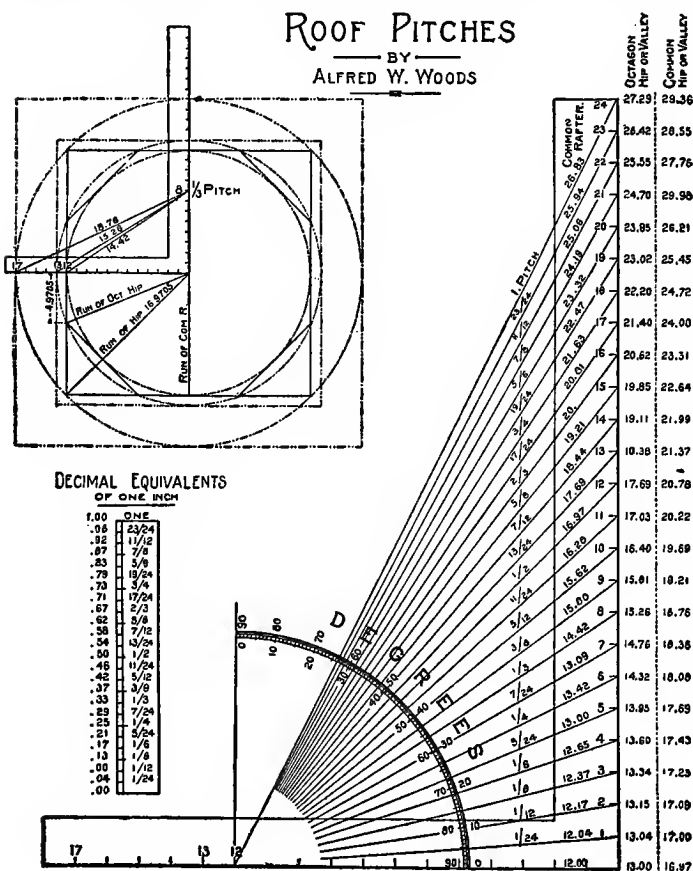


Fig. 51. Roof Pitches and Degrees on the Steel Square.

cuts are concerned, the greater deviation being in the hip for the square-cornered building. It lacks .0295 of being 17 inches, and represents

the run of the hip to a 12-inch run of the common rafter. Its true length being 16.9705 inches, this is the length from which we have reckoned for the lengths of the hips, instead of 17, as is the usual custom. This may seem a trifling difference; and so it is in a short run and low pitches; but suppose it is for iron construction. To begin with, the shortage of each foot in run with the common rafter is .0295 inch; added to this is the gain it would have in the pitch, which would be .015 of an inch by the time it got up to the full pitch for the common rafter. This, added to the .0295 to start with, would be a difference of .0445 inch to the foot in run with the common rafter. Now, suppose the run to be 18 feet; 18 times .0445 equals .8 plus, or $\frac{19}{24}$ of an inch difference; or, if no account were made of the gain in pitch, the .0295 inch in the run would amount to over half an inch in the length of the hip alone.

This is a common error; and while it is not much, and probably would never be noticed in wood construction, it is well to know this discrepancy and guard against it when the occasion demands, and for that reason we give the correct amounts. The shortage in the octagon is not so pronounced. Instead of it being in the run, it is the tangent that is lacking the same amount, it being 4.9705 instead of 5 inches. This, coming as it does, cannot affect the length of the rafter nearly so much as in the above.

We explain this shortage better by referring

to that part of the illustration showing the plan of a combination square and octagon frame with the heel of the steel square resting at the center. From this it will be seen that the two outer circles catch the corners of the frame and seem-

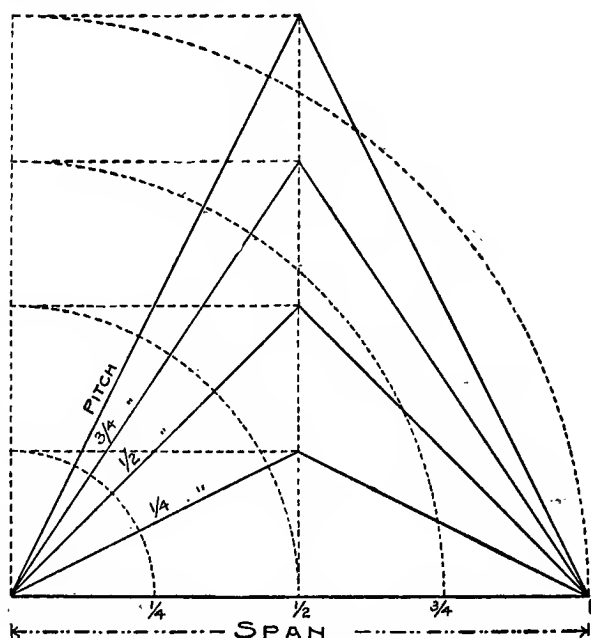


Fig. 52. Roof Pitches.

ingly intersect the tongue at 13 and 17, the figures used on that member for the seat cuts; but the true length of the run of the hip is 16.9705, and that for the tangent of the octagon is 4.9705.

In connection with this illustration we also give a table of decimal equivalents to the one-

twenty-fourth part of an inch, for convenience in finding their values in common fractions.

What Determines the Pitch? This is a simple question; yet there seems to be a wide difference of opinion as to what determines the incline given the roof. Custom has long since settled upon the rise given the roof in proportion to the span; thus, a one-fourth, one-third, one-half, etc., pitch, must have a rise in that proportion to the span. Reckoned on this basis, a full pitch has a rise equal to its span. See Fig. 52. Here the span is divided into several parts. The dotted lines are shown

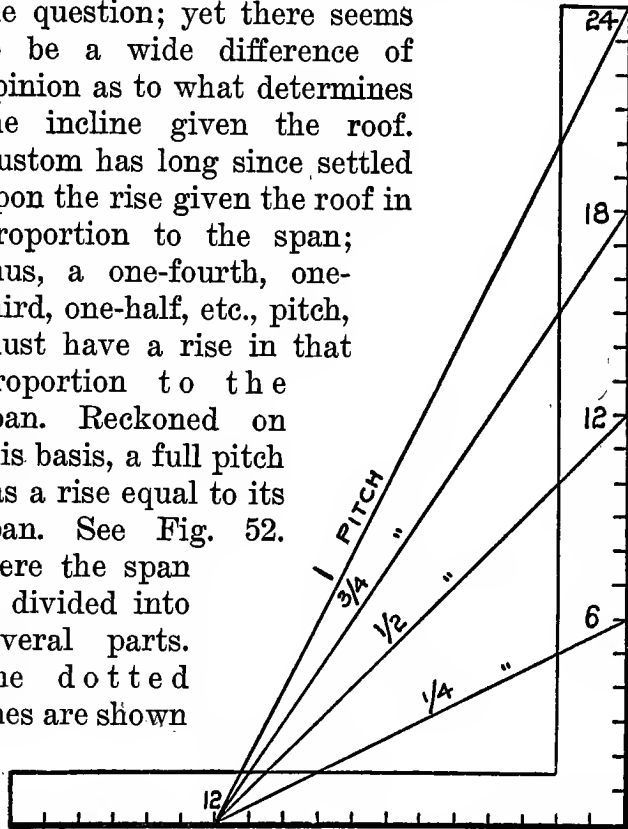


Fig. 53. Roof Pitches on the Steel Square.

in the transferring of these parts to the rise line. In Fig. 53 these parts are shown in connection with the steel square. Twelve is used on the tongue, because it represents a one-foot run.

The span would therefore be two feet, or 24 inches, which is equal to the length of the blade. It is then a very easy matter to fix in the mind what figures to use on the blade for any pitch, as 6 is $\frac{1}{4}$ of 24; 12 is $\frac{1}{2}$; 18 is a $\frac{3}{4}$ pitch, etc. A 24-inch rise would necessarily be a full pitch. A 30-inch rise would be $1\frac{1}{4}$ pitch; and so on.

There seems to be some uncertainty as to which should be given first, the run or the rise, when telling what figures to use on the steel square to find the bevels for rafters. Some give it one way, and some another. The same man will give the run in one place first, and the rise in another. For example, take the one-third pitch. He will say, 12 and 8 for the seat and plumb cuts of the common rafter; then he will say 8 and 17 for the corresponding cuts for the hip or valley.

Now, it has long since been the recognized custom to give the width first for all kinds of mill work, such as doors, sash, etc. The same rule should apply to framing work, because the run represents width or space covered by the rafter, and it should therefore be given first. For the example in question, we should say 12 and 8 for seat and plumb cuts of the common rafter, and 17 and 8 for the corresponding cuts for the hip or valley. It is better to always take the figures 12 and 17 on the tongue, because they are standard for any regular pitch; the blade will admit of from 1 to 24 inch rise per

foot, besides giving a greater range of side cuts without change of figures on the tongue. Then, again, it helps to familiarize the mind as to which member of the square gives the desired cuts.

How to find the cuts for rafters, no matter what the pitch, is a point that gives trouble, yet there is nothing simpler when properly understood. Take, for instance, how to find the cuts for hips, valleys, and jacks when the common rafters are 6 to 12, 7 to 12, 8 to 12, 9 to 12, 10 to 12, etc.

Take the first example, 6 to 12. The formula given applies to all alike, whether it be a six-inch or a fifteen-inch rise to the foot. Fig. 54 will show why certain figures are used on the square to obtain the cuts. Of course other figures can be used, but they must

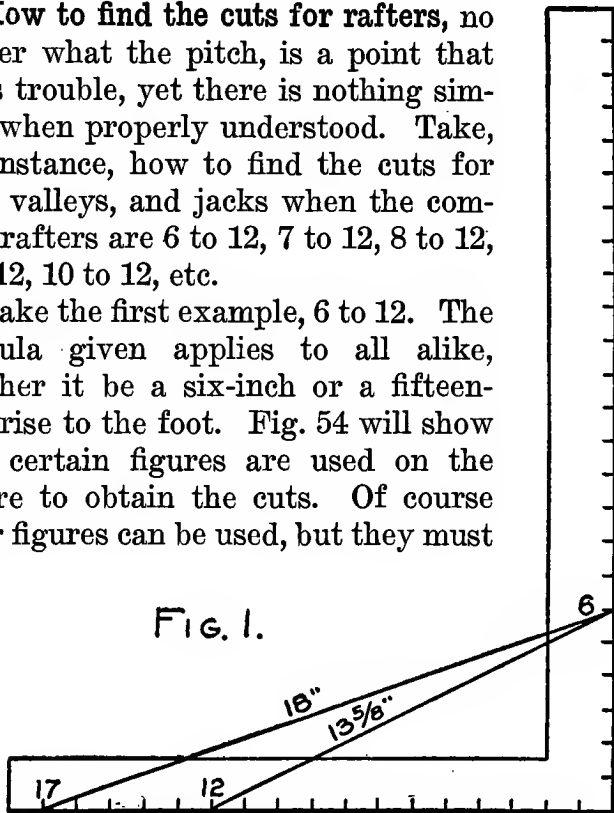


Fig. 54. Lengths and Cut of Common and Hip Rafters.

be in the proportions here given. **Twelve on the tongue** is used because it represents one foot, and **17** because it is the length of the diagonal

of a foot square, and represents the corresponding run of the hip or valley to one foot run of the common rafter. These figures are standard or fixed points for any pitch desired.

Taking the 6-inch rise to the foot, the common rafter is $13\frac{5}{8}$ inches, and the hip or valley 18 inches for a one-foot run. Now, suppose we wish to find the length of the common rafter for a building 22 feet 6 inches wide. Since the run is one-half of this amount (11 feet 3 inches), all that is necessary is to place the square at 12 and 6 along the edge of the rafter eleven times (see Fig. 55); and as there are 3 inches more, lay off that amount from 12 along the

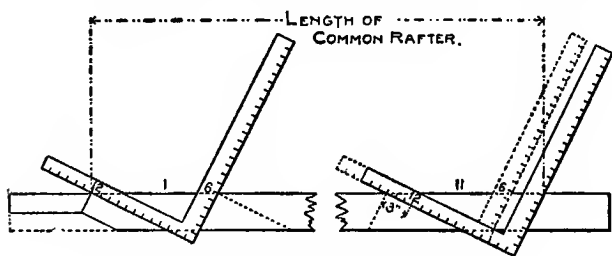


Fig. 55. Getting the Length of Rafters.

tongue and check. Then slide the square along till the 12 rests at the check, and mark along the blade, which will be the proper point for the plumb cut.

Proceed in like manner for the hip or valley, taking 17 and 6; but, at the last placing of the square, instead of measuring off 3 inches, take $4\frac{1}{4}$ inches, which is the length of the diagonal

of a 3-inch square. This may be reckoned as follows: Since 3 inches is one-quarter of 12 inches, one-quarter of 17 inches equals $4\frac{1}{4}$ inches. Thus, the length of the rafters is obtained without any further measurement, and that, too, without knowing their actual length.

The jacks being a part of the common rafters, their lengths may be found in the same way. Or, if they are to set on 16-inch centers, place the square at 12 and 6, as for the common rafter, and mark along the tongue; then slide the square along till 16 rests at the edge of the rafter, and the length will be indicated by that part of the rafter covered by the square, which represents the common difference of the jacks.

However, if one is good in mathematics, it is often better to find the rafter lengths by multiplying the lengths for one foot by the run. Taking the above case: $11\frac{1}{4}$ times $13\frac{5}{8}$ inches equals 12 feet $9\frac{1}{4}$ inches, the length of the common rafter; $1\frac{1}{3}$ times $13\frac{5}{8}$ inches equals 1 foot 6 inches, the common difference of the jacks; and $11\frac{1}{4}$ times 18 inches equals 16 feet $10\frac{1}{2}$ inches, the length for the corresponding hip or valley.

The cuts on the square are as follows: 12 and 6, seat and plumb cut of the common and jack rafters; 17 and 6, seat and plumb cut of the hip or valley; 12 on the tongue and $13\frac{5}{8}$ on the blade will give the side cut of the jack; they also give the face cut across roof boards to fit in the valley or over the hip, the blade giving

the cut in the former and the tongue in the latter. The backing of the hip may also be found by taking 18 on the tongue and 8 on the blade, and the tongue will give the required angle.

For an 8-inch rise, the lines from 12 and 17 (Fig. 54) would run to 8 on the blade, and their

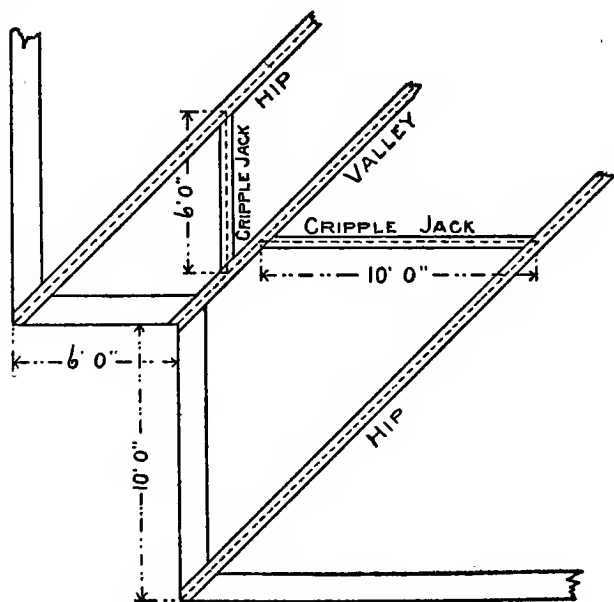


Fig. 56. Cripple Jack Rafters in Place.

lengths would consequently be changed; but the formula remains the same.

To Find the Length of Cripple Jacks. The length and cuts for a cripple jack can be found just the same as for a jack resting against a hip. The cuts of the cripple are the same at

both ends, and are identical with that for the upper end of a jack resting against a hip. Where the roof is all of the same pitch, the runs of the hips and valley will rest parallel with each other, as will be seen in Fig. 56. Now, here is a point that a great many do not grasp—namely, that **the run of the cripple jack is the same as the length of the plates that form the angle.** Thus, in the illustration, the length of the plate on one side is 6 feet, and on the other it is 10 feet, which represent the respective runs of the jacks in question. However, it should be remembered that this measurement is from center to center of hip and valley; and it is therefore necessary to make a deduction in the run equal to the thickness of the hip or valley. Or the length of the cripple may be found for the full run; then measure square back from the plumb cut the full thickness of the hip, which will be at the proper point for the plumb cut.

Framing Plan for Hip-and-Valley Roof.

Fig. 57 is the plan of a common hip-and-valley roof, detailed to show all the different rafters, with their lengths and cuts, that usually enter into its construction. We shall assume it to be 10 inches to the foot. The view taken is from a point directly above. Consequently there is nothing in the plan to show what the rise is. In other words, if there were no pitch given the roof at all, the plan would show just the same, and the side cuts for hips and jacks

would all be at an angle of 45 degrees, and their lengths would be as per the scale of the plan. That is, the first jack being placed 2 feet from the corner, its length would also be 2 feet; and

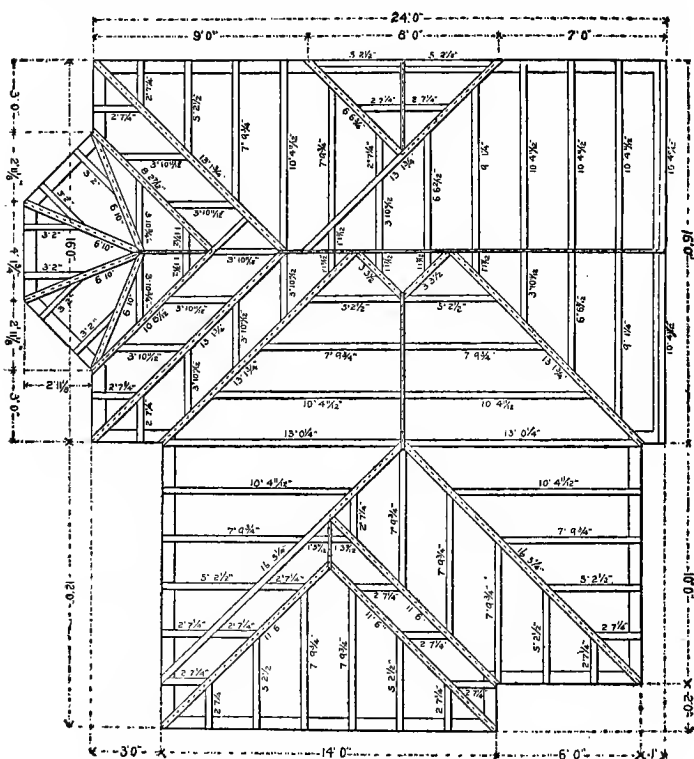


Fig. 57. Framing Plan for Hip-and-Valley Roof

these proportions taken on the square, as 12 and 12, will give what is generally called the *side cut*, but in reality should more properly be called the **top cut**. This, the reader will observe,

is the regular miter, which is simple enough. Everybody understands so far; but when a pitch is given, this simple rule is usually forgotten.

In this example, the rafter, having a rise of 10 inches, has a gain of $7\frac{1}{4}$ inches in two feet; and this, added to its run, makes its length 2 feet $7\frac{1}{4}$ inches. Then the proportion of 2 feet and 2 feet $7\frac{1}{4}$ inches, taken on the square as 12 and $15\frac{7}{12}$ inches, will give the cut. The side on which the larger number is taken, gives the cut. If the point of the jack is removed by cutting on a line parallel to the seat, it will be found that the angle of the cut is still 45 degrees, or just what the angle shows in the plan. The same rule applies for this as for the cut of the hip or valley. It also applies to the jack for an octagon, or any other corner.

In this example there is shown an octagon bay, and the side cut of the jack would be in the proportion of 1 foot and 3 feet 2 inches. The first, because that is the space that the foot of the jack is from the corner; and the latter represents the length of the jack. This jack, like all others, is simply part of a common rafter; reduced to a one-foot basis on the square, it is 5 and $15\frac{7}{12}$ inches.

The lengths of the rafters are given from the edge of the plate to the center lines, as shown by the dotted line on the hips and valleys. Therefore, for the common rafters a reduction should be made for one-half the thickness of the ridge

piece, by measuring square back that amount from the plumb cut.

It is not necessary to make any reduction for the jacks that rest on a plate, because the lengths given, if used for the long side, will make the jacks space all right, since the length is supposed to be taken along a line at the middle of the back. But a reduction equal to the diagonal of the thickness of the hip or valley should be made for the jacks that come in between a hip and valley. This also applies to the side cut of the hip where it rests against the ridge piece, by deducting half of the thickness of the diagonal of the piece. However, this is of small concern; and more than likely the variation, if not made, would go unnoticed.

In this example are shown some self-supporting hips and valleys, formed by letting one run by the other to a solid bearing. This is an important matter, which is too often overlooked; and consequently a sagged roof is the result.

There are other points about this plan that might be brought out. The figures to use on the square for a one-foot basis are as follows:

12 and 10—Seat and plumb cut of the common and jack rafters.

12 and 15 $\frac{7}{12}$ —Side cut of the jack.

5 and 15 $\frac{7}{12}$ —Side cut of the jack.

13 and 10—Seat and plumb cut of octagon hip.

17 and 10—Seat and plumb cut of hip or valley.

17 and 19 $\frac{3}{4}$ —Side cut of hip or valley.

The study of a rafter plan like this is valu-

able, for it contains practically all the elements of any roof.

A Common Mistake. We wish to make a small note right here which may set right some of the younger members of the craft and a few of the older heads who have never paid any attention to it. It is in the manner of adding the projection for cornice. Fig. 58, at the left, shows the wrong way, and makes the rafters too short, causing the ridge joint to open as shown in the middle part of the figure. The right way of getting this length is shown in the right-hand part of the figure.

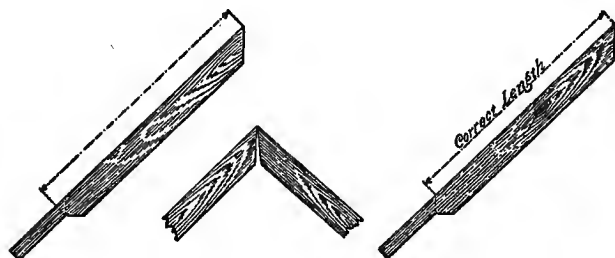


Fig. 58. Wrong and Right Methods of Figuring Rafter Lengths.

Framing for Roof Dormers. Fig. 59 represents the plan and the corresponding elevation of the valleys in a roof dormer or gable. For example, 14 feet is taken for the run of the main roof, and 8 feet for that of the gable. The roof of the main part and that of the gable being of the same pitch, it is evident that the ridge of the latter will be below that of the former, as the rise is proportional to the difference in the runs.

A-B represents the run of the long valley and **A'-D** that of the short valley. Thus it will be seen that valleys framed in this way are self-

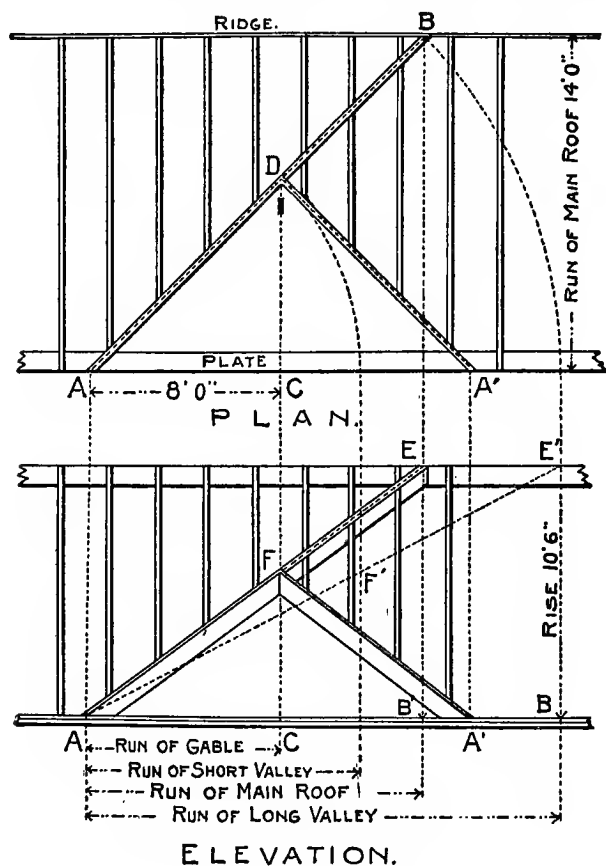


Fig. 59. Framing for Roof Dormers.

supporting. That part from **D** to **B** is what is generally termed **blind valley**, because it is concealed in the plane of the main roof. The meas-

urement should be taken along the center of the back of the valley, as shown by the dotted lines; and if backed—or, more properly speaking, grooved, so that the roof boards will have a solid bearing at all points—then the seat cut should be made so as to bring the grooves in the plane with that of the back of the common rafters. This furnishes a problem in itself that is not so

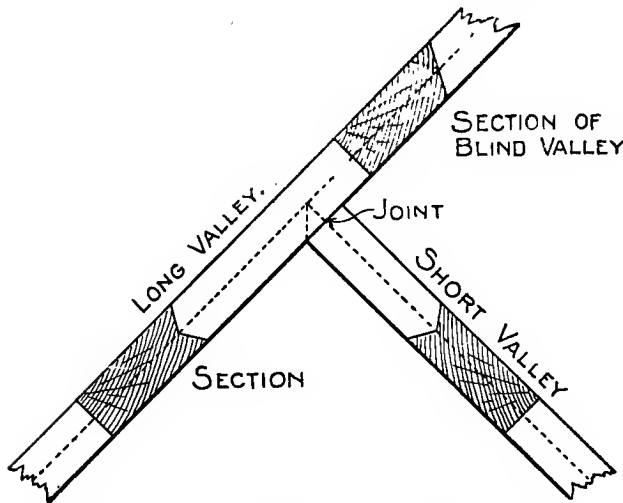


Fig. 60. Intersection of Valleys—Roof Dormers.

easily understood as may appear at first sight, especially where there is a projection of the rafter to form the cornice.

However, it is not usual to groove the valleys, as they are generally concealed from view and otherwise not of enough advantage to warrant the extra work required. Where they are not grooved, they should set proportionately

lower than the common rafter, so that the under edge of the roof boards will intersect the center of the back of the valley. Even then, that part from **D** to **B** would have to be backed or beveled on one side the same as for a hip, to bring the center in plane with the common rafter.

Fig. 60 shows the plan of the valleys at the intersection on a larger scale. In this the sections are shown grooved below the intersection; and in that case that part called the blind valley should be beveled one way, as shown. This part, while it may look out of place in the illustration, will be found to conform with the roof planes when set in position. In large or heavy roofs, the valleys should be doubled; and in that case it is an easy matter to groove the backs by simply backing them one way only, and then spiking them together so as to form the groove. In other words, they would show the same as in the illustration by letting the center line represent the joining of the two pieces.

Another point comes up in this connection that should not be overlooked before passing on, and that is the joining of the short valley to the long one. Simple as it is, builders sometimes do not readily grasp that it is nothing more than the plumb cut for the valley. It rests at right angles from the long valley, and therefore must rest square against it, just the same as if against a level piece; and in this example, the pitch being $\frac{3}{8}$, 17 and 9 will give the cut.

Referring to the elevation part of Fig. 59,

the valleys are shown in position in the roof. They also show the same as the common rafters in their true position; but the valleys resting at an angle of 45 degrees from the common rafter, their lengths per scale are not easily arrived at without a few extra lines, which may be obtained as shown by the dotted lines from the plan to the elevation, as follows:

A-E represents the long valley in position from the point of sight, while **A-E'** shows its length. The same is true of the short valley. It is the same as **A-F** on the long valley. On a straight view, it represents the length of the common rafter for the gable, but its (the valley) length is found at **A-F'**.

Now we shall illustrate the above by simple lines on the steel square (see Fig. 61), using the same reference letters for the different parts, as shown in Fig. 59. The pitch being $\frac{3}{8}$, or 9-inch rise to the foot, we let 12 on the tongue of square No. 1 represent the starting point, and 9 on the blade the rise. The run of the main roof being 14 feet, measure back 14 inches along the line of the tongue and draw a line parallel to the blade to opposite 14 inches on that member, as at **B' B**. The line from **A** to **B** will represent the run of the long valley. Now, by placing 17 on the tongue of square No. 2 at 12 on the square No. 1, and with the tongue along the line **A-B**, the heel will rest at 12 on square No. 1. Since the rise is 9 inches to the foot, a line from **A** passing at 9 on the square

No. 2 and intersecting the line **B-E'** (the rise of the main roof) will represent the long valley; and the line passing at 9 on square No. 1, intersecting the line **B'B** as at **E**, will represent the common rafter for the main part.

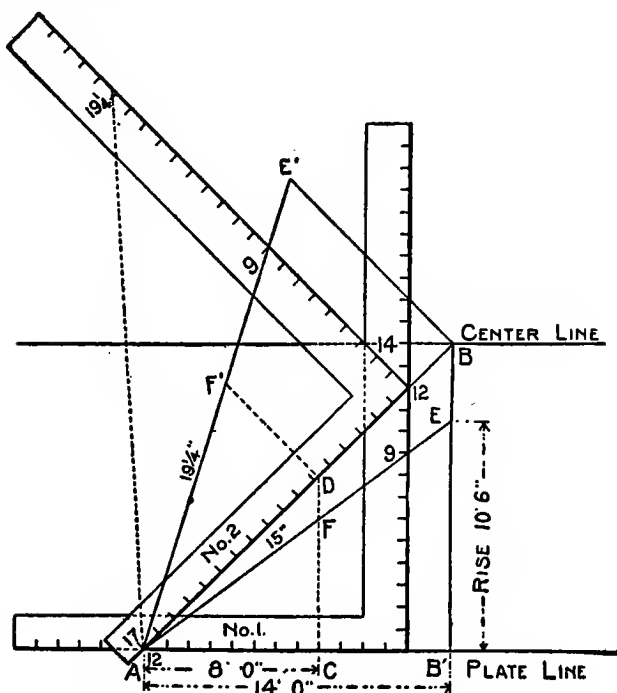


Fig. 61. Steel Square in Roof Dormer Framing.

Now, since the run of the small gable is 8 feet, measure back 8 inches on square No. 1 and draw the lines **C-D** and **D-F'** at right angles from the tongue of the respective squares. **A-F'** will represent the short valley, and **A-F** the corresponding common rafter to a scale of one

inch to the foot. The figures shown on the square intersected by the lines **A-E** and **A-E'** will give the seat and plumb cuts of the common and valley rafters respectively. The length of the diagonal lines on the squares are $19\frac{1}{4}$ and 15 inches, and these figures taken on the blade of the respective squares will give the side cuts for the valley and jack rafters.

In this illustration we have used two scales—the full scale on the steel square for a one-foot run, to obtain the cuts; and the $\frac{1}{12}$ scale, or one inch to the foot run, for the diagram of the roof, from which to obtain the length of the rafters. The fact that there are two scales employed may render the subject harder to grasp by some; but we trust that after a little study of this illustration will be clear.

The reader will observe that in all of our work we have adhered to 12 on the tongue as the starting point. We do this because it represents unity or the beginning, and therefore answers for any run or pitch given the roof. However, as a comparison, it might be well to illustrate this problem by the one-inch scale to the foot.

Bear in mind that while we illustrate these problems with two squares, only one is necessary, as the angles may be laid out with the different positions of the square and the required proportions taken on the same. As the run of the small gable is 8 feet, place the blade of square No. 2 at 8 on both the tongue

As for the length of the common rafters, this is an easy matter to get by the scale method, by simply taking the run and rise of the roof on the tongue and blade and measuring diagonally across. However, while this does for working purposes for the more common run of work, it is not absolutely a correct method, because the least variation is magnified twelve-fold.

How to Roof a Circular Bay. The trouble that one carpenter had with such a job working "by rule o' thumb" is well illustrated in the following letter.

"I executed a piece of work last week which accidentally proved satisfactory to the contractor I am working for, but not to myself. Not knowing the proper way to go about it, I had a deuce of a time and worried myself half-sick.

"The job in question was framing a roof over a circular bay window, as they are termed here. The window had a radius of 15 feet, with a projection of 2 feet 6 inches and a rise at the center of 1 foot 6 inches. The roof was sheathed and covered with tin.

"The way I went about it at first was to strike my 15 feet radius, and then lay off the rise at center, allowing for projection. Next I struck the radius of my roof, which was 19 feet, something—do not call to mind just what it was. By doing so I expected to get the true rise and run of my rafters. The rafters were spaced on 32-inch centers—that is, I spiked my lookouts on every other joist, and set my rafters on top of them. I spaced off my drawing 32 inches, commencing at the center and working each way. Then took the run and rise of each rafter separately and cut them, but when I commenced to put them up something was wrong. The first, or center

rafter, was all right and the others were wrong. I felt awfully cheap, but of course the work had to be done, and not knowing any better way than by the old, old-fashioned one, or the rule of 'thumb,' I finished my roof that way. It looks all right, I suppose, to most people outside of a good practical man, but I am not satisfied. The chances are I will have more of the same work to do, as they are getting to be quite the style.

"If it is not asking too much, I certainly would esteem it a great favor if you would, or could, afford the time to enlighten me as to the simplest method of executing the above described work."

The above letter is printed in full, because it is clear-cut and shows that the writer is after information pure and simple. He admits his error, and is anxious to avoid a like occurrence in the future. His frankness in the matter shows that he is on the right track to better fit himself for his work and give value received to his employer, with a good share of interest thrown in.

We are all given to mistakes; and from one another's experience we gain our knowledge for paving the way for still others to follow. To the experienced, such questions may seem simple and a waste of words in the way of explanation, but all such should remember that they too were once groping in the dark for information just as thousands of others are to-day; and so it will ever be.

The great trouble experienced by the would-be learner is that he does not stop to think—

that is, of the rules of application or relation of one part to another.

Take, for instance, the above example. If the bay window had been a full half-circle, this man would without hesitation have framed his

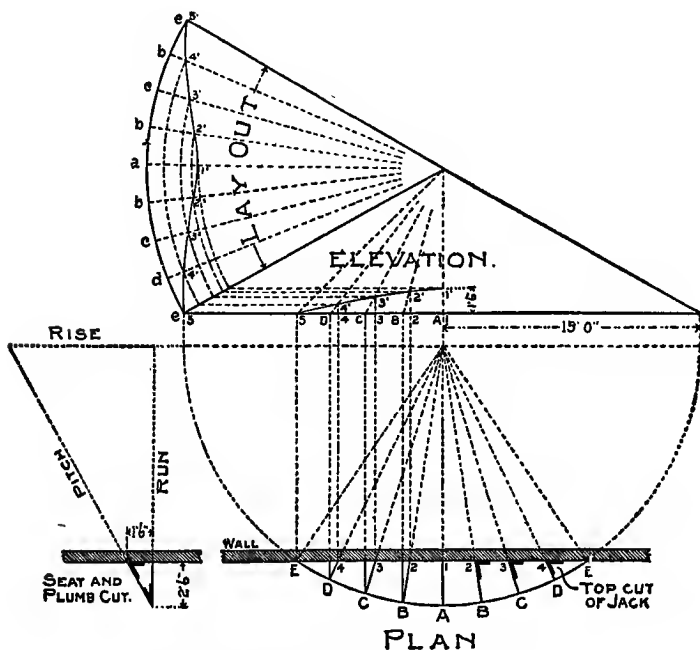


Fig. 63. How to Roof a Circular Bay.

rafters the same as for a circular roof—all of same length and radiating from a common center; but when only a fraction of the roof is wanted, he forgets that the rafters must lie in the same position as for the half-circle bay. In one case, the wall line of the house, as it were,

cuts through the center of a circular conical roof; while in the other, it cuts off only the edge of the roof. Therefore, being a part of the same roof, the seat and plumb cuts must be the same in either case; but not being whole rafters, they must be considered as jacks, and therefore need a side cut, with the exception of the center, which is No. 1 in Fig. 63. The others of like numbers, will be rights and lefts, and may be obtained with a bevel square provided it is paralleled with seat cut line or at right angles—square out from the plumb cut.

For work of this kind, it is better to lay out a full-size diagram of such parts as are required, on a level space, to get the measurements as shown in Fig. 63. The plan shows the individual run of the rafters as **A-1**, **B-2**, **C-3**, etc. The elevation shows the rise of same, as 1-1', 2-2', 3-3', etc.; and the stretch-out of their lengths, as a-1', b-2', c-3', etc. This part shows the shape of the boards for the covering. The elevation also shows the curve the roof has at the intersection of the wall; however, this part will not be a true circle as our friend tried to have it. This should cause no worry because it will take care of itself, provided the rafters are cut to the right length and placed radiating to a common center. Further explanation, we trust, is not necessary.

To Develop Curved Rafters. A question that frequently comes up for solution, in getting out rafters that have a sweep or curve, is

how to make the hips without scribing them from the common rafter, and make them so that all parts will line up properly. The method is shown in Fig. 64, which is self-explanatory. The curve for the common rafter can be anything desired, and should be laid off full size.

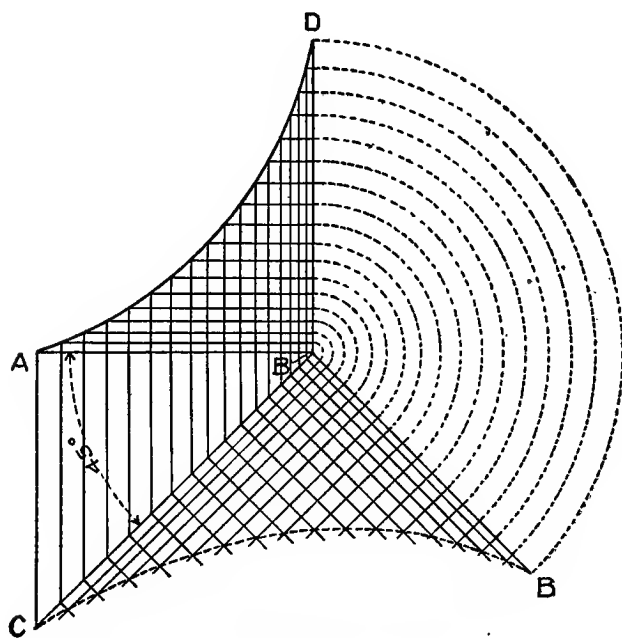


Fig. 64. Developing Curved Hip Rafter.

In the illustration, **AB** represents the run of the curve for the common rafter, and **CB** the same for the hip. **BD** represents the rise; and it necessarily follows that **AD** represents the curve given the common rafter. For a square-cornered building and where the pitch

is the same on both sides, the run of the hip will necessarily rest at 45 degrees from that of the common rafter as shown.

Next, lay off any number of lines parallel to the run of the common rafter; also a like number with corresponding spacing parallel to the run of the hip, but to be of indefinite lengths, as shown. Now, draw lines from the curve of the common rafter (**A D**), and at right angles to the run (**A B**), intersecting the run of the hip (**C B**), thence at right angles indefinitely. The intersection of these lines with the corresponding parallel lines of the hip, will give the points from which to run an offhand curve to correspond with that of the common rafter. Rafter ends of various fancy slopes, such as are used for bungalows, are developed in a similar way.

For particular work, the curve of the hip should be backed. Measure back one-half of the thickness of the hip on the parallel lines, which will give the gauge line along the side of the rafter from which to remove the wood to the center as indicated by the first curve developed.

How to Use the Octagon Scale. On the tongue of almost all steel squares, there is a row of dots enclosed between two lines, and figured to a scale of tenths. This scale is called the **octagon scale**, and is designed for changing a square timber to an octagon, or for finding the width of the side of an octagon of a given

diameter. In Fig. 65 is shown a part of this scale. But very few understand it, or are even interested enough in it to look it up. It is quite evident that the inventor did not understand the use of the plain steel square with its standard scale of measurement, which is suffi-

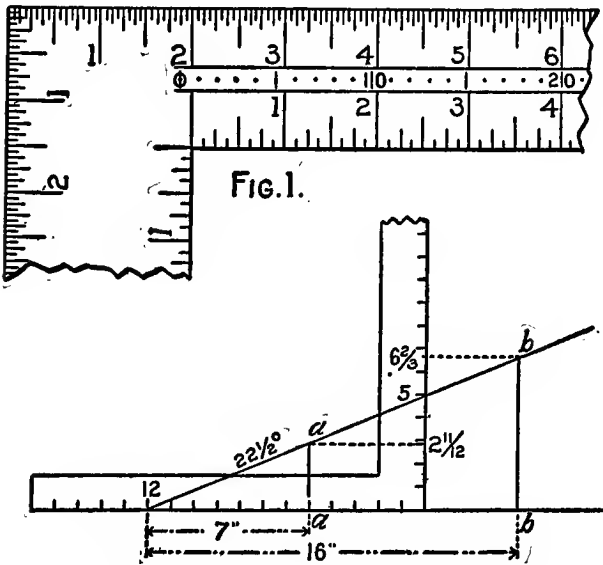


Fig. 65. Octagon Scale and Another Method.

cient for solving all problems of this kind, for he wandered from the path of simplicity into a byway to exemplify a single problem in the polygons, then leaving the would-be learner ignorant of any apparent reason why his scale gives correct results. The solution is as follows:

Suppose it is desired to change a seven-inch

square stick to an octagon. Lay off a center line on all four faces of the timber; and from either side of this line set off a space equal to seven of the spaces shown on the steel square, which will be the point for the gauge line, from which to remove the wood at the corners to form the octagon.

These same proportions may be found directly from the steel square; in fact, Fig. 65 shows a rule that applies not only to the octagon, but to any of the other polygons as well.

Draw an indefinite line from 12 and passing at 5 as shown. Now, if the timber is seven inches square, measure back that amount from 12 on the tongue, and square up to the diagonal line, as at *aa*, which will be found to be 2 11-12 inches and represents the side of the octagon. If the timber is 16 inches, then *bb* represents the width of the sides and is found to be 6 2-3 inches. This rule, as we said before, applies to any of the polygons. The starting points on the square are the figures that give their respective miters, and the diagonal line across the square is governed accordingly.

How to Frame by Degrees With the Steel Square. The steel squares that are in general use do not contain a degree scale for framing purposes, though unquestionably it would be a good thing instead of some of the obsolete rules that now encumber its faces. However, in the absence of a protractor, the angle may be found

as shown by the accompanying illustration, Fig. 66, as follows:

Lay off a line, as at **AB**, and apply the square as shown, and draw line **AC** from 12 on the tongue and passing at 12 on the blade. This line will be at an angle of 45 degrees to **AB**. Now, with the compass, strike an arc of any ra-

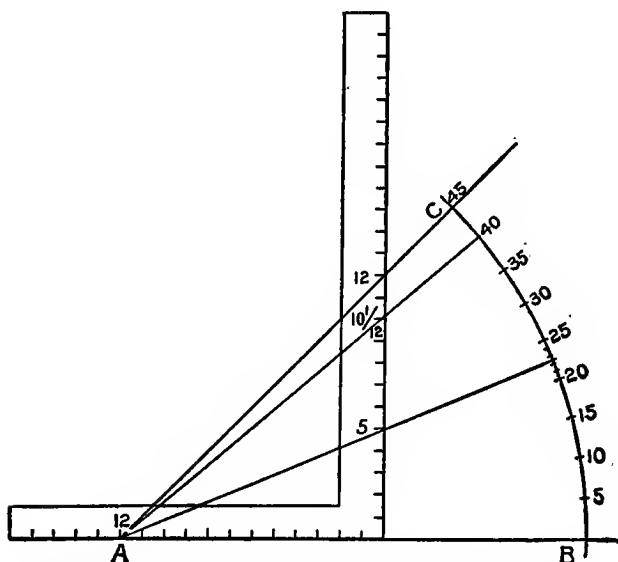


Fig. 66. To Lay Out an Angle with the Steel Square.

dus—the larger the better, for the more accurate will be the final result. Divide this arc into nine equal parts, and these divisions will be five degrees apart, as shown by the figures opposite the divisions. Now, to find the figures on the blade for the degrees wanted, as 40, draw a line from **A** to 40 on the arc, and the line will pass at

10.06, or practically 10 1-12 inches on the blade, which will represent the figures to use on that member for either 40 or 50 degrees, the blade giving the plumb cut in the former and the tongue in the latter.

Vice versa for the seat cut. The changing point is at 45 degrees, and as 40 is less than 45, the blade gives the plumb cut. On the other hand, 50 being more than 45, the tongue gives the cut.

The reason that 12 and 10 1-12 also gives the cuts for 50 degrees is because 50 is the complement degree of 40, or, in other words, the sum of the two equals 90. Thus it will be seen that this diagram is all that is necessary to find any angle on the square.

Suppose we wish to find the figures for $22\frac{1}{2}$ degrees. Then divide the space from 20 to 25 into five equal parts, and these will be one degree apart, and by drawing a line from **A** to $22\frac{1}{2}$ on the arc, the line will be found to pass practically 5 on the blade.

Having found what figures to use on the blade for any desired degree, the procedure in roof framing is the same as in framing by the proportion of the span or per inch rise to the foot in run of the common rafter.

To Prevent a Ridge from Sagging. A method of construction such as is illustrated in Fig. 67 is at times desirable. It keeps the ridge from sagging, or plates from bulging out on the sides. The board, 1 by 8 inch, nailed on under

side of rafter, will prevent roof from sagging. No collar beams are required. The board extends from end of plate at corner of building diagonally to center of ridge.

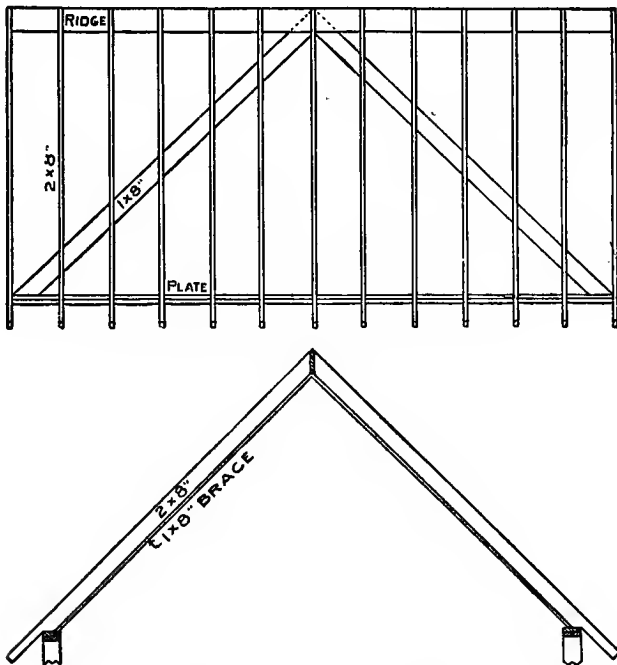


Fig. 67. Good Brace for Ridge.

Roof Construction to Prevent Formation of Ice on Eaves. This is a most important matter in many parts of the country, especially in the North.

Before suggesting a method of construction, it may be well to examine into the causes of this

very prevalent trouble, which annoys many a householder winter after winter.

When a body of snow several inches thick lies on a roof, it forms a very effective non-conductor of heat. The warmth of the attic penetrates or radiates through the boarding and shingles (wood or metal alike), and cannot pass off into the air, on account of the layer of snow acting as a sort of blanket to retain the heat. In consequence, the under part of the layer of snow is melted slightly, and trickles down until it reaches the eaves. As the eaves overhang the walls, the internal heat of the house does not affect this part of the roof, which is in consequence quite cold. The water, trickling down the surface of the roof, freezes at once on reaching this cold zone of roof, and gradually accumulates a mass of ice ranging from two or three inches to a foot or more in thickness. This serves to back up the water over the warm part of the roof, and hence the leaks which are the worst effects of this condition of things.

It should also be observed that when the snow melts from the outside—that is, from the heat of the sun—no trouble occurs at the eaves, the resulting water running freely down off the roof. Seeing, then, that the cause of the trouble is the radiation, through the roof itself, of the internal heat of the house, the remedy evidently lies in preventing such radiation.

This may be done in two ways, either of which is fairly effective alone; but for first-class

work and to insure the very best results it would be well to use both methods in combination.

The first method consists in thoroughly **deadening** the ceilings of all the upper rooms of the building—that is, to form a dead air space through which the heat of the rooms cannot escape. It cannot be too widely known by builders throughout the colder regions of this continent, that a lath and plaster ceiling allows a tremendous lot of heat to escape into the attic of a building; and, if for no other reason than the saving of fuel, this should be prevented. An effective method is to lay rough boarding on fillets near the upper edge of the ceiling joists, and to cover the same with some composition to render it air-proof. Fig. 68 shows the details of this method, which calls for slightly deeper joists to carry the extra weight of the deadening.

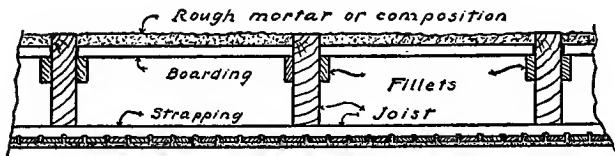


Fig. 68. Ceiling Construction to Prevent Heat Losses.

There are, of course, several **pugging** compositions sold for deadening purposes, but an entirely effective one is a mixture of coarse mill sawdust and plaster of Paris. The sawdust and plaster are mixed together and made into a mortar with water in the ordinary way, and a coating laid on the boarding, about one inch in depth.

Care must be taken that the spaces between the ends of the joists over the wall-plates are properly filled, either by lath and plaster or by a piece of board cut tightly in between and nailed in position. This is important, for the effectiveness of any dead air space as a non-conductor of heat (or cold) depends upon its being absolutely tight everywhere.

Many buildings, such as churches, halls, and schools, have no attics, but are open to the roof

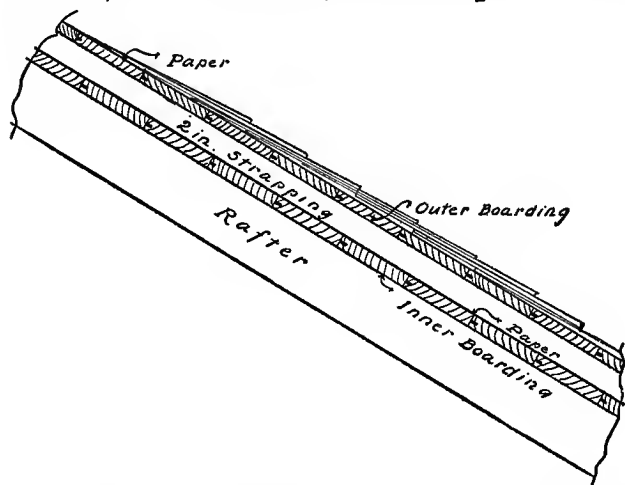


Fig. 69. Roof Construction to Prevent Heat Losses.

timbers, and obviously the foregoing would not apply in such cases. For the prevention of heat radiation in roofs of this class, a double roof is the only effective remedy. A detail of this is shown in Fig. 69, from which it will be seen that the sheathing is laid on the rafters in the usual way, and then covered with good building paper.

Two-inch strapping is then applied, and upon this a second layer of sheathing is laid. This is covered with paper and shingles in the regular manner, thus forming a dead air space as desired. Such an arrangement will also prevent the condensation of moisture upon the inside of the roof, and the consequent annoyance from water dropping, which is so often experienced in churches and halls when well-warmed inside during zero temperatures out of doors.

As remarked earlier in this discussion, to be absolutely sure of preventing the formation of ice near the eaves, it would be well to adopt both the deadening of the ceilings and the doubling of the roof. It will be found, however, that the thorough deadening of the ceilings will generally be sufficient; and very few architects specify both methods, except in the most expensive structures.



Stair=Building Simplified

Rules for Proportioning. Until about the time of Queen Elizabeth, the staircase, now so important a feature in all houses, was of small note. Previously, stairs were built in every case on a circular plan, revolving around a central axis or newel. These were known as **turret** or **corkscrew stairs**. Stairs with wide, straight flights were introduced during the sixteenth and seventeenth centuries, and were made the leading feature in the mansions of the Elizabethan style. They were very massive in design, with heavy oak balusters and enormous carved newels with ornamental panels. Many staircases of similar design but of lighter construction now exist in England, many of the more modern ones having cast-iron railings. In most houses built to-day the stairway is a most important feature, nevertheless its construction is frequently, and in fact usually, left with little thought as to design or convenience.

In planning stairways, care should be taken to have sufficient room so that the height of the riser is not too great. The distance from floor to floor in inches should be divided into a certain number of vertical distances, each of which is termed the **rise**, and which is usually from 7 to 8 inches. A rule frequently applied in pro-

portioning the rise to the width of the **tread** is, that the rise in inches multiplied by the run or tread in inches shall be about 70 or 75. According to this, a 7-inch riser will call for a $10\frac{1}{2}$ -inch tread. The workman will readily see from this rule that the greater the rise the less the run, and the less the rise the greater the run, the proportions varying to suit different conditions.

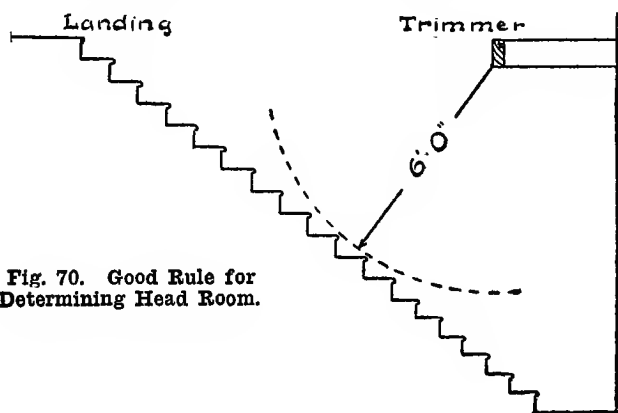


Fig. 70. Good Rule for Determining Head Room.

Another rule is based on the fact that an easy pace on the level is 23 inches. In going upstairs, however, a person passes upward as well as forward at the same time, and the rule is that "twice the rise, plus the tread, should equal 23." This gives very good results in practice.

Head Room. A good rule for getting proper head room in a flight of stairs is to count **down** 13 or 14 steps from the top, and plumb up for the face of the trimmer. This gives good clearance for a tall man.

Nicholson's famous old Scotch work on building construction (1805) gives another good rule, which is illustrated in Fig. 70. With the bottom front edge of the trimmer as center, and a radius of 6 feet, describe an arc of a circle, from which the nosing line must be kept clear to give good head room under the trimmer.

Nicholson's rule for finding the thickness of trimmers is also useful. It was "to add to the thickness of trimmer one-eighth of an inch for every joist set into the trimmer." This works out very well indeed.

How to Lay Out the Stairs. Stair-building is a branch of framing that is well-nigh in a class by itself. In the larger cities there are men who make a specialty of stair-building, from the plain, straight run, to the more complicated platform and winding stairs. It is the latter class of work that taxes the ingenuity of the workmen to work out the railings, newels, etc., so as to rest in the proper planes with the pitch given the stairs. To do this successfully, requires one well up in detail drafting and having a practical knowledge of geometry to lay out the turns and easements on the rough timbers, so as to be able to work them out in the finished product. However, the old-fashioned winding stair, with its ever winding rail, is no longer considered, from an architectural standpoint, to add to the beauty of the interior of the house, to say nothing of the added expense that must necessarily follow in the construction of circular stair work. Of

course, there are times where winding stairs conform to certain space better than stairs with square turns; but even then, in most cases, it would be better to allow room for a good easy stair with square turns, and make the rooms and hallways conform to it.

So the question is how to lay out the necessary room for a comfortable and convenient stair.

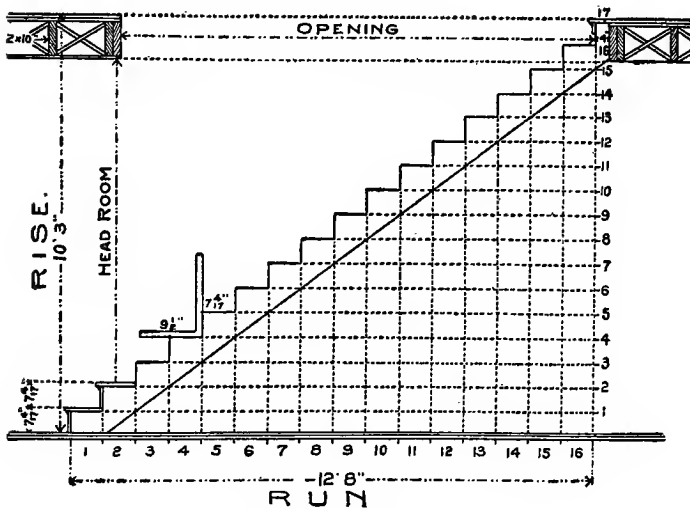


Fig. 71. Layout of Simple Stairs.

Lay out the stairs first, allowing ample space; and plan the rooms accordingly. Fig. 71 shows a straight run of stairs which may be taken as typical; it is the simplest of any to build. From the starting point to the level of the floor above, is 10 feet 3 inches, or 123 inches;

and as there are 17 risers, there would be $7\frac{4}{17}$ inches to each rise. Now, as there are one less of the treads than there are risers, multiply 16, in this case, by the desired width of the tread ($9\frac{1}{2}$ inches), and we obtain 152 inches, or 12 feet 8 inches, for the run of the stairs.

The next thing to consider is the proper length of opening to leave in the second floor, so as not only to give ample head room for the more than average tall person, but also a generous allowance for the free passage of furniture, trunks, etc. It is best to give plenty of room. The head room should be at least a little higher than usually given to the room doors, say 7 feet 6 inches or 8 feet. Plenty of room should be allowed in the framing, as it is an easy matter to fur out the trimmer if it is afterwards found desirable to reduce the space. The length of the opening can be found by deducting the amount of the number of risers from the room height that will leave ample head room. In this example, if we deduct the height of two risers, which is practically 1 foot $2\frac{1}{2}$ inches, from 9 feet $\frac{1}{2}$ inch, 7 feet 10 inches is left above the second riser. It is safe, then, to place the trimmer above, a little farther forward, as shown in the illustration. It must be remembered that when the well-hole is lathed and plastered, it reduces the height accordingly.

Many workmen prefer to use a pole on which they mark the heights from floor to floor and then divide this into the number of equal spaces

that there are to be risers. The pole can also be used to advantage where the total run is desired to come inside a given space, as it obviates the necessity of a mathematical problem that usually runs into fractions.

For general use, however, in calculating the

NUMBER RISERS	RISE OR RUN.																			
	1	6 $\frac{1}{2}$	6 $\frac{3}{4}$	7	7 $\frac{1}{4}$	7 $\frac{1}{2}$	7 $\frac{3}{4}$	7 $\frac{1}{2}$	7 $\frac{3}{4}$	7 $\frac{1}{2}$	7 $\frac{3}{4}$	8	8 $\frac{1}{4}$	8 $\frac{1}{2}$	9	9 $\frac{1}{4}$	9 $\frac{1}{2}$	10	10 $\frac{1}{4}$	11
2	11	11 $\frac{1}{2}$	12	12 $\frac{1}{2}$	12 $\frac{1}{2}$	12 $\frac{3}{4}$	13	13 $\frac{1}{4}$	13 $\frac{1}{2}$	13 $\frac{3}{4}$	14	14 $\frac{1}{4}$	14 $\frac{1}{2}$	15	15 $\frac{1}{4}$	15 $\frac{1}{2}$	16	16 $\frac{1}{4}$	16 $\frac{1}{2}$	17
3	17 $\frac{1}{2}$	18 $\frac{1}{2}$	19	19 $\frac{1}{2}$	19 $\frac{1}{2}$	19 $\frac{3}{4}$	20	20 $\frac{1}{4}$	20 $\frac{1}{2}$	20 $\frac{3}{4}$	21	21 $\frac{1}{4}$	21 $\frac{1}{2}$	22	22 $\frac{1}{4}$	22 $\frac{1}{2}$	23	23 $\frac{1}{4}$	23 $\frac{1}{2}$	24
4	22 $\frac{1}{2}$	23 $\frac{1}{2}$	24	24 $\frac{1}{2}$	24 $\frac{1}{2}$	24 $\frac{3}{4}$	25	25 $\frac{1}{4}$	25 $\frac{1}{2}$	25 $\frac{3}{4}$	26	26 $\frac{1}{4}$	26 $\frac{1}{2}$	27	27 $\frac{1}{4}$	27 $\frac{1}{2}$	28	28 $\frac{1}{4}$	28 $\frac{1}{2}$	29
5	28 $\frac{1}{2}$	29 $\frac{1}{2}$	29 $\frac{1}{2}$	30	30 $\frac{1}{2}$	30 $\frac{1}{2}$	30 $\frac{3}{4}$	31	31 $\frac{1}{4}$	31 $\frac{1}{2}$	32	32 $\frac{1}{4}$	32 $\frac{1}{2}$	33	33 $\frac{1}{4}$	33 $\frac{1}{2}$	34	34 $\frac{1}{4}$	34 $\frac{1}{2}$	35
6	33 $\frac{1}{2}$	34 $\frac{1}{2}$	34 $\frac{1}{2}$	35	35 $\frac{1}{2}$	35 $\frac{1}{2}$	35 $\frac{3}{4}$	36	36 $\frac{1}{4}$	36 $\frac{1}{2}$	37	37 $\frac{1}{4}$	37 $\frac{1}{2}$	38	38 $\frac{1}{4}$	38 $\frac{1}{2}$	39	39 $\frac{1}{4}$	39 $\frac{1}{2}$	40
7	38 $\frac{1}{2}$	39 $\frac{1}{2}$	39 $\frac{1}{2}$	40	40 $\frac{1}{2}$	40 $\frac{1}{2}$	40 $\frac{3}{4}$	41	41 $\frac{1}{4}$	41 $\frac{1}{2}$	42	42 $\frac{1}{4}$	42 $\frac{1}{2}$	43	43 $\frac{1}{4}$	43 $\frac{1}{2}$	44	44 $\frac{1}{4}$	44 $\frac{1}{2}$	45
8	44 $\frac{1}{2}$	45 $\frac{1}{2}$	45 $\frac{1}{2}$	46	46 $\frac{1}{2}$	46 $\frac{1}{2}$	46 $\frac{3}{4}$	47	47 $\frac{1}{4}$	47 $\frac{1}{2}$	48	48 $\frac{1}{4}$	48 $\frac{1}{2}$	49	49 $\frac{1}{4}$	49 $\frac{1}{2}$	50	50 $\frac{1}{4}$	50 $\frac{1}{2}$	51
9	49 $\frac{1}{2}$	50 $\frac{1}{2}$	50 $\frac{1}{2}$	51	51 $\frac{1}{2}$	51 $\frac{1}{2}$	51 $\frac{3}{4}$	52	52 $\frac{1}{4}$	52 $\frac{1}{2}$	53	53 $\frac{1}{4}$	53 $\frac{1}{2}$	54	54 $\frac{1}{4}$	54 $\frac{1}{2}$	55	55 $\frac{1}{4}$	55 $\frac{1}{2}$	56
10	54 $\frac{1}{2}$	55 $\frac{1}{2}$	55 $\frac{1}{2}$	56	56 $\frac{1}{2}$	56 $\frac{1}{2}$	56 $\frac{3}{4}$	57	57 $\frac{1}{4}$	57 $\frac{1}{2}$	58	58 $\frac{1}{4}$	58 $\frac{1}{2}$	59	59 $\frac{1}{4}$	59 $\frac{1}{2}$	60	60 $\frac{1}{4}$	60 $\frac{1}{2}$	61
11	59 $\frac{1}{2}$	60 $\frac{1}{2}$	60 $\frac{1}{2}$	61	61 $\frac{1}{2}$	61 $\frac{1}{2}$	61 $\frac{3}{4}$	62	62 $\frac{1}{4}$	62 $\frac{1}{2}$	63	63 $\frac{1}{4}$	63 $\frac{1}{2}$	64	64 $\frac{1}{4}$	64 $\frac{1}{2}$	65	65 $\frac{1}{4}$	65 $\frac{1}{2}$	66
12	64 $\frac{1}{2}$	65 $\frac{1}{2}$	65 $\frac{1}{2}$	66	66 $\frac{1}{2}$	66 $\frac{1}{2}$	66 $\frac{3}{4}$	67	67 $\frac{1}{4}$	67 $\frac{1}{2}$	68	68 $\frac{1}{4}$	68 $\frac{1}{2}$	69	69 $\frac{1}{4}$	69 $\frac{1}{2}$	70	70 $\frac{1}{4}$	70 $\frac{1}{2}$	71
13	69 $\frac{1}{2}$	70 $\frac{1}{2}$	70 $\frac{1}{2}$	71	71 $\frac{1}{2}$	71 $\frac{1}{2}$	71 $\frac{3}{4}$	72	72 $\frac{1}{4}$	72 $\frac{1}{2}$	73	73 $\frac{1}{4}$	73 $\frac{1}{2}$	74	74 $\frac{1}{4}$	74 $\frac{1}{2}$	75	75 $\frac{1}{4}$	75 $\frac{1}{2}$	76
14	74 $\frac{1}{2}$	75 $\frac{1}{2}$	75 $\frac{1}{2}$	76	76 $\frac{1}{2}$	76 $\frac{1}{2}$	76 $\frac{3}{4}$	77	77 $\frac{1}{4}$	77 $\frac{1}{2}$	78	78 $\frac{1}{4}$	78 $\frac{1}{2}$	79	79 $\frac{1}{4}$	79 $\frac{1}{2}$	80	80 $\frac{1}{4}$	80 $\frac{1}{2}$	81
15	79 $\frac{1}{2}$	80 $\frac{1}{2}$	80 $\frac{1}{2}$	81	81 $\frac{1}{2}$	81 $\frac{1}{2}$	81 $\frac{3}{4}$	82	82 $\frac{1}{4}$	82 $\frac{1}{2}$	83	83 $\frac{1}{4}$	83 $\frac{1}{2}$	84	84 $\frac{1}{4}$	84 $\frac{1}{2}$	85	85 $\frac{1}{4}$	85 $\frac{1}{2}$	86
16	84 $\frac{1}{2}$	85 $\frac{1}{2}$	85 $\frac{1}{2}$	86	86 $\frac{1}{2}$	86 $\frac{1}{2}$	86 $\frac{3}{4}$	87	87 $\frac{1}{4}$	87 $\frac{1}{2}$	88	88 $\frac{1}{4}$	88 $\frac{1}{2}$	89	89 $\frac{1}{4}$	89 $\frac{1}{2}$	90	90 $\frac{1}{4}$	90 $\frac{1}{2}$	91
17	89 $\frac{1}{2}$	90 $\frac{1}{2}$	90 $\frac{1}{2}$	91	91 $\frac{1}{2}$	91 $\frac{1}{2}$	91 $\frac{3}{4}$	92	92 $\frac{1}{4}$	92 $\frac{1}{2}$	93	93 $\frac{1}{4}$	93 $\frac{1}{2}$	94	94 $\frac{1}{4}$	94 $\frac{1}{2}$	95	95 $\frac{1}{4}$	95 $\frac{1}{2}$	96
18	94 $\frac{1}{2}$	95 $\frac{1}{2}$	95 $\frac{1}{2}$	96	96 $\frac{1}{2}$	96 $\frac{1}{2}$	96 $\frac{3}{4}$	97	97 $\frac{1}{4}$	97 $\frac{1}{2}$	98	98 $\frac{1}{4}$	98 $\frac{1}{2}$	99	99 $\frac{1}{4}$	99 $\frac{1}{2}$	100	100 $\frac{1}{4}$	100 $\frac{1}{2}$	101
19	99 $\frac{1}{2}$	100 $\frac{1}{2}$	100 $\frac{1}{2}$	101	101 $\frac{1}{2}$	101 $\frac{1}{2}$	101 $\frac{3}{4}$	102	102 $\frac{1}{4}$	102 $\frac{1}{2}$	103	103 $\frac{1}{4}$	103 $\frac{1}{2}$	104	104 $\frac{1}{4}$	104 $\frac{1}{2}$	105	105 $\frac{1}{4}$	105 $\frac{1}{2}$	106
20	104 $\frac{1}{2}$	105 $\frac{1}{2}$	105 $\frac{1}{2}$	106	106 $\frac{1}{2}$	106 $\frac{1}{2}$	106 $\frac{3}{4}$	107	107 $\frac{1}{4}$	107 $\frac{1}{2}$	108	108 $\frac{1}{4}$	108 $\frac{1}{2}$	109	109 $\frac{1}{4}$	109 $\frac{1}{2}$	110	110 $\frac{1}{4}$	110 $\frac{1}{2}$	111
21	109 $\frac{1}{2}$	110 $\frac{1}{2}$	110 $\frac{1}{2}$	111	111 $\frac{1}{2}$	111 $\frac{1}{2}$	111 $\frac{3}{4}$	112	112 $\frac{1}{4}$	112 $\frac{1}{2}$	113	113 $\frac{1}{4}$	113 $\frac{1}{2}$	114	114 $\frac{1}{4}$	114 $\frac{1}{2}$	115	115 $\frac{1}{4}$	115 $\frac{1}{2}$	116
22	114 $\frac{1}{2}$	115 $\frac{1}{2}$	115 $\frac{1}{2}$	116	116 $\frac{1}{2}$	116 $\frac{1}{2}$	116 $\frac{3}{4}$	117	117 $\frac{1}{4}$	117 $\frac{1}{2}$	118	118 $\frac{1}{4}$	118 $\frac{1}{2}$	119	119 $\frac{1}{4}$	119 $\frac{1}{2}$	120	120 $\frac{1}{4}$	120 $\frac{1}{2}$	121
23	119 $\frac{1}{2}$	120 $\frac{1}{2}$	120 $\frac{1}{2}$	121	121 $\frac{1}{2}$	121 $\frac{1}{2}$	121 $\frac{3}{4}$	122	122 $\frac{1}{4}$	122 $\frac{1}{2}$	123	123 $\frac{1}{4}$	123 $\frac{1}{2}$	124	124 $\frac{1}{4}$	124 $\frac{1}{2}$	125	125 $\frac{1}{4}$	125 $\frac{1}{2}$	126
24	124 $\frac{1}{2}$	125 $\frac{1}{2}$	125 $\frac{1}{2}$	126	126 $\frac{1}{2}$	126 $\frac{1}{2}$	126 $\frac{3}{4}$	127	127 $\frac{1}{4}$	127 $\frac{1}{2}$	128	128 $\frac{1}{4}$	128 $\frac{1}{2}$	129	129 $\frac{1}{4}$	129 $\frac{1}{2}$	130	130 $\frac{1}{4}$	130 $\frac{1}{2}$	131
25	129 $\frac{1}{2}$	130 $\frac{1}{2}$	130 $\frac{1}{2}$	131	131 $\frac{1}{2}$	131 $\frac{1}{2}$	131 $\frac{3}{4}$	132	132 $\frac{1}{4}$	132 $\frac{1}{2}$	133	133 $\frac{1}{4}$	133 $\frac{1}{2}$	134	134 $\frac{1}{4}$	134 $\frac{1}{2}$	135	135 $\frac{1}{4}$	135 $\frac{1}{2}$	136
26	134 $\frac{1}{2}$	135 $\frac{1}{2}$	135 $\frac{1}{2}$	136	136 $\frac{1}{2}$	136 $\frac{1}{2}$	136 $\frac{3}{4}$	137	137 $\frac{1}{4}$	137 $\frac{1}{2}$	138	138 $\frac{1}{4}$	138 $\frac{1}{2}$	139	139 $\frac{1}{4}$	139 $\frac{1}{2}$	140	140 $\frac{1}{4}$	140 $\frac{1}{2}$	141
27	139 $\frac{1}{2}$	140 $\frac{1}{2}$	140 $\frac{1}{2}$	141	141 $\frac{1}{2}$	141 $\frac{1}{2}$	141 $\frac{3}{4}$	142	142 $\frac{1}{4}$	142 $\frac{1}{2}$	143	143 $\frac{1}{4}$	143 $\frac{1}{2}$	144	144 $\frac{1}{4}$	144 $\frac{1}{2}$	145	145 $\frac{1}{4}$	145 $\frac{1}{2}$	146

Fig. 72. Table Giving Number of Treads or Risers of Any Width for Any Size Space.

layout for stairs, the accompanying table, Fig. 72, will be found very handy and useful as a time-saver. The first row of figures running down the left-hand side, represents the number of risers, while the first row running across the top represents either the rise or the width of the tread. Those in the following lines repre-

sent either the total rise or run for the number of risers shown in the opposite left-hand column.

For example: Suppose we wish to find the number of risers required in a stairway that is 10 feet $5\frac{1}{2}$ inches from floor to floor, and we desire to keep the risers as near $7\frac{1}{2}$ inches as possible.

Operation—Take $7\frac{1}{2}$ in the top line, and run down the column to the nearest figures to 10 feet $5\frac{1}{2}$ inches. It is 10 feet $7\frac{1}{2}$ inches, and is opposite 17 in the left-hand column. Therefore, 17 represents the number of risers; but there is 2 inches left over. This must be divided into 17 parts and one of these parts subtracted from each riser, which would be nearly $\frac{1}{8}$ inch less than $7\frac{1}{2}$ inches.

Now look in the next column to the left. In this, the risers are $7\frac{3}{8}$ inches; and for 17 risers, the total is found to be 10 feet $5\frac{3}{8}$ inches, which is just $\frac{1}{8}$ inch short. Thus the risers will be $7\frac{3}{8}$ inches, plus $\frac{1}{17}$ of $\frac{1}{8}$ inch.

To find the run of the stairs, it must be remembered that there is always one less tread than there are risers. So take 16 in the left-hand column, and trace the figures to the right till you come to the column whose figures at the top represent the desired width of tread. Suppose it to be 9 inches, then it will be found that the run will be 12 feet. If the treads are $9\frac{1}{2}$ inches wide, then the run will be 12 feet 8 inches, and so on for any desired width of tread. Usually there is some leeway in the run; that

is, it is not confined to a certain space like the rise from floor to floor. Therefore, a few inches in the run of a straight flight of stairs does not usually make any difference, thus leaving it to the builder to select at once the width of tread desired. When this cannot be done, then the allotted space must be arrived at in the same manner as that given in the above for the risers. But after all, it should be remembered that while the measurements can be accurately found by the aid of this table, its greatest utility is as a quick reckoner, in laying out the space and proper openings for the finished stair work. In that case it is not necessary to calculate down to the minuteness required in the building of the stairs.

Types of Stair Construction.

Taking up the various details of construction, the **housed string stair**, one of the simplest and at the same time an important type, presents itself. This class of stairs may be divided into two kinds—first, where the stair is between walls (that is, where both strings are fastened to and supported by the walls); and second, where only one of the strings is fastened to the wall, and the other (the face or outside string) is free.

The first is the cheaper, and is used very much in small cottages, and also as a rear stair in the better grade of houses. Of course, very often both of these stairs are framed without

the housed string. The treads are carried on a rough string, and the finished string is fastened to the treads and risers by nailing through it into the treads and risers; but this is very poor construction.

By the term **housed string** is meant a string notched out to receive the ends of the treads

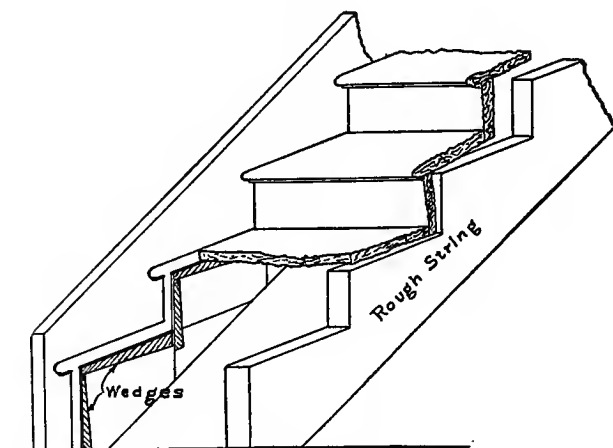


Fig. 73. Housed-String Stair Construction.

and risers. An examination of Fig. 73 will show clearly what is meant.

In the stair between two walls, rough strings are unnecessary, unless the stair is over 2 feet 6 inches wide, when a rough string must be provided under the middle of the stair. The finished strings are fastened to the walls, and are more rigid than if a rough string were the means of support.

Laying Out Stair Strings. After determining the tread and riser lengths, proceed to lay out the string. A little device very helpful in laying out a string is a **gauge-board**, as shown in Fig. 74, upon which has been cut the proper length of tread and riser to the pitch of the stair. In notching out the treads and risers, the notches should be cut large enough to receive a small wedge below the tread and back of the riser. These are used to make a tight

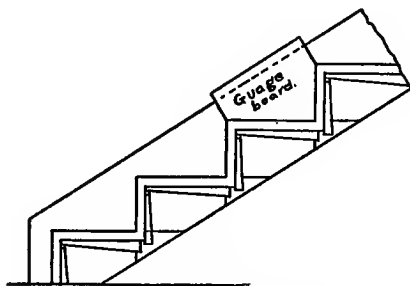


Fig. 74. Use of Gauge-Board.

fit in front, where the treads and risers come against the edge of the notches. When the stairs are put together, the wedges are covered with glue before being driven into place.

Another method of laying out housing for stair strings is as follows:

Joint top edge of string-board straight; draw a gauge-line down the required distance for the center of nosings. Then, having found the rise and run of riser and step, set dividers from rise on blade of square, and step off on gauge-

line the required number of treads. Next take a center bit the size of nosings, and start holes at these points. Next mark a **pitch-board**, as shown in the lower part of Fig. 75, at **D**, and a wedge-shaped stick **F**, the thickness of tread, plus the shape of wedge to be used in gluing up the stairs. Now place pitch-board on string, as shown at **D** in the upper part of Fig. 75,

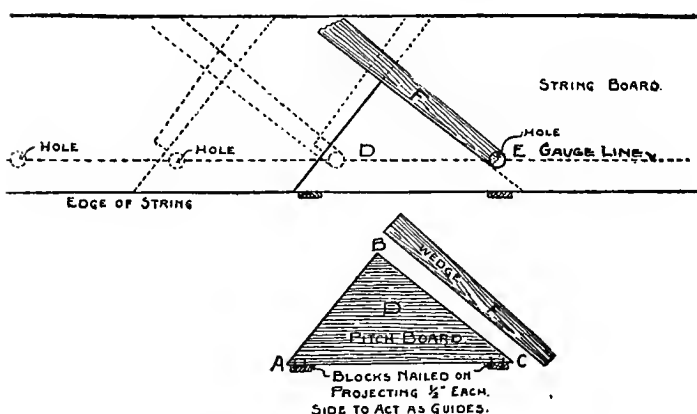


Fig. 75. Method of Laying Out Stair Strings.

and slide it along edge of string-board until edge touches hole **E**. Mark tread and riser; and, before moving pitch-board, place the wedge stick as shown at **F** and at dotted lines, and mark outside. Proceed to next tread in same manner, and so on. The projection of nosing may be regulated by making pitch-board longer or shorter on line **B-C**; but do not change the pitch.

Closed-String Stairs. A closed-string or box stair—that is, one between two walls—is built up against one of the walls before the second wall is built, which, when the stair is in place, is set up against it, and the string nearest to this wall is then fastened to the studding. If the stair is put in and lathing done afterwards, pieces of inch stuff will have to be cut between the studding along the string to receive the ends of the lath. A better way is to lath wall No. 1 before building the stair; then put in the stair; and when placing the studding of wall No. 2, leave the thickness of a lath between the studs and the near string. Then lath this wall, shoving the lath through behind the string and nailing them below and above the stair. When this is done, the string may be fastened to the studding by nailing through the string beneath the treads and risers.

Care must be taken, however, that the string lies well against the studding—even if it is necessary to put in thin blocking strips at each nailing place. Otherwise, there is danger of breaking the glue joint, where the treads and risers fit into the string.

There are several methods of **joining the risers and treads**. In Fig. 76 are shown the various methods of doing this. Some are considered better than others, but that is much a matter of opinion.

At **A** is shown how the risers come down upon the tread, and the tongue on the front side

of the riser fits into a groove in the tread. If the fit is not good, there will be a crack in the front of the riser, which will become more apparent as the stair becomes older.

At **G** is another method. This is the common way when there is a rough string under the middle of the stair. At **f** is a similar arrangement except that the riser goes down behind the tread.

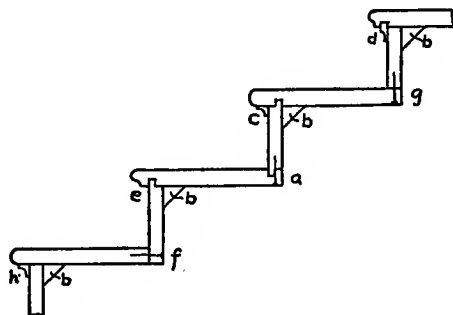


Fig. 76. Methods of Joining Risers and Treads.

All of these joints should be nailed or fastened with wood screws.

At **e** and **d**, Fig. 76, are shown two ways of joining the tread and riser at the nosing. They are practically the same, the one at **d** having the moulding set into the groove; while at **e** a tongue is cut on the front of the riser to fit into the groove in the tread. In **d** and **e** there is the danger of having the nosing break off, because the tread, unless made of a rather thick piece of wood, may crack over the groove.

In **c** and **h** are two more satisfactory methods. At **c** a tongue is cut on the back edge of the riser, and the groove in the tread is as a result farther back from the front of the tread than in **e** and **d**. A small moulding is put under the nosing, and there is little danger of the nosing breaking off. In **g** no groove is cut in the tread, so that the full strength of the tread is preserved. In this case, however, it is almost necessary to put a triangular strip, **b**, as shown, so as to fasten the tread and riser together. This strip may be put on with good results in all cases, as it will stiffen up the work considerably.

Open-String Stairs. Now taking up the stair which has one side open—that is, the string farthest from the wall, which is the face string—Fig. 77 shows a plan and side elevation of such a string. The treads and risers are housed the same as in the other stair, but the string must be made somewhat differently to fit the conditions.

W.S. shows the wall string; **R.S.** the rough string placed there to give the structure strength; and **O.S.** the outer or cut string. At **a,a**, the ends of the risers are shown; and it will be noticed that they are mitered against the vertical or riser line of the string, thus preventing the end wood of the riser from being seen. The other end of the riser is in the housing in the wall string. The outer end of the tread is also mitered at the nosing, and a piece of stuff

made or worked like the nosing is mitered against, or returned at the end of the tread.

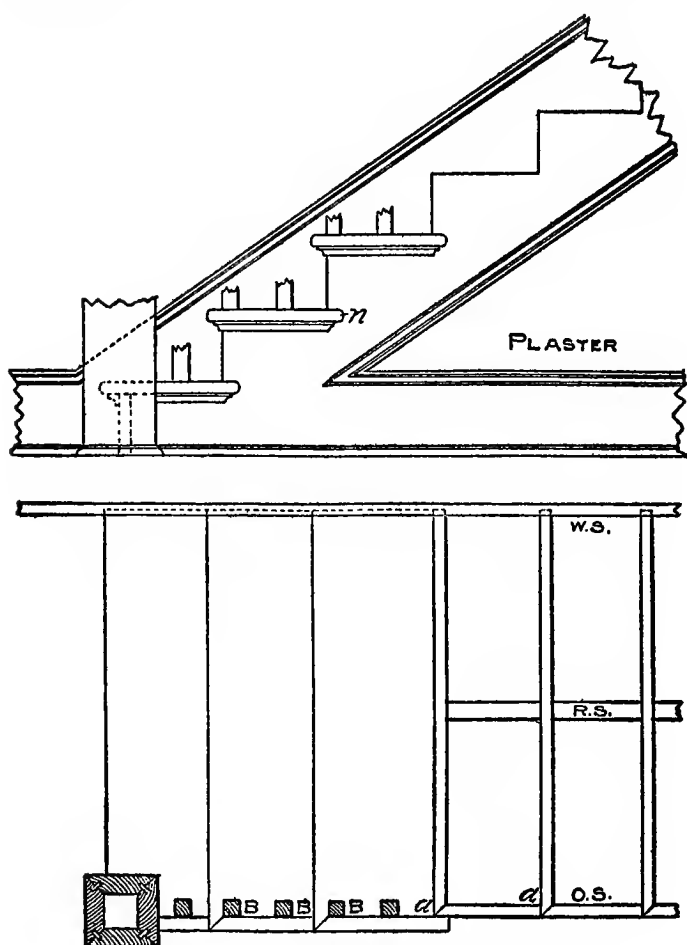


Fig. 77. Plan and Elevation of Open-String Stair.

The end of this returned piece is again returned on itself back to the string, as shown in the

upper portion of the cut, at **n**. The moulding, which is a five-eighths cove in this case, is also returned round the string and into itself.

The mortises shown at the black points, **B, B, B**, etc., are for the balusters. It is always the proper thing to saw the ends of the tread ready for the balusters before they are attached to the string; then, when the time arrives to put up the rail, the back end of the mortise may be cut out, when the tread will be ready to receive the baluster. The mortise is dovetailed;

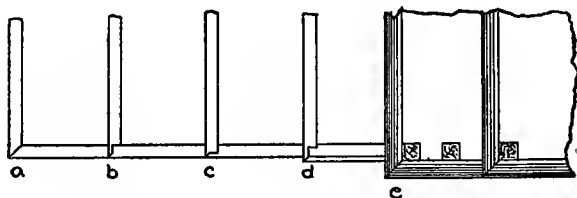


Fig. 78. Miter Joints for Open Stair Work.

and, of course, the tenon in the baluster must be made to suit. The tread is finished on the bench; and the return nosing is fitted to it, and tacked on so that it may be taken off to insert the balusters when the rail is being put in position.

In an open stair, and especially one in which the treads project over the face of the string, it is desirable to have the work rather well finished in order to present an attractive appearance, one that will harmonize with its surroundings. In the modern dwellings of to-day, the

front hall or the stair hall is made larger than is necessary to accommodate merely the stair. The reception hall and stair hall are combined, and appropriately so; but it is necessary then to finish the room more elaborately than if it were used as a stair hall only. One thing to be provided for is that no end of any piece of wood shall show. In order to accomplish this in the riser, the rise in the string is mitered, and the end of the riser is cut on the same miter.

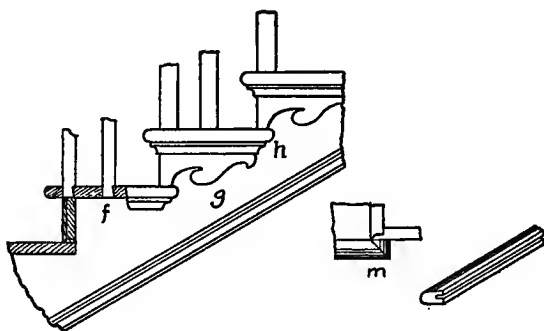


Fig. 79. Construction and Finish of Open Stairs.

In Fig. 78, the different ways of mitering are shown. At *a* is a miter of forty-five degrees cut on both the string and the riser. This is the simplest method and the one more often used because of the saving in time. At *b* the riser has a shoulder to fit against the string, and only the outside is mitered. This makes a more rigid joint. At *c* the miter is cut at the front as at *b*, and the string is cut out to receive the remainder of the riser. Here the riser gets a

stronger bearing upon the string; while in **b**, only the front of the riser gets a bearing.

When it is desired to make the face of the string more ornamental, a thin bracket is placed against the string, as shown in Fig. 79, at **g**. When this is done, the riser must be longer than the thickness of the bracket. This is necessary because the bracket is mitered to the riser. The cove under the nosing is placed upon the bracket, just as it is returned upon the face of the string in the case where the bracket is not used. The lower front part of the bracket rests upon the returned nosing of the tread.

In the best grade of work the brackets are glued upon the string, but ordinarily they are nailed on with brads, which are then set and the holes filled with putty.

The return nosing is mitered at the front of the tread to fit the nosing over the riser. At the back of the tread, a return is cut as seen in Fig. 79, at **m**, which is a plan of **h**.

After the balusters are in place, the return nosing is nailed to its proper place, and the nail-holes filled with putty; or a groove may be cut into it, as shown at the right in Fig. 79. On the end of the tread, as seen in Fig. 80, at **a**, a similar groove is cut and a thin piece of wood or tongue glued into the groove in the end of the tread. This tongue should properly have the grain of the wood run in the same direction as the grain in the tread. The return nosing is then fastened into place by gluing

the tongue and the groove, and driving the nosing to a tight fit.

Another way to fasten the nosing is to cut notches on the under side of the tread, and put wood screws through into the return nosing.

A glance at these figures will show how the balusters are dovetailed into the tread. The

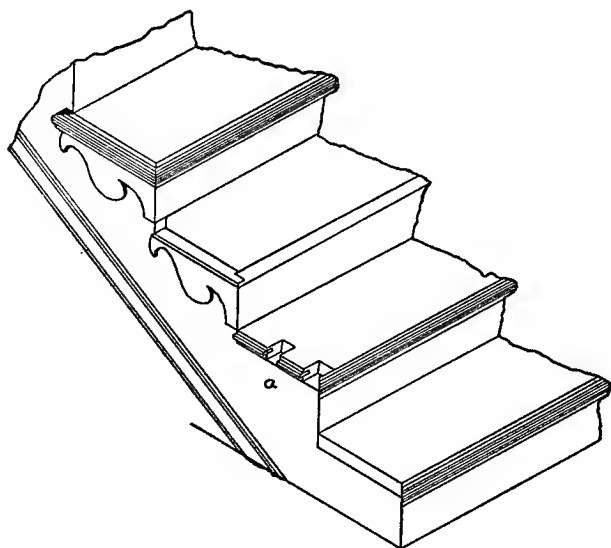


Fig. 80. Construction and Finish of Open Stairs.

outside of the baluster should be flush with the face of the string; and where a bracket is used, this must be considered the face of the string.

Various Stair Arrangements. There are many ways of building stairs; what may be suitable in one place, may not be in another. Whatever style is wanted, however, should be care-

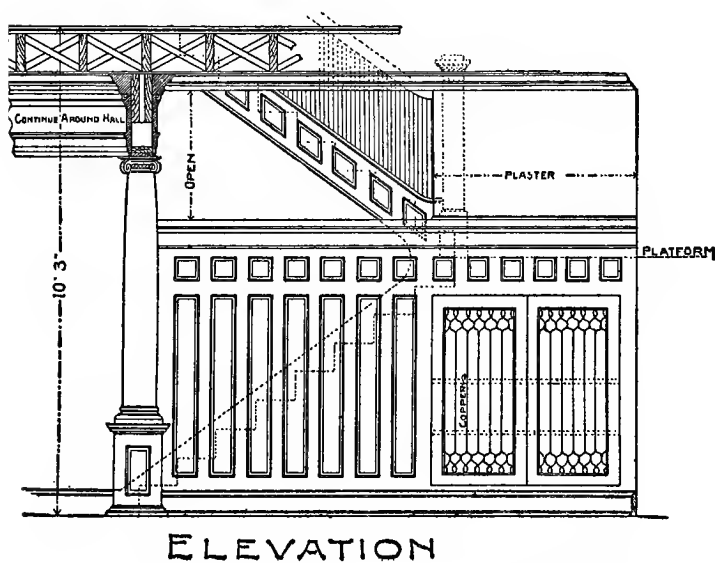
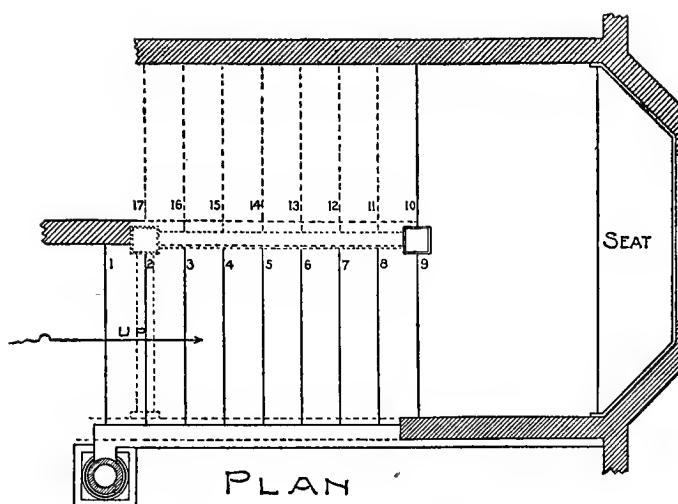


Fig. 81. Desirable Stair Arrangement for Residences.

fully laid out, so that no part will be stuffy or crowded.

Fig. 81 shows a very pretty arrangement for a residence. It is neither an open nor a boxed stairway. It is planned to lead from the reception hall adjacent to the library. It is built of quartered oak; the high paneling next the library side gives it the appearance of semi-privacy, while the top of the paneled wall has a wide shelf on which to set bric-a-brac, if desired. The space from floor to floor is 10 feet 3 inches; and, as there are 17 risers, it leaves $7\frac{4}{17}$ inches for each rise. The platform coming at the ninth rise is 5 feet $5\frac{2}{17}$ inches from the main floor. The space under the platform is not lost, for on the library side a commodious bookcase is arranged with art glass doors; while, on the other side, drawers are made to fill the space; these open into a closet adjacent to the dining room.

In constructing an open stairway, where the stairs have a landing and the lower part of the stairway is open, while the upper part is closed from the landing to the floor, the angle newel in the intersection of the two flights at the platform should be omitted. In place of it, continue the portion enclosing the upper flight far enough into the platform as shown at *a*, Fig. 82, to receive the stringer of the bottom flight. At the angle, the portion is shown closed with stuff equal in thickness to the thickness of the stringers; and the stringer of the closed upper

flight, which is on the inside of the portion, will butt against the casing. The rail of the bottom flight will be fastened to the casing above the bottom stringer; while the rail for the upper flight will have to be fastened on brackets to

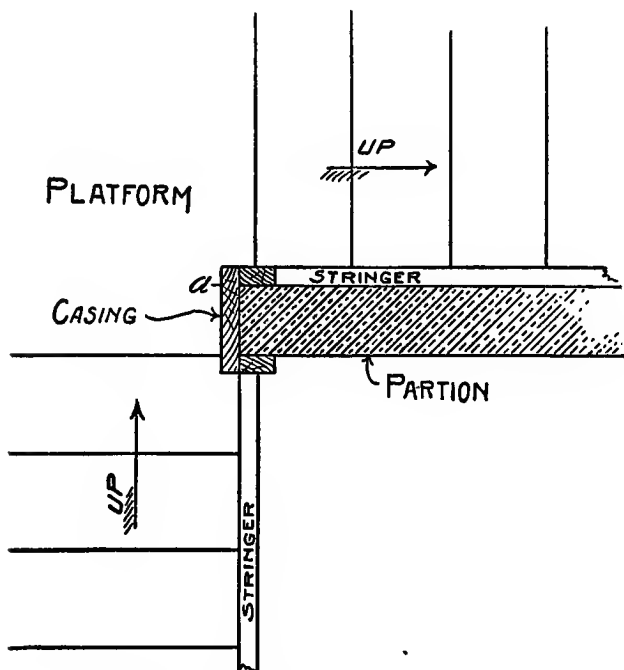


Fig. 82. Arrangement for Platform Stairs.

the side of the portion, and is known as a **wall rail**.

Winders should never be used if it is possible to avoid them, their great objection being the narrowness of the tread along the line of travel, which is a line generally taken about 14 inches

from the rail. Where they are absolutely necessary, it is better that the rail be made continuous with the ends of the treads in the form of a cylinder, and that the risers do not radiate from a common center.

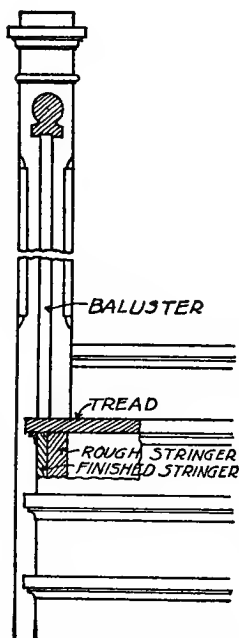


Fig. 83. Relation of Post, Rail, and String.

Where angle posts are used, care must be taken so that they are centered on the carriage with the rail centered on the angle posts. This should bring the outside balustrade flush with the finished string, as shown in Fig. 83. The height of the rail should be about 2 feet 4 inches, or 2 feet 6 inches above the tread, measured on a line with the face of the riser; and on landings the height of the rail should be 2 feet 8 inches above the floor.

In these days the mills are very accommodating, and will, as a rule, work out any stair problems that the carpenter may have.

The principal thing for the carpenter to consider in planning a stair is to see that he has sufficient room to get the required number of steps and ample head room. If he is sure of

these, the mill will usually do the rest of the designing for him.

In constructing the rough framework for the stairs, care must be taken to have the stringers sufficiently strong to carry the weight. They

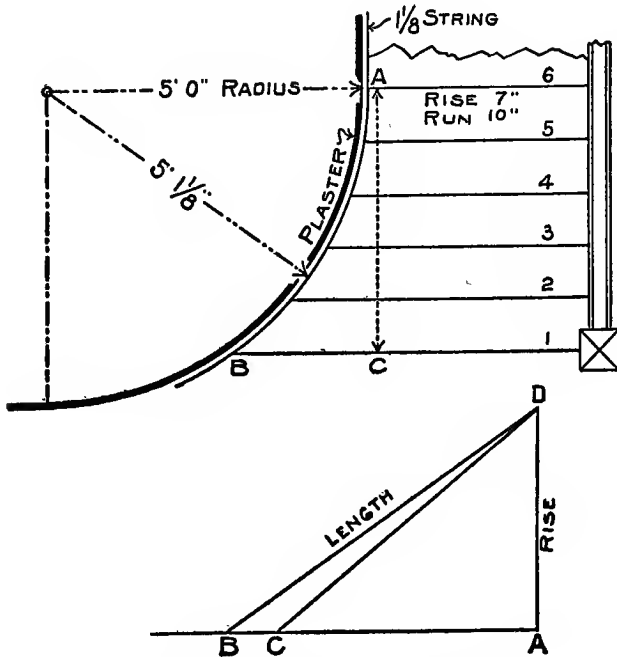


Fig. 84. Stair against a Circular Wall.

should never be less than 6 inches in the narrowest part. As a rule, it is best to put all of the rough framework for the stairs in place before the lathing and plastering is done.

Stair to Fit Circular Wall. It is sometimes

a problem to lay out the string to fit around a circular wall, as for the stairs shown in Fig. 84. This may be done as follows:

Measure the curve of the wall, as from **A** to **B**, taken at the floor line. This length will correspond with the natural run, as from **A** to **C**. To this, set up the rise of the stairs, which in this case would be $6 \times 7 = 42$ inches, as from **A** to **D** in the diagram; and **D** to **B** will be the required length of the string. The back of the string can then be kerfed the same as

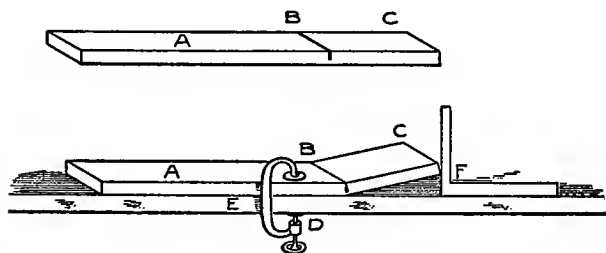


Fig. 58. To Kerf a Circular Member to Any Desired Radius.

for the ordinary base or for a curved riser; but the kerfs must be cut parallel with the risers.

These diagrams should be laid off full-size, from which accurate measurement can be taken.

Kerfing a Riser. Saw kerfing is a simple thing when understood. By the method shown in Fig. 85, a piece of wood may be bent to any radius, no matter how thick or thin the material may be, or how thick or thin the saw may be.

If for a circle to bend, say, three feet in diameter, take a piece of stuff about one and

one-half inches wide, as **A**, and of the same thickness as the material to be used. Now take the radius of the curve desired—in this case eighteen inches—and make a kerf that distance from the end, as **BC**, to the depth required.

Next clamp **A** down to the bench **E** close to the kerf and raise the radius end till the cut comes together tight, and take the height with the steel square **F** from top of bench to under side of piece. This will give the space between each kerf to bend the riser or any other curved member to the radius desired.

Short Cuts in Stair Work. Short cuts and simple methods of laying out work are always interesting and valuable. Here is a method for laying out strings for a plain, straight flight of stairs.

The sketch, Fig. 86, shows how to get the lengths and cuts—that is, by using the plumb and level at each end of the string, and scribing as at **a** and **b**. Then, by changing the string end for end, it will be found to fit.

First find what rise is wanted; this depends on the space available. If there is sufficient room, steps with 7 or $7\frac{1}{2}$ -inch rise are good. Make, for example, the height between the floors 9 feet 2 inches, or 110 inches. Dividing this by 7 gives $15\frac{5}{7}$ or 15 spaces; and by dividing 110 by 15 will give the exact rise, which is $7\frac{1}{3}$ inches.

Since there is plenty of room on the floor for the run, the tread can be made any chosen

width. Suppose 9 inches is the desired width. By multiplying 15 by 9, the run on the floor, 11 feet 3 inches, is found, at which point it will

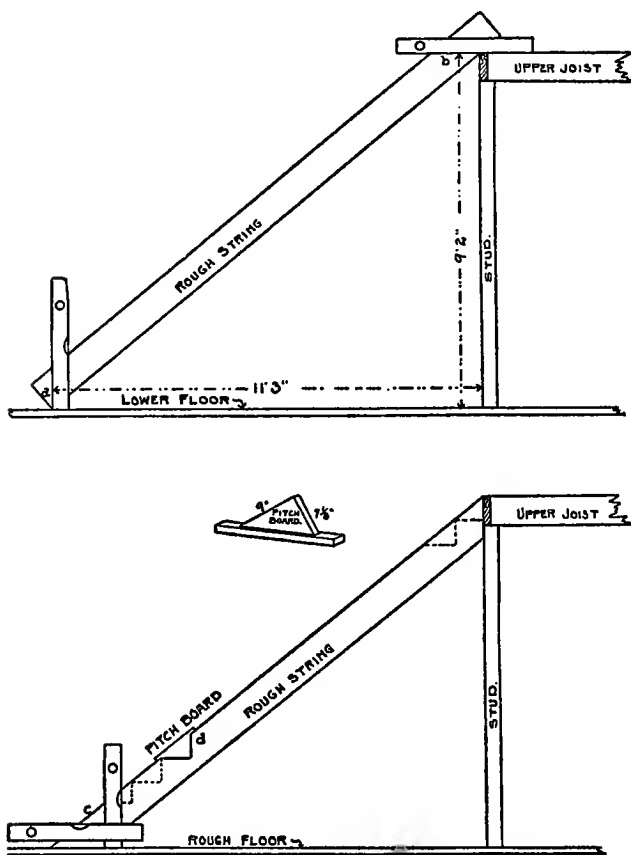


Fig. 86. Short Cut for Laying Out a Straight Stair.

be seen that the lower end of the string has been placed. Then proceed, as already stated, with plumb and level.

After obtaining these cuts, lay the string off into 15 equal spaces with dividers, and again use the plumb and level in laying off the first notch, as shown at **C**. Then carefully cut this out and use the piece for the pitch-board, from which proceed to lay off the rest of the string, as shown at **d**.

Paneled Moulding for Stair Finish. Moulding applied in panels to the stair string makes a very effective finish. In Fig. 87 is shown the face of a stair string with diamond-shaped panels. To begin with, all cuts of mouldings of this kind should be made in a miter box. Then the question is, how to find the angle on the square by which to make the proper cut on the miter box.

In the lower part of the figure is shown an enlarged panel with the application of the square for finding the miter line, or the line of juncture of the moulds. In this, it will be seen that there are two angles in the panel. The sharper one is known as an *acute*, and the other as an *obtuse* angle. The former is less than 90, and the latter more than 90 degrees. However, by this method, finding the miter line for one, also gives the other, because when the blade is giving the miter line for the acute, the tongue is giving it for the obtuse.

In this figure the application for both is shown, and it will be seen that the blade and tongue of like squares are resting parallel with each other. Now, as to the placing of these

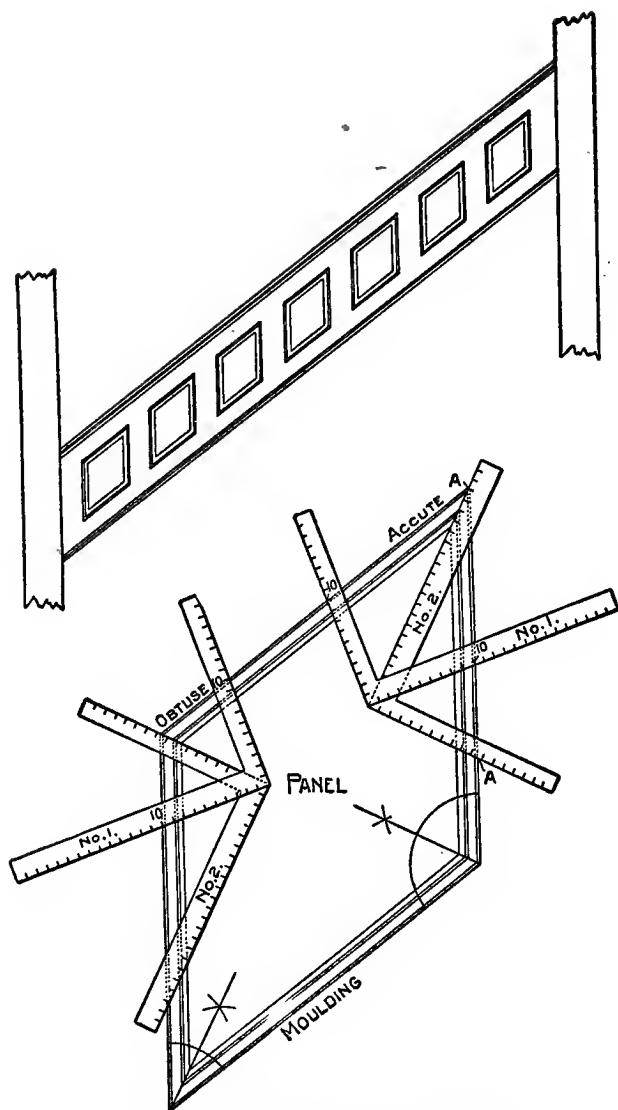


Fig. 87. Paneled Finish for Stairs.

squares to get the proper angle, simply take like figures on square No. 1, say 10 and 10; place them so that these figures are at the edge of the panel, as shown, and with the heel of square No. 2 resting on the former, and with the blade intersecting the corner of the panel, the figures intersected by the edge of the panel, as at **AA**, will be the figures to use to make the cut on the miter box for either angle.

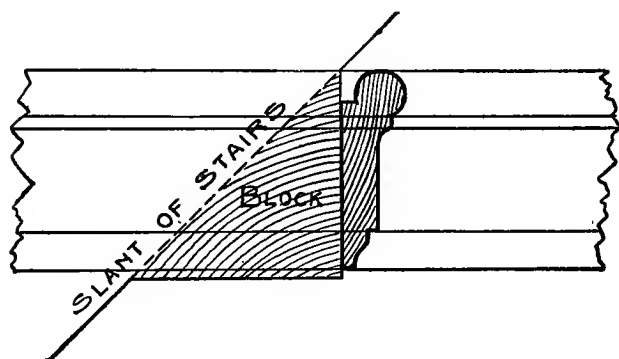


Fig. 88. How to Apply Moulding under Stairs.

The same results may be obtained by bisecting the angle with the compass, as shown in the two lower corners of the enlarged panel in the lower part of Fig. 87, and setting a bevel square to the angles thus formed. This will give the miter. A more common way, however, among workmen, is to take a block of any convenient width, and, with parallel edges and with it set each way in the corner, mark along the outer sides, the crossing of these lines will be the point for the bisecting or miter line.

Picture Moulding under Stairs. The right way to put up picture moulding, where there is a stair carriage running up through the room, is a point that sometimes gives trouble, the intersection at the out corner being the cause.

In places of this kind, the moulding pieces will not member, because they are resting at different angles. To have them member, it is

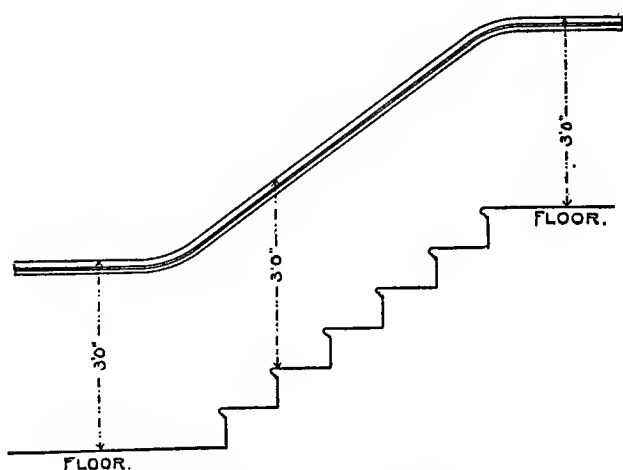


Fig. 89. Height of Wainscoting.

necessary to work a special mould to go under the slanting part of the stairs. Of course, this piece would not be of any use further than to have a continuous mould running around the room. The only way the regular mould can be made to member is to block out as shown in Fig. 88. The back of the mould in that case sets perpendicular, and the angles are the regular 45-degree miter.

Height of Stair Wainscoting. Wainscoting running up the stairs should correspond in height to the wainscoting on the walls. The accepted custom is to continue the same height up the stairway as is wanted on the level part. The measurement should be taken at a point directly above the face of the risers, as shown in Fig. 89.

CEMENT PLASTER HOUSES

Relative Cost and Desirability. Cement siding has grown wonderfully popular in very recent years. The artistic effects which its use makes possible have had much to do with its ready reception by architects, builders, and owners. It furnishes the added advantage of being fireproof.

When properly applied, it is economical in that it will outlast wood or shingle siding and will not require constant painting to keep it from deteriorating. The claim is made, that a good cement exterior will wear better than stone, and will become better both in color and in weather-resisting qualities with age.

The first cost of a cement siding is somewhat in excess of wood siding, painting not considered; but with the ever-growing scarcity of good, clear pine siding, this margin is rapidly diminishing.

Siding determines the life of a house, and the denuding of the pine forests of the United States makes it imperative that a new material

be found to take the place of wood siding. No one realizes this more than the carpenter, who has seen the changes which have taken place in the grading of lumber these last twenty or more years.

Time was when a C grade of pine siding was good enough for almost any house; but the sappy, knotty, blue stuff which passes for that grade to-day, and the advanced price of this, are sufficient to make the conscientious builder serious. The tendency of sapwood to push off the paint, and the readiness with which it decays, make it questionable whether its cheapness, as compared with other grades and other materials, is not often overestimated.

The discovery, in almost every part of the country, of the raw materials from which good Portland cement is made, and the consequent rapid growth of mammoth cement mills, are bound to make cement plaster more available than ever before. The steady lowering in the price of Portland cement which has accompanied the development of improved processes in America, has already made its cost very low as compared with the price formerly paid for the imported article. It must be admitted that there has been no small amount of prejudice aroused against the use of cement siding, because of past failures. It must also be admitted that the problem of its use is not entirely solved to-day. It is a fact, however, that its use is understood well enough, and its success suffi-

ciently demonstrated, to warrant its use on innumerable costly buildings throughout the country. The manner of mixing, the proportion of parts, the coloring, the application and care of the walls after the plaster has been applied, make of it a problem which requires expert skill in handling. An inexperienced workman—unless he gives the matter the utmost careful study, and acquaints himself thoroughly with the methods of approved practice—will be certain to come to grief, causing regret to the

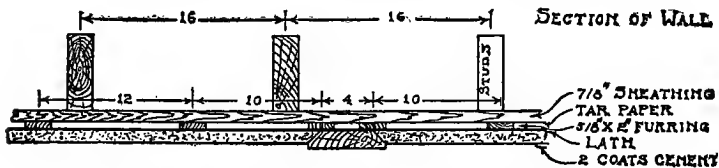


Fig. 90. Wall Section, Plastered House, Half-Timber Effect.

owner, and creating prejudice against cement as a siding material.

The effects which may be obtained are various and interesting. Cement siding may be colored or left natural. It may be finished smooth like the ordinary sand finish of common plaster, or it may be stippled. Rough-cast finish is obtained by throwing pebbles mixed with thin cement upon the wall before it has had time to harden thoroughly. Cement siding may cover the house entirely; or it may be combined with wood, brick, or stone to form the wall. A very popular effect is obtained by using wood siding

for the lower, and cement plaster for the upper part of the house.


Artistic effects in English half-timbered houses are due to the ease with which the spaces may be proportioned and arranged. There is an added advantage in the half-timber, in that the material in the smaller spaces is not so likely to check with the expansion and contraction caused by atmospheric influences.

Framing for Cement Plaster Houses. The construction of the frame for a cement exterior differs but slightly from that for wood siding. Usually the sheathing is put on the outside of the studs (see Fig. 90). Upon this is tacked tar building paper. The furring comes next. The strips are $\frac{1}{2}$ by $2\frac{1}{4}$, $\frac{5}{8}$ by 2, or $\frac{7}{8}$ by $2\frac{1}{2}$ inches, and are nailed vertically. They are spaced twelve inches from center to center for the lath, irrespective of the position of the studding. The thicker furring is used when more air space is desired than can be obtained with the thinner strips.


That there may be plenty of clinches for the plaster, the wood lath are but one inch wide. They are the usual length, however, and the furring strips are spaced one foot from center to center, just as for metal lath. Fig. 91 gives sectional views of a plain plastered wall and of a half-timbered wall, showing details of construction.

Window and Door Frames. Window framing for cement plaster houses should be set as de-

tailed in Fig. 92, which shows the use of expanded metal lath secured to strips. This gives a better clinch for the mortar than if the lath were stapled directly to the sheathing; besides, it creates an air space and provides a wider jamb at the windows, which is essential where large plate glass is used, necessitating

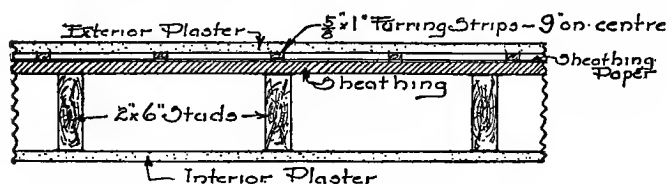

PLAIN PLASTERED WALL

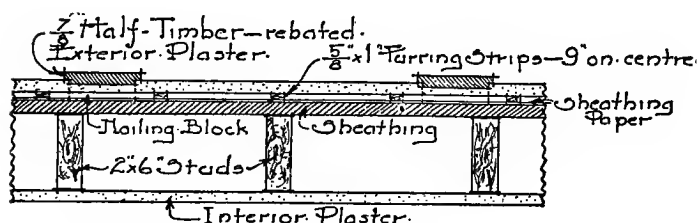

HALF-TIMBERED WALL

Fig. 91. Wall Sections—Cement Plaster Houses.

heavier sash than for the common double-strength glass. It is a good idea to plow or groove out the corner of the frame so that the mortar will extend under the edge of the frame. The flashing of the caps may be put on in the usual way, and plastered over. Of course it would be much easier, so far as the plastering is

concerned, to set the frames after the plastering is done; but this would not make so tight a job, especially as to the prevention of leakage at the top. The framework should be very substantial; otherwise settlement or vibration will crack the plastering.

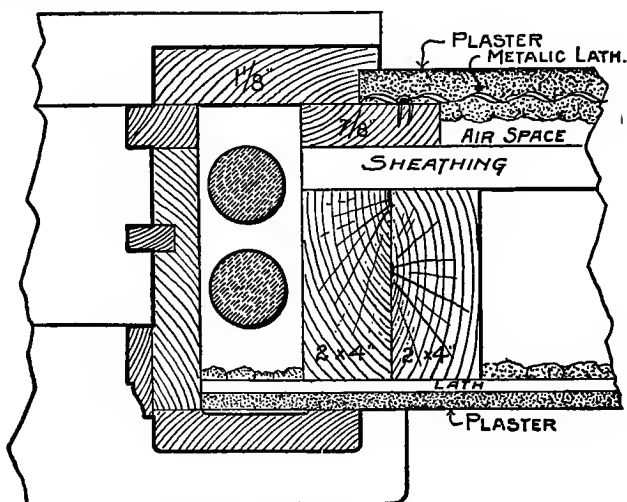


Fig. 92. Framing for Windows, Cement Plaster House.

Casement Window Construction. Fig. 93 shows the construction of an inward-opening casement; also the manner of making and applying stucco to the exterior surfaces of frame walls.

The only serious objection to the use of casement windows in general, is that it is very difficult to make them proof against rain and wind; and with casements opening inward, the difficulty is much greater than with those open-

ing outward. This detail shows as simple a method as can well be employed in constructing an inward-opening casement, though it is not always thoroughly weather-tight during driving rainstorms, when the house is in an exposed location.

The frame is made out of two-inch stock, rebated for the sash, for outside blinds or storm sash. The channel at **B** on both jambs of the frame, is for the purpose of catching any water that may beat in between the sash and the frame, and for conveying it downward to the sill, on which it discharges in the manner indicated by the arrows at **B**. A filling piece **A**, of the same material and finish as the adjoining interior woodwork, is placed on the inner edge of the frame, so that none of the frame will be exposed in the room.

The sill is usually the weak point of inward-opening casements, owing to the fact that whatever rebate is made for the sash, must necessarily have its lower edge on the inside of the window, so that any water which once enters between the lower rail of the sash and the sill will leak into the room. To prevent the water from entering at this point, an undercut drip is provided on the lower rail of the sash, so that any water which may trickle down the outside surface of the sash will drop to the sill from the lower edge; and the sill has a hollow in the raised portion just under the sash, for the pur-

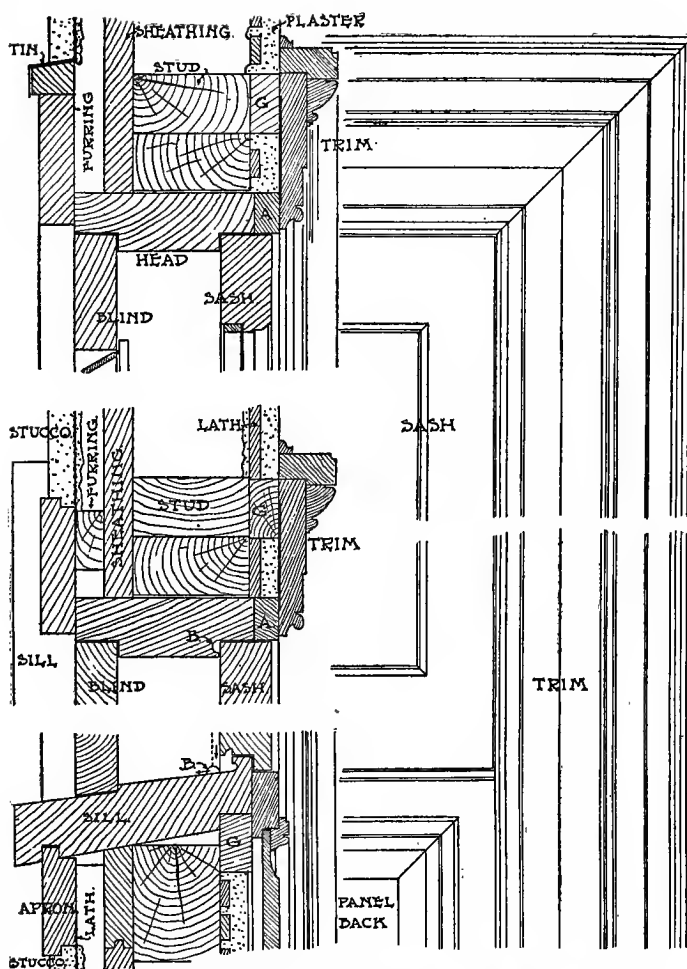


Fig. 93. Casement Window in Cement Plaster House.

pose of casting off any water which may be driven against it in severe weather.

The sill is rebated for the outside blinds, and has an apron which is tongued into it.

The wall is frame, constructed in the usual manner of two by four-inch studs placed sixteen inches on centers, and doubled for jambs, heads, and sills of openings. It is lathed and plastered on the inside; and grounds **G** are set as a nailing for the inside finishing woodwork.

The trim is moulded and hollow-backed and mitered at angles, and has a face-mould. It finishes on wood plinth blocks of the same height as the adjoining base; and underneath the window a moulded panel-back is provided. Walls should be plastered behind panel-backs, but the finish coat may be omitted. Panels should be set loose to allow for expansion and contraction, and the mouldings should be nailed to the stiles and rails of the panel-back. Also, the joint of panels with the stiles and rails should be so constructed that the panel may be readily removed by taking off the moulding. This is very essential, as panels frequently need replacing, owing to cracks and warping.

In order that the wall may be plastered behind the panel-back without increasing its thickness, the studs between the floor and the sill are three by four inch, set flatwise.

The exterior of the wall is sheathed with matched boards surfaced on one side, and is then covered with waterproof building paper, well lapped and tacked. The surface is then furred with one by two-inch strips placed twelve inches on centers and well nailed. Metal lath is then

applied, well lapped, stretched, and stapled to each furring strip.

To this lath the first coat of stucco mortar is applied, and it should be well troweled under pressure to secure a good "key" on the lath. A good mortar for this coat is made of one part domestic Portland cement, one part shell lime, and five parts of clean sharp sand. This coat should be allowed to dry slowly, and, if necessary to accomplish this, should be frequently sprinkled with water through a hose having a fine sprinkling nozzle, for the first twenty-four hours. The surface should be lightly scratched, so as to provide a "key" for the second coat.

A good mixture for the second or finish coat is made in the proportions of one part domestic Portland cement, one part shell lime, and five parts of clean white marble dust. This dust should not be the refuse of a marble quarry, but should consist of clean white marble specially ground for stucco work. This coat should be allowed to dry slowly, being dampened if necessary, similarly to the undercoat.

It is essential that the casings, cornice, base, and beltings be so made that the plaster shall be keyed to it. Strips of wood for the English half-timber effect are beveled on their edges as indicated in Figs. 90 and 91. Casings may be similarly beveled on their outer edges except the head, which is tinned so as to turn the water. A more common method of making casings is to run a moulding entirely around the casing,

allowing it to project over the outer edge about five-eighths of an inch. Such casings have an "apron" similar to that used on the inside.

Metal and Wood Lath. The question of the relative merits of metal and wood lath is one that does not seem to be fully settled. In fact, both metal and wood have their advantages and their disadvantages. Time will tell. At present both are used in about equal proportion, each having advocates with very decided opinions.

The advantage most frequently urged in behalf of metal lath is its rendering the wall fireproof. Its greatest disadvantage is its liability to rust. This disadvantage, it is claimed by manufacturers, is overcome by having the lath back-plastered so that the meshes are completely embedded. This does not fully protect the metal, however; and to overcome the difficulty, metal lath galvanized or coated with protective paint is being placed on the market.

The advantages and disadvantages of wood lath are too well known to the reader to need repeating. The poor quality of the lath now generally found on the market, which is becoming poorer from year to year, and their liability to shrink, warp, and buckle, render them far from ideal. The decrease in their width, with the consequent more frequent clinches, and their cheapness, have served to keep wood lath to the front in the outlying districts where fireproofing is not so much insisted upon.

Cement Plaster—How to Mix and Apply. Many manufacturers of cements provide directions for the proper proportioning of their materials. It is taken for granted that their directions are the results of experiments and observations with their products, and they should therefore be considered reliable.

The following, from the annual report for 1904, of the Ohio State Geologist, will be of interest:

First coat, one-half inch thick. For best results, the wall should be furred off with strips put on vertically twelve inches apart and well nailed. On these, fasten firmly metal lath. Add fiber to the mortar for lath work. Wet thoroughly the surface to be plastered. Mix one part of non-staining Portland cement with two parts medium sand, one part fine sand and one-half part lime flour. When this coat has set hard, wet the surface thoroughly, and apply the second coat with a wooden float.

Second coat, one-quarter inch thick. Mix one part cement as above, one part fine sand, and two parts medium sand or crushed granite. Before the second coat has set hard, it may be "joined" to present the appearance of stone work. A small addition of lime flour increases the adhesion of the mortar.

The finished surfaces should be protected for at least two weeks with canvas curtains or bagging saturated with water.

Defects are liable to appear on cement plastered walls, (1) if too much cement is used; (2) if not applied with sufficient moisture; (3) if not troweled sufficiently; (4) if not protected from variations in temperature and draughts of air.

To this a prominent manufacturer of metal lath adds:

In some sections a departure from this specification has been found preferable. It is the practice in the New England States, for instance, to staple metal lath directly to the studding, and then plaster with one heavy coat of Portland cement and lime mortar mixed, using one barrel of best Portland cement and three casks of hair and lime mortar made up in the usual manner, as if it were to be applied to wood lath. The lime mortar to be divided into batches so that the Portland cement can be added in small quantities just before using, that the cement may not have time to harden or set before the plasterer can use it.

After this coat has hardened sufficiently, it is back-plastered on the key formed by the first coat, putting this back-plaster coat on with the same kind of mixture as the first coat on the outside, and covering the lath by at least one-half inch.

After these two coats have hardened sufficiently and dried out, the second or finish coat can be put on, either by slapdashing, or putting on one heavy coat with trowel finish, or applying any of the various attractive finishes which are possible by the use of cement.

The mixture of this final coat depends on the kind of finish desired; but it is usually made with one barrel of Portland cement to two barrels of coarse, sharp sand. If a light color is desired, a hodful of lime putty is added to the mixture; or, if a very rough finish is wanted, a proportion of pebbles or crushed stone is mixed with the sand and cement. It is difficult to give a certain formula for the finishing coat, as nearly every plasterer or architect has his own ideas as to this finish.

The specification last mentioned is the one generally used on the cheaper grades of houses, from \$5,000 to \$7,500. On the higher grade of

work, the plastering is done in four coats. There is first a **scratch coat**, which simply fills the meshes of the lath; second, the **backing-up coat** on the inside; third, what is called the **brown coat**, which is a heavy coat applied directly to the scratch coat, and which is floated or brought up to a straight, smooth surface, and left somewhat roughened to receive the final coat. The brown coat is often omitted on the cheaper class of houses. It is usually mixed with one barrel of Portland cement to two barrels of sand, and a hodful of putty.

It may be added that improper gauging of cement and lime often causes an uneven color. Experienced plasterers overcome this easily. One who has done much of this says he thins down his lime putty so that it is so watery as to be used in mixing the cement.

The accompanying table shows the area which can be covered by one barrel of Portland cement mortar of various mixtures, with coats of various thicknesses.

AREA COVERED BY MORTAR.

Mortar Produced from One Barrel of Portland Cement Mortar (3.8 cu. ft. Cement Paste). (No Lime)

COMPOSITION OF MORTAR	THICKNESS OF COAT	AREA COVERED
1 Cement, 1 Sand	1 inch	67 sq. ft.
	$\frac{3}{4}$ "	90 " "
	$\frac{1}{2}$ "	134 " "
1 Cement, 2 Sand	1 inch	104 sq. ft.
	$\frac{3}{4}$ "	139 " "
	$\frac{1}{2}$ "	208 " "
1 Cement, 3 Sand	1 inch	140 sq. ft.
	$\frac{3}{4}$ "	187 " "
	$\frac{1}{2}$ "	280 " "

Finishes and Tinting. A great variety of finishes is possible. The **stippled effect** is very pleasing; also the effect obtained by throwing small **pebbles** at random into the plaster before the second coat has set. An effective **rough cast** is obtained by mixing cement and water at a thick fluid consistency, and then adding fine washed gravel, screened through a $\frac{3}{8}$ -inch-mesh screen. When mixed it is ready for application, and may be applied as a third coat on a rough-coated surface, or directly to a scratch coat. The result is most pleasing to the eye, and for a good wearing surface there is none better.

The **color effects** obtained with cement are many and are beautiful. Most of these effects are obtained, however, not as might be supposed, by mixing the dry colors in the cement, but by painting the cement after it has become dry and hard. There are two very good reasons for not mixing the colors in the cement. First, it is almost impossible to mix the mass so that it will dry with an even or uniform color. Second, most coloring matters weaken the cement. No coloring containing acids or anything that will act upon the alkalies in the cement, can be used; and vegetable or oil colors impair the strength of the cement.

The accompanying table indicates the mineral coloring materials which may be used for giving various colors and tints to cement mor-

tar, and the proportions of coloring matter to cement.

MATERIALS USED IN COLORING MORTARS.

COLOR	MINERAL	POUNDS COLOR TO 100 POUNDS CEMENT	POUNDS COLOR TO BARREL OF CEMENT
Gray.....	Germantown Lamp Black.....	$\frac{1}{4}$ to $\frac{1}{2}$	2
Black.....	Manganese Dioxide.....	12	48
Black.....	Excelsior Carbon Black.....	2	00
Blue.....	Ultramarine.....	5 to 6	20
Green.....	Ultramarine Green.....	6	24
Red.....	Iron Oxide.....	6 to 10	24
Bright Red....	Pompeian or English Red.....	6	24
Sandstone.....	Red-Purple Oxide of Iron.....	6	24
Violet.....	Violet Oxide of Iron.....	6	24
Brown.....	Roasted Iron Oxide or Brown Ocher.....	6	24
Yellow or Buff	Yellow Ocher.....	6 to 10	24

FRAMING FOR VENEER AND MASONRY HOUSES

Various types of masonry veneer construction have frequently been employed in many parts of the country, especially in the East, and have gained much popularity. Brick veneer has been most used, though of late years concrete blocks and tile have come into use for veneering purposes to some extent. The advantages of any of these systems over the solid masonry wall, for residence work, seems to be a lower first cost and a drier wall; while as compared with all-frame construction, the veneer is warmer, more durable, and presents a more dignified appearance.

Brick Veneer Wall Construction. In the main, the timber framing to be used with brick veneer construction is identical with the best

practice for all-frame houses. A number of points, however, require special attention. The relation of the masonry veneer coat to the studing, and the proper bonding of the masonry and framework, one to the other, is one of these points.

Consider a house which is to be constructed of a wooden frame, sheathed diagonally with

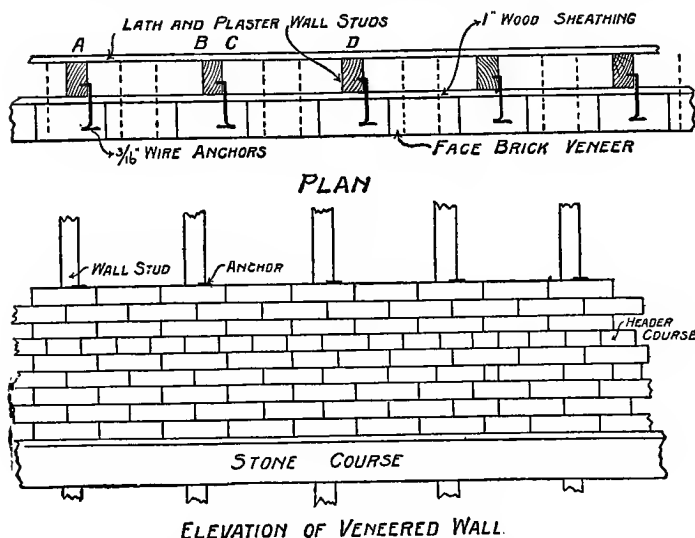


Fig. 94. Brick Veneer Wall Construction, Showing Bonding.

inch boards and finished with a brick facing of veneer of 4 inches. In order properly to veneer the wooden or timber work, it is necessary that the frame should be kept at least 6 inches from the outside face of the foundation wall. A water-table course of stone should be carried around above the cellar absolutely level, in order

to support the upper structure of brick. Therefore the foundation wall must not be less than 20 inches thick.

The water-table having been set and the frame erected to the exact measurements, the first five courses of brick may be laid all the way around, as shown in the elevation, Fig. 94. After this is done, wire wall-anchors of the shape indicated upon the plan (which, by the way, can be purchased at any hardware store) are driven into the sides of the studdings 16 inches apart, and laid flat on the top of the bed recourse so as to tie the brickwork firmly to the wooden frame. At the corners, the anchors should be plentifully used.

Should it not be desirable to use the anchors and it is found necessary to make a stronger wall, a course of brick headers, English bond, may be introduced on the sixth course, allowing the headers to pass through the thickness of the studdings and filling up the space between them, as at **AB** and **CD**, with the rough brick. This method gives practically an 8-inch wall, and makes a warmer house, as old brickbats can be used to great advantage. Should a Flemish bond of headers and stretchers be employed, then the bricks should be placed as indicated by the dotted lines shown in the plan. The thickness of the anchors desired must not be in excess of the brick mortar joints.

Should the building be of concrete, veneered with brick, it will be necessary to lay up the

brickwork first, before backing-up of the concrete. All measurements must be carefully watched so that the sills, lintels, bond courses, etc., may be at their proper heights and levels. The same rules apply to backing-up with rough rubble stonework; but it is better to build the stonework first, and, by driving hook anchors into the variegating joints, obtain a fastening in the brick veneer.

Air-Spaces and Bonding. One of the principal boasts made for the brick veneer type of house is concerning its warmth and dryness. This comes from the ample dead air-spaces. A double air-chamber is made by leaving an air-space between the brick and the sheathing.

Fig. 95 shows in sectional detail how this is done. It is a good idea not to crowd the brick close to the sheathing; better set off an inch or the thickness of the blind stop, and make the same wide enough to lap onto the sheathing. However, the building paper should be put on first; and then, after the window-frames are set, it is a good idea to nail a couple of lath an inch or so back of the blind stop, and fill in with mortar, pressing the same in firmly. This can be done at the time the brick are being laid, with practically no loss of time.

The hollow space serves a double purpose, as it affords a dead air-space, and at the same time allows some leeway in correcting unevenness in the framework. It is also a good idea to cut-in pieces between the joist and studding

at the different floors, so as to cut off the circulation in case of fire, as well as prevent the movements of the ever pesky mouse.

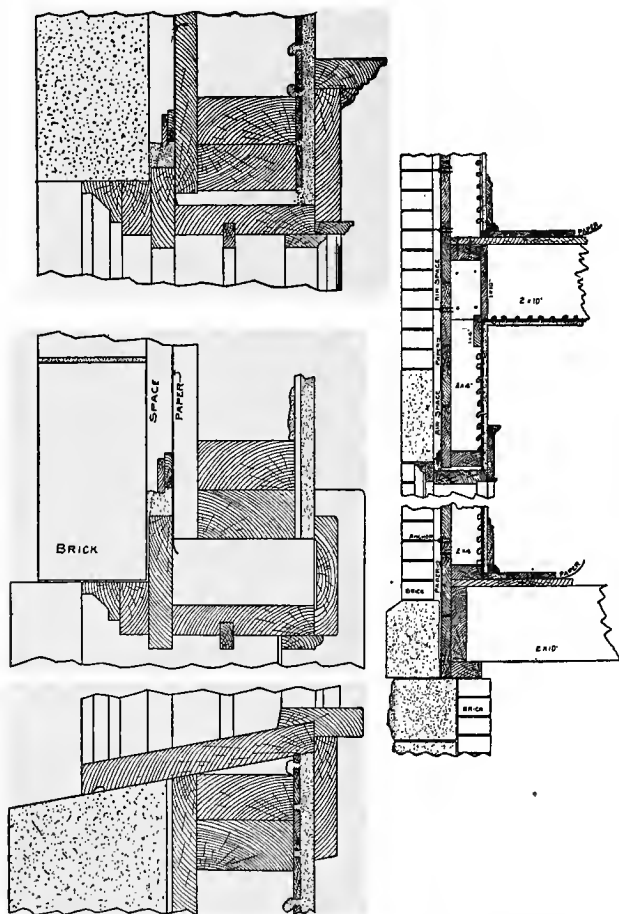


Fig. 95. Wall Section Showing Air Spaces and Framing.

The anchoring of the brickwork to the sheathing should be done by stapling wire to the

sheathing opposite the studding and about every sixth course apart. The wire should be left loose enough to reach out half the width of the brick, and to be well bedded into the mortar joint. No. 11 wire should be used.

Window-Framing in Masonry Walls. How window-frames are set, and the woodwork finish attached in masonry walls, is well illustrated in Fig. 96. It shows a casement window opening outward in a thirteen-inch brick wall. This type of construction is about the cheapest that can well be employed, excepting of course that the moulded work and other features which are provided for appearance only may be greatly simplified. These features are subject to considerable modifications as the taste of the architect or builder dictates.

The window opening is spanned on top by a flat stone arch, the blocks of which are cut with a camber of one-quarter of an inch and set with a camber of one-eighth of an inch to every foot of span. Flat arches set in this manner give a much better effect than when set perfectly flat, inasmuch as the arch appears to sag in the center when the soffit is perfectly straight.

Back of the stone arch, a rowlock arch is turned over a wood center, and supports the inner two-thirds of the wall over the opening. These rowlock arches are segmental in form, and are built of brick set on edge; and one rowlock is provided for every foot in the width of the masonry opening. All rowlocks should start

at a brick impost cut to a line corresponding with the radius of the arch; and the key bricks of the lower rings should not be set until the upper rings are ready for their key bricks.

The masonry jamb of the opening is built straight, and the window-frame is secured in place by means of a lug which is left on the jamb of the frame and built into the masonry as the walls are carried up about same. This lug also serves as a wind stop.

The stone sill of the opening is cut so as to lay up accurately with two courses of brickwork, and is tailed into the masonry under each brick impost. The sill is cut with a wash, and has a lug or raised seat at each end to receive the brick imposts. On the under side of the projecting part, a water drip is cut. The stone sill should extend under the wooden sill at least two inches.

At the top, Fig. 96 is a vertical section showing the construction at the head of the frame. The trim is mitered, put together with slip tongues, and glued. The head lining is tongued into a piece of finishing wood on the inside of the frame head.

Below is a horizontal section showing the construction at the jamb of the frame. The frame is moulded, and, where it abuts the stop bead, a channel is provided to catch any water which may beat in between the sash and frame during stormy weather. This channel conveys the water down, and discharges it on the sill.

The trim is moulded, built up, and hollow-backed, and has a feather-edged back-band.

At the bottom is a vertical section showing

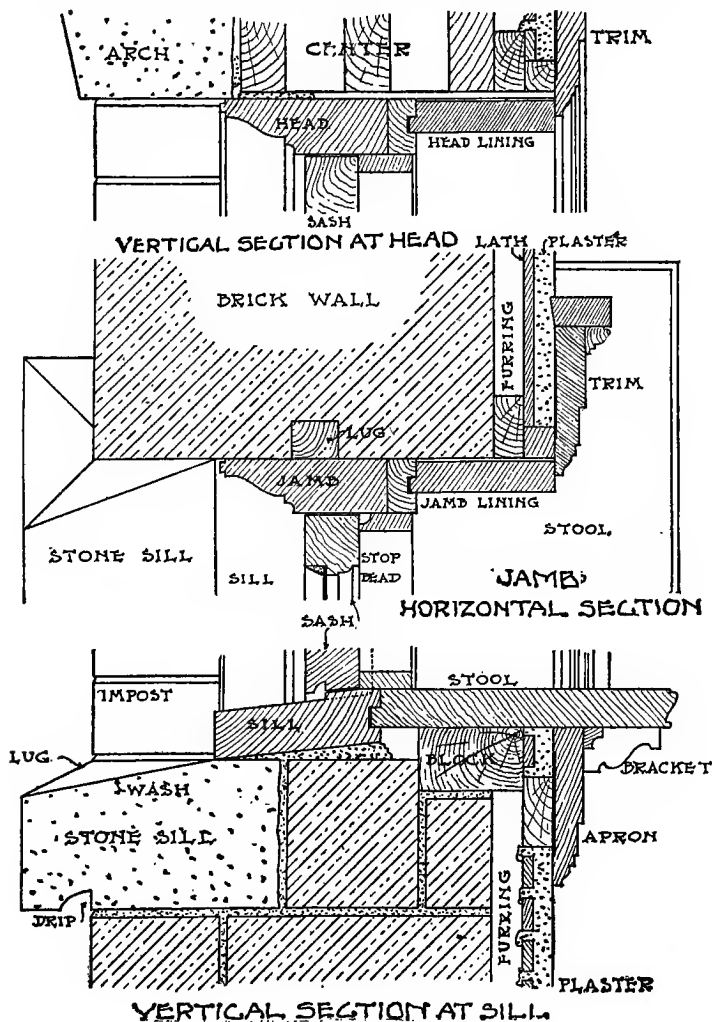


Fig. 96. Casement Window in 13-Inch Brick Wall.

the construction at the sill of the frame. The inside stool is tongued into the wooden sill, extended into the room, and provided with brackets. The apron is moulded, and has returned ends. A small mould is provided in the angle formed by the intersection of the stool and apron. A water nose is cut on the under side of the bottom rail of sash.

Furring Strips, Lath, and Plaster. The inside of the wall is furred with one by two-inch strips placed sixteen inches on centers to receive the wood lath. Where expanded metal lath or galvanized wire lath is employed, the furring strips should be set not over twelve inches on centers. The furring and lathing are frequently omitted, and the plaster applied directly to the brickwork. In such cases, the joints of the masonry are raked out about one-half inch, so as to give a clinch to the plaster; and the entire inner surface of the wall, before the plastering is applied, is given a coat of damp-resisting paint so as to prevent moisture from penetrating the wall and staining or discoloring the plaster. When the furring and lathing are omitted, wood bricks are built into the wall for a nailing for the wood finish.

Another method employed when it is desired to omit the furring and lathing, is to make the inner four inches of the wall of hollow brick, the hollow spaces in the bricks providing an air space which prevents moisture from penetrating.

Framing for Fine Casement Windows. Fig. 97 shows a somewhat better form of construction than that just described, for casement windows opening outward in brick walls. It has been designed with a view to show only a narrow margin of wood frame about the sashes; and for this purpose the masonry opening is rebated to receive the bulky part of the frame.

The wall, which is sixteen inches in thickness, is of brick, and the opening is spanned on the top with a flat arch of brick ground to the proper radius. Back of this face arch, a rowlock relieving arch is turned over a timber back lintel; and the space between the top of the lintel and the soffit of the relieving arch is filled in with brick, and is known as the **core** of the arch. When the head of a window extends nearly to the ceiling of the room, it is necessary to provide a steel or cast-iron lintel, instead of the timber lintel and relieving arch, to support the ends of the beams.

A stone sill is provided at the bottom of the opening, and is cut with a wash so as to pitch off water, and at each end has raised stools or lugs to receive the brick imposts. It is tailed into the masonry four inches at each end, extends under the wooden sill at least two inches, and has a drip cut on the under side of the projecting portion.

The window-frame is made from three-inch by three-inch stock, rebated for sash, and plowed for jamb and head linings. It is set

in the masonry rebate, and is anchored in place by means of galvanized wrought-iron anchors of the form shown, screwed into the frame and built into the joints of brickwork.

The wall is furred on the inside with one-inch by two-inch strips set sixteen inches on centers; and to these strips are nailed grounds for base, trim, etc., and wood lath for plastering. When expanded metal or wire lath is used, the furring strips should be set twelve inches on centers.

The trim is moulded and worked out of one-inch by four-inch stock, and has a plain back-band, a face-mould, and a small wall-mould. Wall-moulds should be small enough to be pliable so as to fit the unevenness of the finished plaster. The trim finishes on a moulded stool, tongued into the wooden sill and finished with an apron. Where deep jambs occur on the inside of windows, paneled head and jamb linings are preferable to the plain linings shown.

Use of Temporary Frames during Construction. In important work it frequently happens that the window-frames are not built in as the walls are carried up, because of the danger of damaging them by hauling in materials through the windows. In such cases, rough timber bucks about two inches by four inches are built into the masonry, and the frames are set and nailed to the bucks after all the rough structural work of the building is completed. The heads and sills of the bucks are allowed to project three

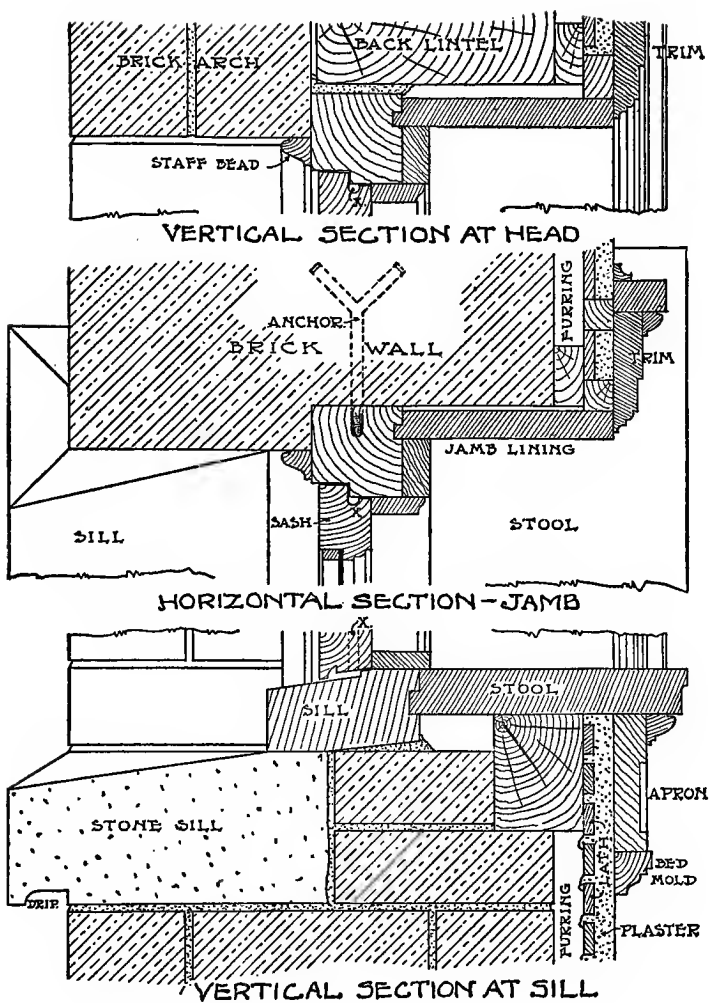


Fig. 97. Casement Window in 16-Inch Brick Wall.

or four inches over the jamb bucks; and the projecting portions are built into the masonry so as to securely anchor them in place.



The sashes are channeled at **X** so that any water which may beat in between the sashes and frame during driving rainstorms will be caught and conveyed to the window-sill. The lower rail of sash has a lip and undercut to prevent water from entering at that point.

The wooden sill should be well bedded in mortar; and any spaces about frames should be wind-proofed by calking with oakum or filling with mortar. The sizes given for sashes and frames are suitable only for ordinary windows. For larger windows, both frame and sash would have to be increased in size; or, if this would be objectionable, would have to be made of hardwood. In any case, the stiles and rails of casement sashes have to be larger than for the sashes of a corresponding double-hung window, for the reason that there is a greater strain on them, owing to their being hinged on the side. For the same reason, it is preferable to bed the glass in putty and secure it in place with wood beads, rather than to use putty only.

A casement window opening outward in a sixteen-inch brick wall is shown in Fig. 98. It is such as would be used in the better class of work, and the dimensions of the members are about right for an ordinary size window. For larger windows, the frame would have to be increased in size, and the sashes made of cherry or other suitable hardwood, rather than the dimensions of stiles and rails increased, which would be objectionable in that it would show too

much wood. The thickness of sashes, however, should be increased. In any case, the dimensions of stiles and rails for casement sashes are greater than for double-hung sashes in windows of similar size, owing to the greater strain on them caused by their being hinged on one side.

The frame shown is built as the masonry walls are carried up, in a rebate formed in the wall, so that too much of the frame will not be exposed to view; and is secured firmly in place by means of lugs housed into the jamb and built into the brickwork. All spaces between the frame and the brickwork are calked so as to be wind-proof, the calking consisting of oakum well compacted and plastered over, or scratch-coat mortar slushed in when the plastering work is being proceeded with. Calking should never be omitted in important work. Frames, after being built in, should be well protected with boarding so as to prevent them from being damaged in passing materials through the openings.

The interior treatment of the window opening is, of course, subject to innumerable modifications, as the taste of the architect or owner dictates and purse affords. The architrave shown is quite effective, and not so costly as the finished effect implies. The trim is moulded and worked out of seven-eighths-inch material, and is blocked at the back to make it heavier in appearance. A moulded back-band adds to its massiveness; and a small flexible wall-mould

imposts showing a three-inch reveal, a stone lintel spanning the top of the opening, and a stone sill across the bottom. The sill has a bed of five inches, a projection of two inches, a thickness equal to two courses of the face brickwork, and a length sufficient to tail four inches into the masonry at each end. The upper surface has a wash and stools at either end, and the projecting portion has a drip cut on the under side.

The inside of the wall is furred with one-by-two-inch strips, indicated by **F**, to which grounds **G** and lath are applied. The head of the window has a paneled head lining tongued into the finishing woodwork which is provided to cover the rough frame. At **X**, on the top rail of the sash, a channel or gutter is provided to catch any rainwater which may beat in between the sash and the head of the frame. This channel is continuous across the head, and conveys the water to a similar groove on the sash stile.

Inward-Opening Casement Windows. Fig. 99 shows a very successful method of constructing an inward-opening casement so that it will be proof against wind and rain.

The jamb of the frame is set in a rebate in the masonry wall, and has a semicircular groove cut in its outer edge for a corresponding semicircular tongue on the stile of the sash. The sash tongue fits snugly into this groove, and makes a perfectly weather-tight joint. This

form of construction requires that the hinges or butts shall be set so that their pins are from one-quarter to three-eighths of an inch inside

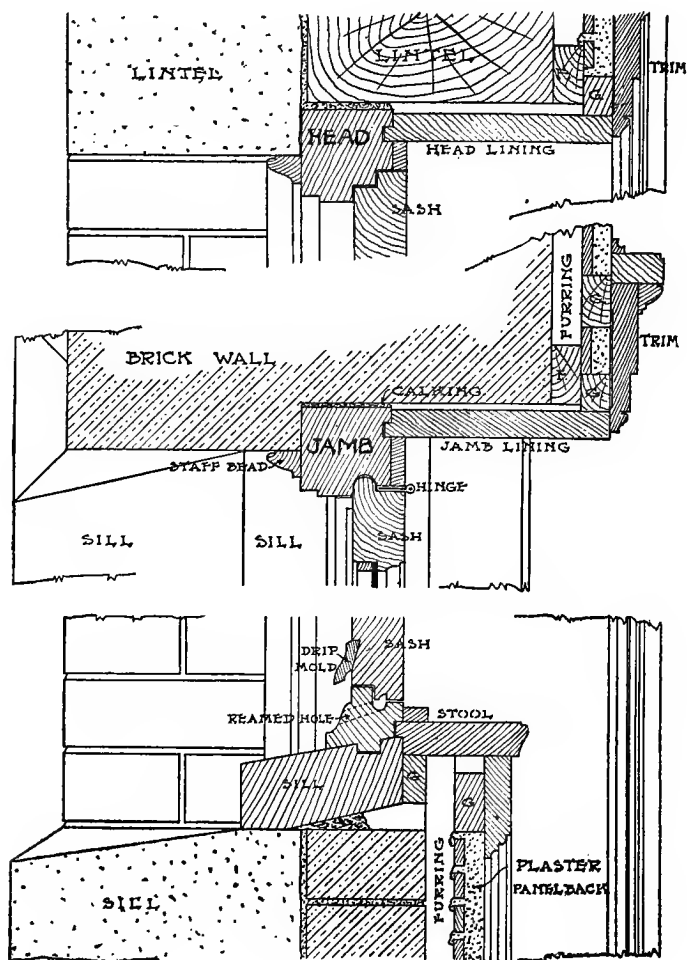


Fig. 99. Storm-Proof Inward-Opening Casement.

of the inner surface of the sash, so that when the sash is opened it will turn on a center sufficiently away from the sash to throw the sash slightly into the room and prevent binding at the tongue and groove.

The head of the frame has a double rebate, and the top rail of sash a single rebate, to exclude the weather.

The joint of the sill and the bottom rail of the sash in inward-opening casements is a particularly difficult one to make weather-tight, and we know of no better way of constructing it than that shown in the illustration. Windows constructed in this manner have remained tight through driving rainstorms.

A moulded member is placed over and tongued into the top inner edge of the wood sill, and is rebated for the bottom rail of the sash. This member for its entire length has a semi-circular groove or gutter in the rebate, as shown, to catch any water which may beat in at the junction of the sash and sill. At intervals of about one foot, reamed holes are provided from the gutter to the outer surface of this strip, as indicated by the dotted lines in the illustration, Fig. 99, to carry away and discharge on the sill any water which may accumulate in the gutter. The holes should be reamed perfectly smooth, and painted; and the joint of the sill and the member immediately over it should be made in white lead.

The bottom rail of sash is rebated, and on

its outer face has a drip-mould let in and joined in white lead. This mould, under ordinary conditions, will prevent water from entering under the sash. In driving rainstorms it may not prevent a little water from working in; but any such water will be caught at the undercut drip on the bottom surface of sash, and will drop into the gutter in top member of sill.

A small moulded staff bead covers the joint of the masonry and the window-frame; and all interstices about the frame are calked with oakum, as indicated, so as to be wind-proof. Jamb and head linings are tongued into the frame, and, where deep inside jambs occur, are better paneled.

The trim is worked out of seven-eighths inch material, moulded and hollow-backed, and provided with face-mould, back-band, and small flexible wall-mould. Joints at angles are mitered and put together with slip tongues, glued, and screwed. In the better class of work, the trim is put together at the carpenter shop; and all surfaces, including backs, edges, ends, splines, and faces, are primed. It may then be brought to the building without risk of damage through the dampness in the atmosphere or at the building.

The trim is carried to the floor, and finishes on moulded wood plinths. The inside recess of the window is carried to the floor, the masonry wall being made four inches thinner under the window. A stool and apron are provided, butting into the jamb linings; and the base breaks

around the recess, thus forming a plaster panel-back. This plaster panel-back may be painted or grained to match the adjoining woodwork, and the effect of a wood panel secured.

The opening in the masonry wall has a stone sill and lintel, and the inside of the wall is furred with one-inch by two-inch strips. Grounds **G** are set wherever required for a nailing for the interior finishing woodwork.

Framing for Casement, Screen, and Blind.

Fig. 100 shows the construction of an inward-opening casement window in a brick wall, with insect screens placed outside of the sashes, and with blinds placed outside of the insect screens. It is also arranged so that when the screens are removed in winter, storm sashes may be installed in their place.

The frame is set in a very slight rebate in the masonry wall, and is secured in place by means of the lug on the jamb of the frame. This lug is built in as the brickwork is carried up.

The window-frame is rebated for the sash, and is also rebated for a tongue on the edge of the sash. This tongue is quarter-round, to allow for the play of the sash when opened. The jamb lining is tongued into the frame, and should be placed sufficiently back from the jamb of the frame to allow for the window-shades, which, in the case of inward-opening casements, are placed on the top rail of the sash.

The top edge of the sash is slightly beveled

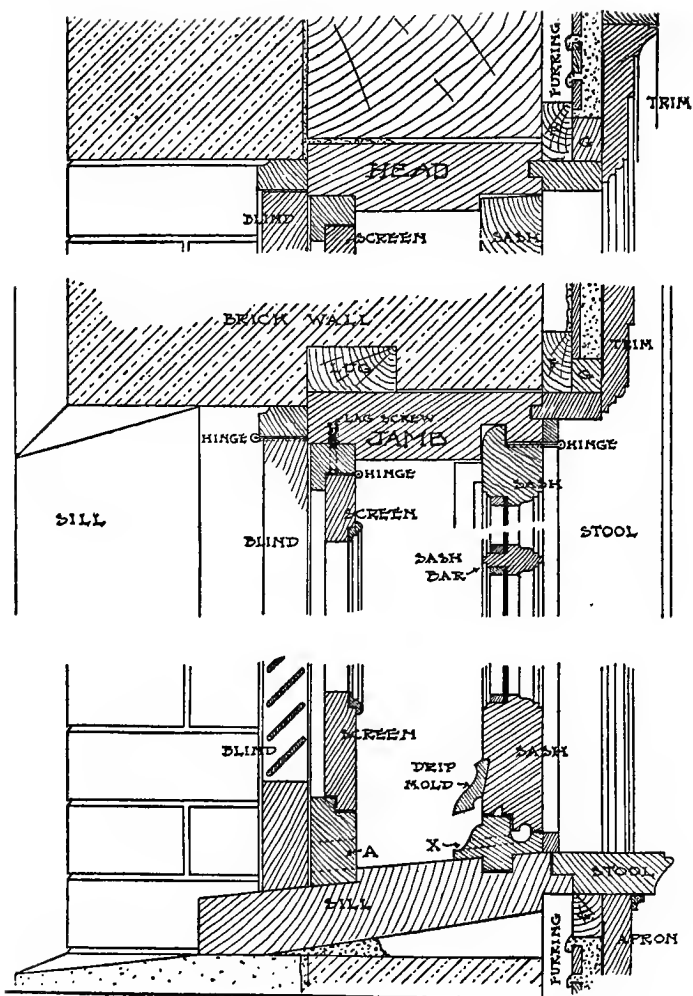


Fig. 100. Casement, Screen, and Blind in Brick Wall.

so that there will be no chance of it striking the transom bar when being closed.

The sill construction is similar to those shown

previously, with undercuts and drip-mould to prevent the entrance of rain water at the joint of the sash and sill. This joint is usually the weak point of inward-opening casements, but, if constructed in the manner shown, will resist driving rainstorms. The inside stool is rebated over the sill.

The transom sash, which is hinged at the bottom and swings in at the top, is rebated over the transom bar and provided with a drip-mould similar to the lower sashes. The top edge of the sash is slightly beveled to allow for the upward throw of the sash when being opened. The transom bar is moulded, and has an undercurrent just below the transom sash to cast off any water which may be driven against the joint (see Fig. 101).

The meeting rails are rebated and beveled, and have inner and outer astragals or cover-moulds. At **X** the sash is grooved to catch any water which may work partly in at the joint.

The window-frame is rebated on the outer edge for the mosquito screen frame, which is secured in place by means of brass lag screws. These screws are so arranged that they may be used to secure storm sashes in place when the screens are removed in winter. When the storm sashes are in place, the blinds cannot be operated from the inside; so they must remain open, unless the blinds are fitted with a device to open them from the inside of the house.

There are several of these opening devices

on the market, and they consist of a worm-gear apparatus which opens the blinds by the turning of a crank within the room, and without the necessity of opening the sashes. These devices are thoroughly practical and very useful, even

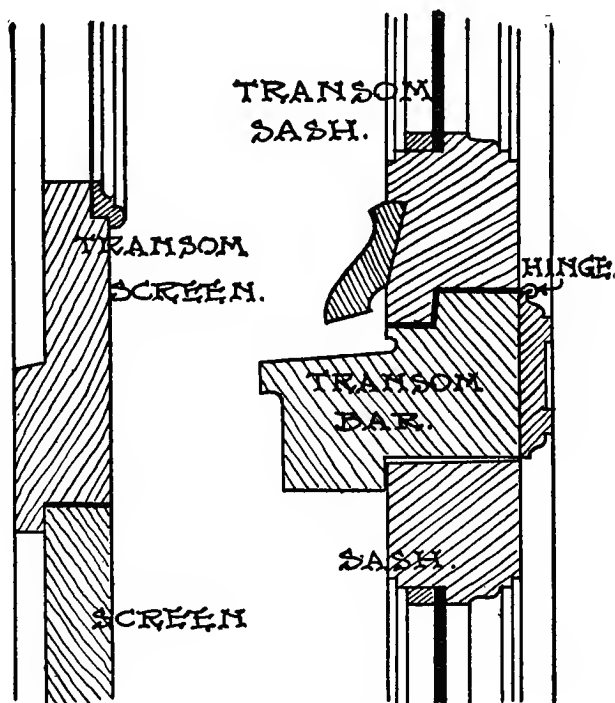


Fig. 101. Section at Transom.

in cases where they are not absolutely necessary. They permit of opening and closing the blinds in stormy weather without opening the window and subjecting the person and the room to the storm.

The screens are rebated, and hinged at the side to open in. The opening in the frame at **A**, bottom of Fig. 100, is covered with netting and allows any water which may come through the screen to pass out over the sill. The transom screen is stationary.

Figs. 100, 101, and 102 respectively show sections through the head, jamb, and sill; transom bar; and meeting rails.

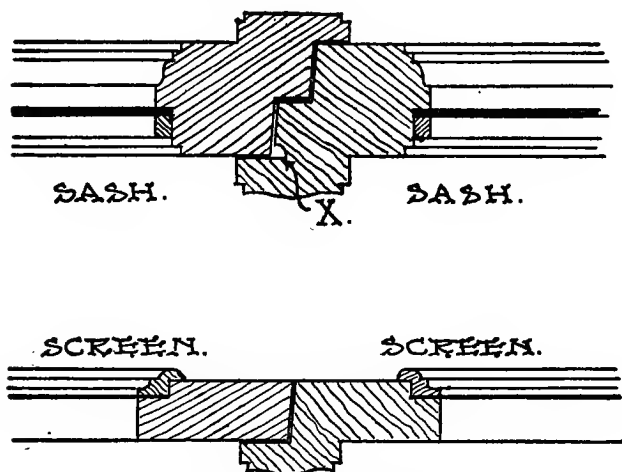


Fig. 102. Section at Meeting Rails.

Casement Bay Window Construction. Fig. 103 shows a bay window in a stone wall, with sashes of the inward-opening casement type. The bay window is entirely within the thickness of the wall, as shown in the plan.

The wall is constructed of random-coursed, roughly squared local stone, with cut quarry

stone sill and lintel. The sill is cut with a wash and with stools at either end, is tailed into the masonry at each end, and extends to within two inches of the inner face of the stone wall. The masonry jambs of the opening are straight, and the frame is secured in place by means of lugs left on the ends of both head and sill, and built into the stonework as the walls are carried up. This requires very careful calking of all crevices about the frame, so as to make a wind-proof job. The sashes are shown glazed with leaded glass.

The figured dotted lines in the elevation of the window indicate the cuts at which the various detailed sections are taken, the figures on the former designating the detail with the corresponding number.

A vertical section (187) is taken through the head of the window, and shows the top rail of the transom sash beveled on the edge so as to allow for the slight throw upward when the sash, which is hinged at the bottom, is opened. The inside soffit of the window is paneled. The frame is rebated for the sash, and the outside casing is moulded as shown.

A vertical section taken through the transom bar of the window is given at 188, and shows the transom sash and bar with a rebated joint, and the sash with an undercut. The transom bar is also rebated for the casement sash, and has an undercut on the projecting portion. A moulded member of finishing woodwork covers the transom bar on the room side.

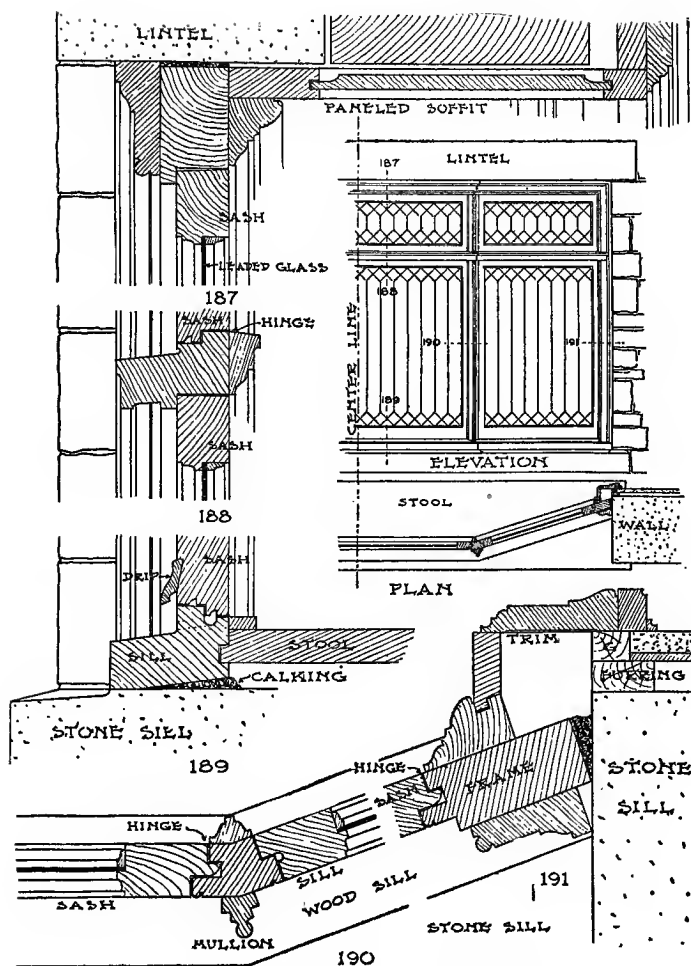


Fig 103. Inward-Opening Casement Bay.

A vertical section (189) is taken through the sill of the window, and shows a method of construction similar to those already illustrated. The stool is tongued into the sill, and the sill and

sash are rebated. The sash has two undercuts and a let-in drip-mould, to make it weather-proof. The sill has a channel to catch any water which may beat in under the sash; and this channel discharges the water through the reamed holes, indicated by the dotted lines, onto the sill outside the sash.

A horizontal section (190) is taken through the mullion of the bay window, and shows it of light construction and rebated for both sashes. The rough mullion is covered on the room side by a moulded member, and on the outside has beaded edges and a cover-mould which miters with a portion of the outside casing.

The hinged stile of the sash is rebated and tongued, and the lock stile of the sash is rebated and grooved.

A horizontal section taken through the jamb of the window is shown at 191. The trim is moulded and hollow-backed, and has a back-band and wall-mould. The jamb lining is tongued into the moulded inside casing. The wall, on the inside surface, is furred, lathed, and plastered; and grounds **G** are set as shown.

Pivoted Casement Windows. A pivoted casement window in a 16-inch brick wall is presented in Fig. 104. The sash is pivoted on a horizontal axis. Pivoted casements should not be used in locations exposed to severe driving rainstorms, as it is practically impossible to make them weatherproof, especially at the pivots. Vertically pivoted casements do not of-

fer so great a resistance to storms and cold as do the horizontally pivoted casements.

The frame is cut out of 2½-inch stock, moulded, and tongued for inside head and jamb linings. The masonry opening is constructed with straight jambs, and the frame is secured in place by means of lugs on the jamb of the frame, which are built into the masonry as the walls are carried up. The section through the jamb is similar to the section through the head of the window. The lug which is indicated there by the dotted lines occurs only on the jambs and not on the head, and is only shown in the top part of the figure to indicate wherein the head and jamb sections differ.

This section at the top (Fig. 104) shows the head lining tongued into the rough frame, and a cover-mould in the angle of head lining and frame. The furring on the inside of the wall is of 1 by 2-inch strips placed 16 inches on centers for the wood lath, or 12 inches on centers for expanded metal or galvanized wire lath. Grounds **G** are set wherever required for a nailing for the interior wood finish or as a gauge for plastering. The trim is moulded and hollow-backed, and has a back-band and a small wall-mould. This wall-mould follows across top of base and across top and bottom of chair rails where such occur.

The masonry opening is spanned on the exterior by a stone lintel, and back of this a timber lintel. A brick relieving rowlock arch is turned over the timber lintel, one rowlock being pro-

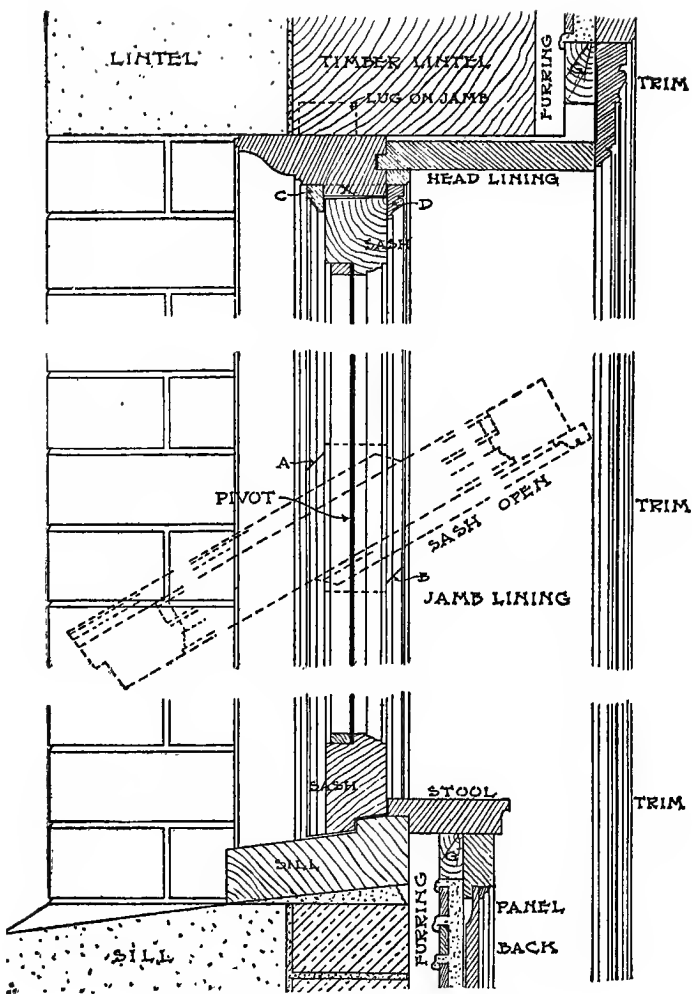


Fig. 104. Pivoted Casement Window.

vided for every 18 inches in the width of the opening, but at least two rowlocks being provided for all openings.

In the middle portion of Fig. 104 is illustrated a vertical section taken through the window at the axis of the sash; it shows the window closed, by the solid lines; and open, by the broken or dotted lines. The outside and inside stop beads, marked **C** and **D**, are cut at an angle of 45 degrees at **A** and **B**; and half of each stop bead is fastened on the frame, and the other half on the sash, as indicated by the dotted lines which show the sash open.

The projecting part of the jamb of the frame between the two stop beads **X** is cut away between the horizontal dotted lines, shown a little above **A** and a little below **B**, to allow the sash to turn.

At the bottom in Fig. 104 is shown a vertical section taken through the sill of the window; it shows the joint of sash and sill rebated. The stone sill is cut with a wash, has stools at either end, and extends under the wood sill two inches. The inside is finished with a stool and a moulded panel-back. The furring, lathing, and plastering are carried in back of the panel. The trim extends to the floor, finishing on moulded stools.

A pivoted window in a sixteen-inch brick wall is illustrated in Fig. 105. The sash is center-pivoted at top and bottom, and set in a rebated frame two and a-quarter inches thick.

The masonry opening is spanned on top with a flat stone arch, the key of which projects beyond the face of the wall. Back of this arch, a steel lintel consisting of two 3 by 4-inch angles

is provided to support the masonry. The inside of the wall is furred with two-inch ribbed full porous terra-cotta blocks, to which the plastering is applied. Grounds **G** for the wood finish are nailed to this furring, which, being full porous, readily receives and holds a driven wire or cut steel nail.

The joint of the wood frame and the masonry is covered with a moulded staff bead. The inside head and jambs are lined with seven-eighths inch material tongued into the frame.

Small wood moulds cover the joints between the sash and the frame, both on the outside and the inside, so as to make it weather-tight, forming a rebate, as shown. As part of the sash opens outward, and the other half into the room, these moulds are fastened to the frame in some places, and to the sash in other places.

At the head, the mould on the outside of the window has half its length fastened to the left side of the sash, as at the dotted lines **A**; and the other half is fastened to the frame. With the inside mould at the top of the window, the reverse is the case, the mould having half its length fastened to the right side of the sash. This is also the case with the inside mould at the bottom of the window, except that this mould is cut as at **B**, and then slit horizontally as indicated by the dotted lines at **C**.

The projecting member of the frame at **D** is cut away on the dotted line for the distance indicated by **F**, so that the ends of the mouldings

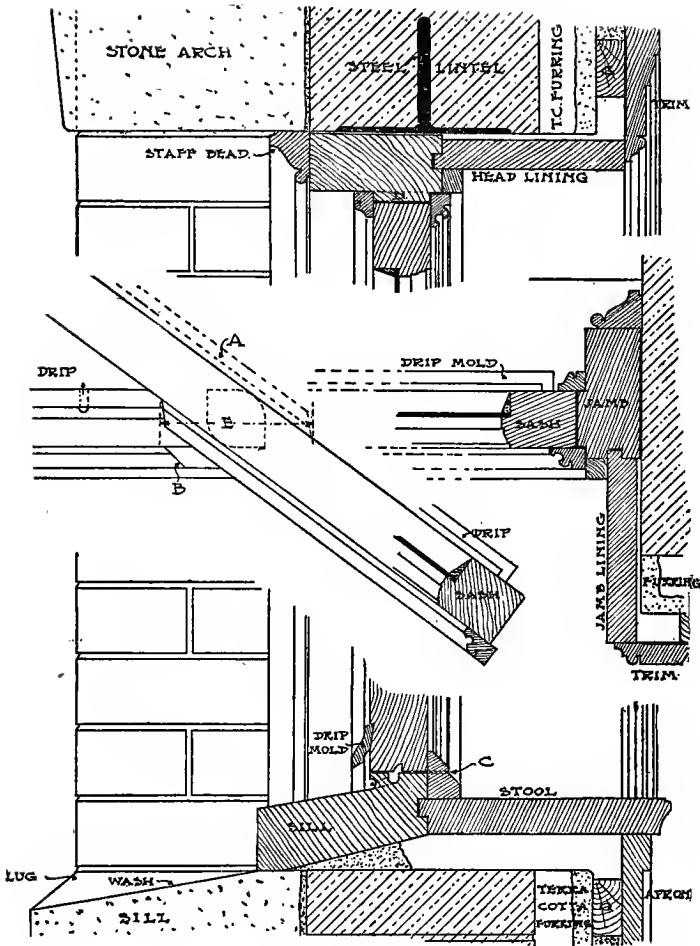


Fig. 105. Pivoted Casement Window.

which are fastened on the head of the sash and project above it will clear the frame at this point.

In Fig. 105, the upper portion is a vertical section, showing the construction at the head of

the window. The middle part is a horizontal section through the window, and shows the position of the sash when opened and when closed. The lower part is a vertical section, showing the construction at the sill of the window. A drip-mould is let into the lower rail of the sash to keep water away from the joint at the sill; and, to take care of any water which may pass this obstruction, an undercut is made in the bottom of the sash over a channel cut in the sill. This catches any water which may beat in; and reamed holes at intervals convey the water from the channel to the sill, as indicated by the dotted lines and the arrow. The inside stool of the window receives the trim, is moulded on the edge, and is tongued into the sill. Under this stool an apron is provided.

The stone sill is cut with a wash, has lugs at either end, and extends under the wood sill two inches. The joint between the wood sill and the masonry should be well filled with mortar.

Wood Framing for Concrete-Block Houses

Since the advent of concrete building blocks for house construction, numerous points have arisen concerning the proper methods of framing to be used with them. How to arrange the window-frames with pockets for weights for a dwelling house built with an eight-inch wall, is one of these points. Also, what is the best way to attach a hip-roofed porch to a building of this kind.

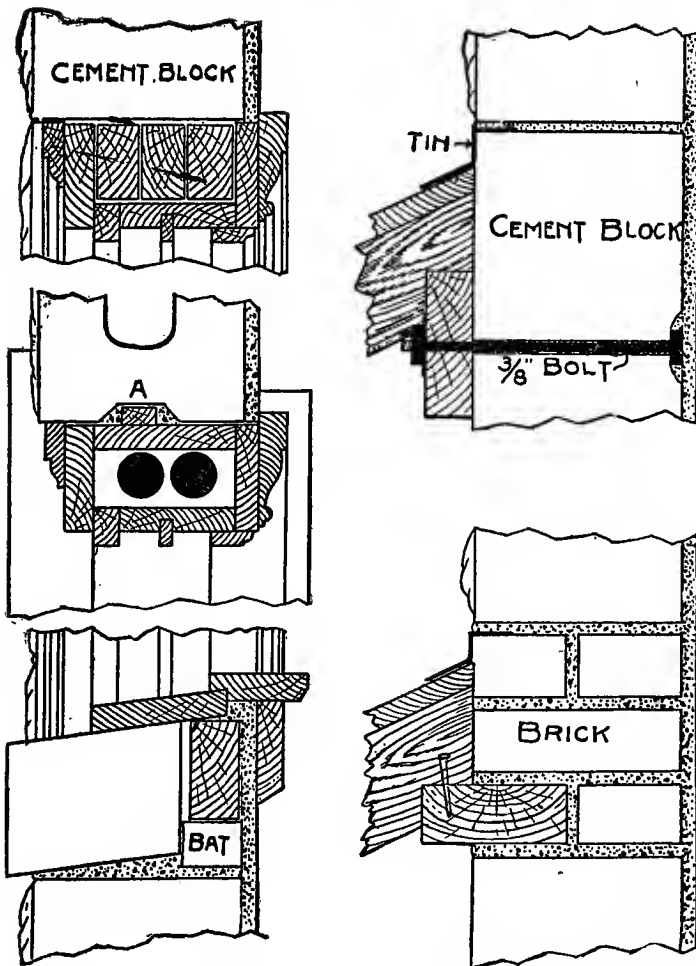


Fig. 106. How to Arrange Window-Frames and Attach Porch Roof.

The thickness of the wall (8 inches) necessarily crowds the frame in giving the proper space for the box to contain the weights. In fact, it is too close for the best class of work, and

should be used only for the cheaper grade of work. One plan suggests inserting wood blocks in the moulds to form an angle to receive the box and grounds, which, of course, is the better way; but as this will require considerable skill on the part of the operator, Fig. 106 shows how box frames may be used in connection with the common cement block, just as it comes from the moulds. Most blocks are made with a groove at the end, and there should be a strip nailed onto the frame coming opposite this groove, and the remaining space filled with mortar, so as to form a wind-proof joint, as shown at **A**. The frames should be made to work with the even courses of range blocks, otherwise the result will be a botched job.

The best way to attach a hipped-roof porch to a building of this kind, is also a point that frequently gives trouble. This may be done by bolting a timber onto the wall, as shown in Fig. 106, or, as that part of the wall is concealed from view, a timber may be built into the wall, and the remaining space that the range course would occupy be filled in with common brick.

Sill Construction and Joist Framing. Fig. 107 shows a mitered 8 by 8 by 24 water-table of a concrete-block residence. **B** is the same, except it is 6 by 8 by 24; **C** is a common 8 by 8 by 24 water-table; and **D** a 6 by 8 by 24; **E** is a 4 by 8 by 14 filler between joists; **F** is a 1 by 7 string-board nailed to end of floor-joists, which acts as a spacer to hold joists in position till

filler blocks are laid, and serves to aid one in getting the tops of the joists exactly level, as the concrete blocks are not always perfectly true. If joists are laid on blocks, their imperfections cause some places to be lower than others, and you are in trouble, as the joists cannot be raised after the blocks are laid above them. **G** is the floor-joist; and **H** is a piece of 2 by 8 gained down level with top of floor-joist, to be used at a door opening onto a porch; however, on a porch the water-table course should be left off, and plain-faced blocks used instead. The dotted line **L** is the line of wall under water-table, the water-table projecting two inches over the wall. **JJ** is the double header to support floor-joists at the basement windows. **K** is an 8 by 8 concrete lintel over basement window.

This figure also shows the style of concrete block used around windows, together with a box window-frame, and the way it is set to the concrete wall, and the way the inside casing is fastened to the frame and also to the concrete wall. There is also a wooden wedge driven in the mortar joint next to the frame; the casing is nailed to this.

The window-sills are 8 by 8 concrete and project 2 inches outside of the wall. This leaves a space 2 inches deep under the window, which may be filled with a 2 by 8 with the ends slightly beveled, so as to fit tightly between the blocks on either side of window; this makes a good place to nail the apron to.

One of the worst problems connected with concrete block work is to fasten the head casing to the concrete lintels over the windows and doors. A good method is as follows: In making the lintels, prepare some $\frac{3}{4}$ -inch round pins, $2\frac{1}{2}$ inches long, and soak them in water for at least forty-eight hours. Be sure they are of the softest wood obtainable, and non-resinous, so that they will swell up freely. Now bed these in the lintels while making. They will shrink and drop out by the time the lintel is

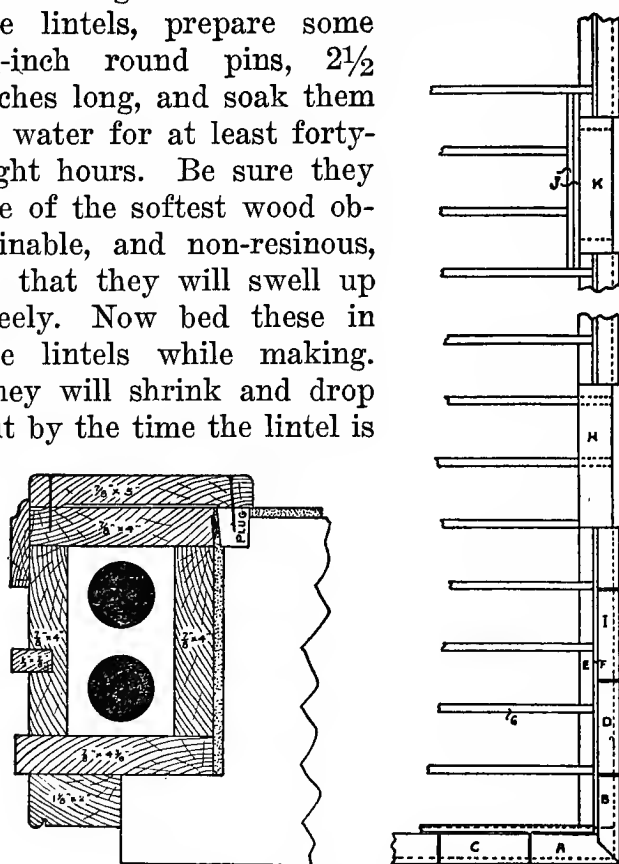


Fig. 107. Wood Framing with Concrete Blocks.

cured enough to put in the house. Place about two to each lintel at the ends of the head casing to be nailed; and by the time you are ready to

case the inside, you can drive soft, dry wooden plugs in the holes, and they will hold perfectly well. The reason for wanting the plugs soaked well, is because otherwise they will swell and break the lintel while it is still green.

Attaching Woodwork to Concrete. The best method of securing furring to brick or cement-block walls has caused not a little discussion. Some contractors prefer plucks instead of joint strips, as the strips expand when built in the wall, and afterward become loose on account of shrinkage. A good way is to use a heavily barbed nail driven into the mortar joints. This proves durable, and requires no previous preparation.

The use of small hardwood (well-seasoned) wedges driven into the mortar joints, also serves for attaching casing. Many builders no longer fur on concrete blocks, but apply plaster directly; this saves plaster, and, with proper precautions as to waterproofing to prevent water soaking through or condensing on the inside, will make a good job.

Tile Veneer for Frame Buildings

As modern buildings supersede the old-style frame buildings, it often becomes a question how to remodel them. An effort to imitate the new is seldom successful; but if the old buildings are improved in their own way, the results may be very good. Designs of this sort have been lacking because the new students in art give no

attention to the work of the old-timers in their own localities.

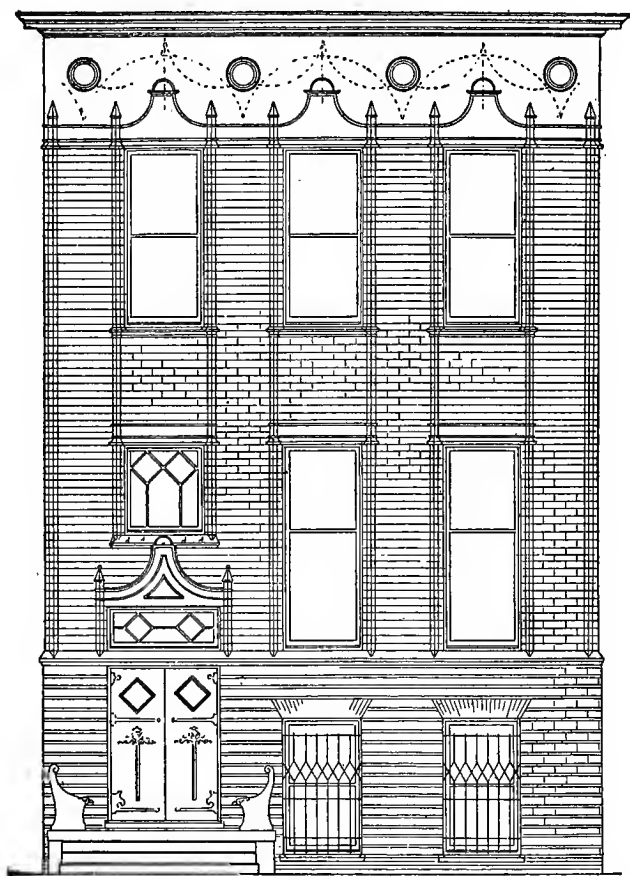


Fig. 108. Design for Remodeling and Veneering Old-Style Frame Fronts.

The accompanying design, Fig. 108, was made for a typical front in the old style of carpentry work. The ceilings of the main story

were very high. The basement was a full story. An outside flight of steps led to the front door on the second-floor level.

The new entrance was to be brought down to within a few feet of the grade. A half-flight of stairs was to lead from the vestibule down to the dining room, and another half-flight up to the parlor floor.

Heavy mouldings around the windows, of course, had to be removed. It was also necessary to see that foundations were good, and the walls and jambs plumb.

The design chosen for the remodeling calls for a veneer of glazed or enameled tile. Such a front would lead the fashion for a long time to come. The designer introduced a number of years ago enameled tile on exteriors, since which time it has become very popular. It is durable, always clean and cheerfully light, besides being elegant in appearance. This makes it well worth the expense.

The dimensions of the diagrams are suitable also for Roman brick, flatwise, so that that material can be used with terra-cotta mouldings. These mouldings are so constructed that a thin veneer may be used.

The veneering may also be of cast concrete blocks of the same sizes. It is this choice of materials and adaptability of these same forms to different dimensions, that makes the design economically practical.

The V-shaped vertical members of terra-

cotta, Fig. 109, stiffen the veneer at the corners and windows. These are anchored to the wall, and overlap the wall covering, holding it in place. This also covers the ragged joint where the tile has to be clipped. This is shown in the section of the first and second story wall.

The basement is in Richardson courses; only, instead of stone, the brick is laid alternately flat and edgewise. The vacant space is filled with concrete, as shown in the section (Fig. 109).

It is not enough to drive spikes into the wall for anchors. They must hook firmly around the sheathing or another spike at right angles. The window head requires a small angle as shown on the diagram. It must be bolted to the framework.

The space between the veneer and the siding should be not less than an inch, and well filled with cement mortar.

The frieze can be made of plain veneer, or constructed of cement plaster on wire lath.

A plaster frieze can be modeled with good effect. It should be done offhand while being laid onto the metal lath. The centers and grouping of the pattern should first be indicated as shown on the elevation. Then the carving can be quickly modeled from a sketch. It is not necessary to have all the details correspond exactly if the symmetrical outline is preserved. Fine detail should be avoided.

A tendency to pull down old buildings that

are substantial, in order to build up new ones, depreciates the value of building improvements,

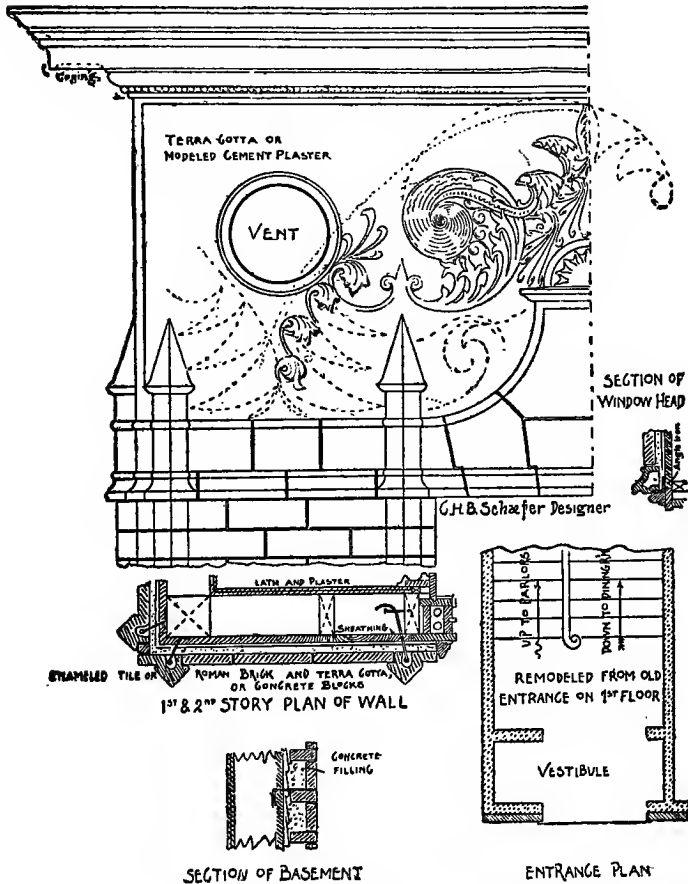


Fig. 109. Design and Construction for Tile Veneer Remodeling.

for it increases the expense in the long run, enormously. Owners hesitate when such a probability presents itself in considering new work.

There is the owner's waste of time, inconvenience, and, most of all, the neglect of other affairs to be considered. Hence the most desirable mode of building is one which can be easily kept in repair, and improved from time to time.


Segmental Arches in Brick Walls. The word **segment** means a portion or part, and a segmental curve is one whose curve is a part of a circle. In point of fact, any arch struck from one center, and being less than a semicircle, is properly termed "segmental."

The most common use of the segmental arch is, perhaps, as a **relieving arch** over the lintel of an opening for a door or window in a brick wall. In such cases no better proportion can be taken than one-sixth of a circle. There is, however, an important point of construction involved, and one that is often neglected.

Fig. 110 shows two relieving arches, one being laid out in the wrong way, and the other correctly. The first is wrong because, in the case of fire, the wooden lintel would be consumed, and the thrust of the arch on the burnt end would be bound to cause a failure and endanger the whole of the wall above. A better way is shown. Instead of making the span of the relieving arch equal to the opening between the jambs below, the arch springs from a point over the extreme end of the wooden lintel. In case of fire occurring and the lintel being entirely consumed, the arch would be unaffected, and would continue to carry the weight above.

Building inspectors and managers should insist on the adoption of this correct method, for it costs no more than the incorrect one, and the advantage of it in case of fire is greatly in its favor.

Of course, for such arches, no elaborate centering is necessary. The lintel is laid in position; and a piece of $1\frac{1}{2}$ -inch stuff is shaped to the curve of the arch, and laid upon the lintel to form the centering. The arch is then turned

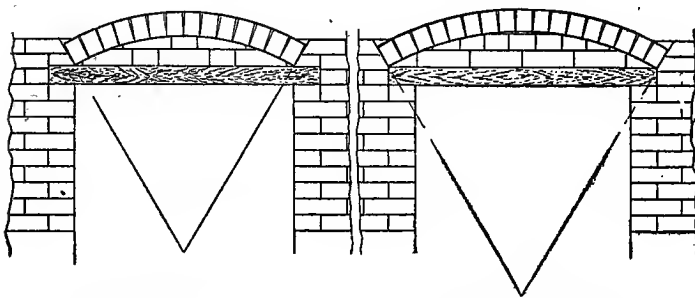

RELIEVING ARCH
WRONG METHOD

RELIEVING ARCH
RIGHT METHOD

Fig. 110. Segmental Arches in Brick Walls.

upon this centering, which is removed when the mortar is properly set, the core being then filled in with brickwork.

For openings up to three feet or thereabouts, a relieving arch of a single ring of half-bricks is all that is required; but for larger openings, several rings may be used.

Fig. 111 shows an arch of three rings, and it will be noticed that each arch is separate and not bonded into its fellows. It will also

be noticed that the bricks of these rough relieving arches are not cut taper, and thus the joints are slightly more open on the back of the arch than on the under side. In making drawings of such arches, the draftsman draws a ring around the center from which the arch is struck,

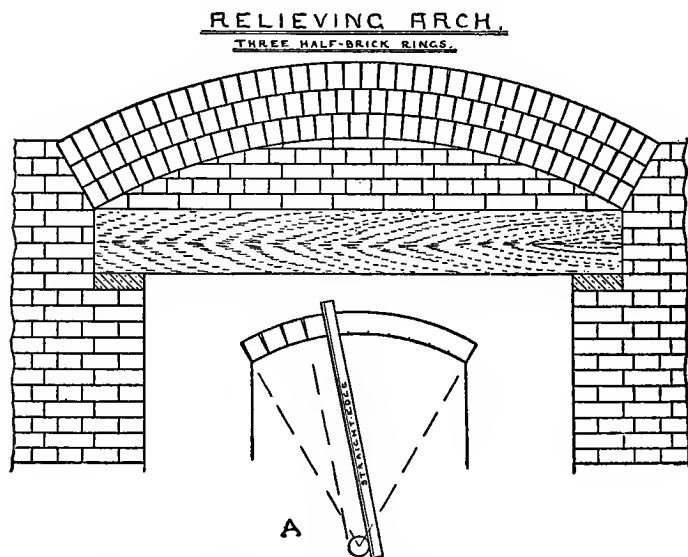


Fig. 111. Segmental Arch, and How to Lay It Out.

the diameter of the ring being the thickness of the brick. This thickness is then stepped off on the under side (soffit) of the arch with a pair of dividers, and the straight edge placed against the ring and one of the divisions on the soffit (see **A**, Fig. 111).

How to Lay Out Arches. The chief problems, however, with which the practical layer-

out of arches is confronted, arise in connection with the modern use of fine pressed brick for so many first-class structures. For while the mere curve is sufficient for practical purposes in rough relieving arches, the arch made of facing bricks, and forming a feature of some fine front, must be set out exactly for the purpose of cutting and fitting, or perhaps moulding, the bricks of which it is to be composed. Brick arches in which the bricks have been specially cut or moulded are generally termed **gauged arches**, and are frequently used nowadays.

The **radius** of the arch is scarcely ever given by the architect, the **rise** being almost invariably denoted instead. The writer has before him an elevation of a brick-fronted building with some eight or ten openings of varying widths, but the same rise is specified for all the arches over them. This means that the layer-out has to find the centers of the several curves from the given particulars of their rise and span. This he does as shown in Fig. 112, the first being the geometrical method of the drafting room; the second, the practical method of the laying-out shop. In both cases, the center from which the arch is struck is found at the intersection of the lines drawn from the center of each half of the arch.

As the bricks in gauged arches are used full length, the thickness of the brick is marked off around the back of the arch, and the joints drawn to the center, as in Fig. 113, at left. The

joints are very fine, being usually specified to be not more than $\frac{1}{8}$ inch, the mortar being either fine cement or lime putty.

In Europe, special bricks are made for such arches, and are known as **red rubbers**. When new, they are quite soft, and can be sawed with a handsaw, and rubbed upon a block with sand and water to form close joints. After being

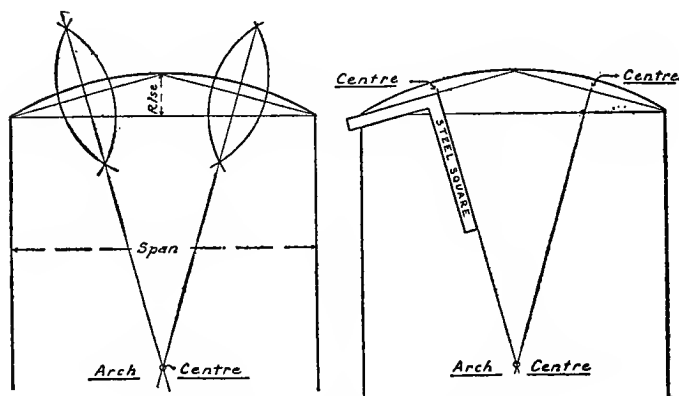


Fig. 112. To Find the Arch Centers.

exposed to the air for a time, the surface of these bricks becomes exceedingly hard and impervious to the action of the weather. For the red brick dwellings of "Queen Anne" and "Colonial" style, now so much in vogue again, such bricks are exceedingly useful. Not only can they be cut for the characteristic flat arches of these styles, but mouldings can be worked on the angles, and panels formed to relieve broad surfaces of wall. More often, however,

bricks for gauged arches are specially moulded to the builder's drawings by the makers of the face bricks, with fairly good results in the finished work.

The flat arch just referred to is also much used in brick fronts in city buildings, and is drawn as shown in Fig. 113, at right. It presents no difficulty to the layer-out, the joints

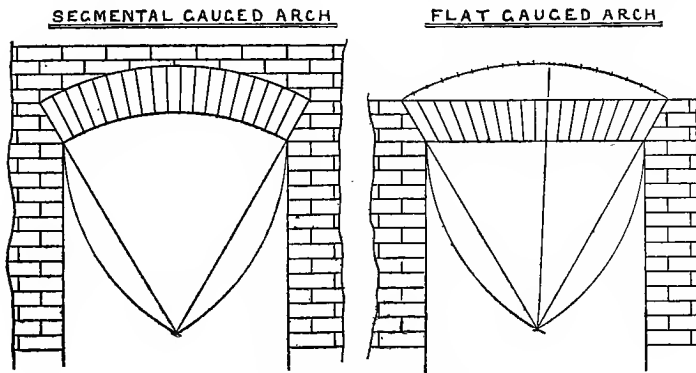


Fig. 113. Brick Arches.

being found by making a curve above the arch and stepping off the thickness of the bricks upon it.

There is one important point to be remembered, though, in building such arches—namely, that a **perfectly straight soffit will always appear to be sagging**. The remedy for this is to allow a trifling rise—say $\frac{1}{2}$ inch for every three feet of span—which will be sufficient to make the under side of a flat arch look straight. This can be easily done on the job by laying

two strips tapering from nothing at the ends to the required allowance at the middle, upon the support or centering on which the mason forms his arch.

Of course, flat arches are not very desirable, from a structural standpoint, and should not be used for spans more than four or five feet at the outside. Occasionally, for the sake of uniformity, a flat arch is used over a larger opening, perhaps a broad window or doorway; but in such cases the weight of the superstructure is carried on iron girders, and the brick arch is only a sham or casing toward the street.

Arches and Lintels for Fireproof Work.

The consideration of relieving arches—or, as they are often termed, **discharging** arches—over a wooden lintel, naturally brings up a very important question. In these days of fireproof construction, when wood is being eliminated from the structural parts of buildings wherever possible, wooden lintels are not used in the best practice. Instead of wood, iron I-beams and artificial stone lintels are now largely employed in the best class of work. But both of these have one defect—namely, that, from their nature, it is impossible to nail grounds or other wooden finish to them. As the chief purpose of a lintel is, of course, to form a square head for a window or door-frame, this consideration is important.

One of the best methods suggested for overcoming this little difficulty—and not only suggested, but widely used in some parts of Europe—is to form the lintel of coke breeze concrete. **Breeze** is the English term for the small cinders left from the fires used for burning bricks in a kiln, or from the manufacture of coke in gas ovens. Mixed with cement, it makes a concrete that is fireproof and that possesses another useful quality in that nails may be driven into it with ease. This last property has led to the use of coke breeze in a variety of places where wood was formerly employed.

For instance, thirty or forty years ago it was still common to find bond timbers inserted in brick and stone walls at such heights as would render them convenient for fixing the trimmings and finishing woodwork to afterwards. These bond timbers were certain to shrink and were also very liable to rot; and, as either of these contingencies made them a source of possible weakness to the wall, their use was gradually discontinued, until it has ceased altogether.

The substitute at first proposed for the bond timbers, and largely used for many years, was a thin strip of wood built into a joint of the masonry or brickwork, thus reducing the possibility of failure from shrinkage. The strips were, however, in a great measure open to the same objections as the larger bond timbers, and many architects refused to allow them to be used. Instead, they specified that hardwood

FIREPROOF CONSTRUCTION
RELIEVING ARCH OVER BREEZE CONCRETE LINTEL
BREEZE CONCRETE BLOCKS FOR FIXING

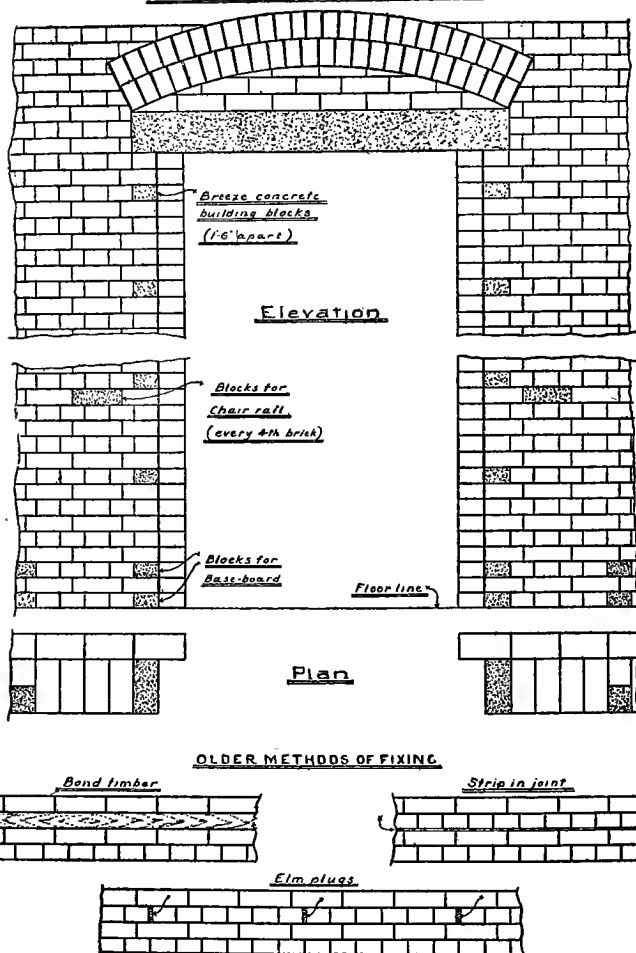


Fig. 114. Details of Fireproof Brick Construction.

(usually elm, on account of its non-liability to split) plugs or wedges should be driven into the

joints at intervals, after the walls had set, the grounds or other woodwork being nailed to these plugs.

The invention of coke breeze concrete has, however, made it possible to substitute bricks and blocks made of it, which can be built into the wall during construction. They neither shrink nor rot, while their property of taking nails readily makes them ideal for the purpose of fixing woodwork.

Fig. 114 shows the application of coke breeze in the lintel and fixing blocks around a revealed opening for a doorway in a 12-inch wall. The blocks are also shown at each side, where they would be continued to form a fixing for the grounds for the chair rail and base-board. These blocks should be of the size of the bricks used in the building, and may, of course, be readily moulded in any suitable machine. Long before the use of machines for this purpose, however, many hundreds of such bricks were made in the roughest of wooden moulds improvised for the purpose. As coke slack or breeze is very often merely a nuisance to the gas manufacturer, its cost is next to nothing in many instances.

Fireproof Floors. The question of fireproof construction is by no means a new one, although the builders of the present generation have probably seen more attention devoted to it than did their predecessors. As showing an interesting method of dealing with the lintel problem, the upper portion of Fig. 115 is worthy of

attention. A flat or camber arch takes the place of the wooden lintel, and is supported by means of an iron rod from the crown of the relieving arch above. For first-class work it would be hard to surpass this scheme, but its cost would prevent its adoption in anything but the very best practice.

While on the subject of fireproofing, another useful application of coke breeze concrete may be given. The many forms of iron and concrete fireproof floors are, in the majority of cases, covered with wood blocks or battens for the surface. Wood block floors are usually laid right on the concrete of the fireproof construction, some pitch or tar compound being used as a bedding cement. When batten floors are used, however, strips of quartering are usually laid on, or imbedded in the concrete, and the battens nailed to them. Many first-class architects, on the other hand, do not care for this method, and prefer that breeze concrete screeds should be laid in place of the quartering. If the screeds are run when the concrete below is still damp, they become an integral part of the body of the floor, and make a sounder job altogether.

The lower portion of Fig. 115 shows a simple rolled iron beam and concrete floor of the type generally known as "Dennett's," with board floor over. **A** shows a cross-section through the iron beams; and **B**, a cross-section through the concrete screeds, the boards being nailed to these as suggested.

FIREPROOF CONSTRUCTION
A BRUCCED RELIEVING ARCH OVER A FLAT OR CAMBER ARCH
WITH SUPPORTING ROD

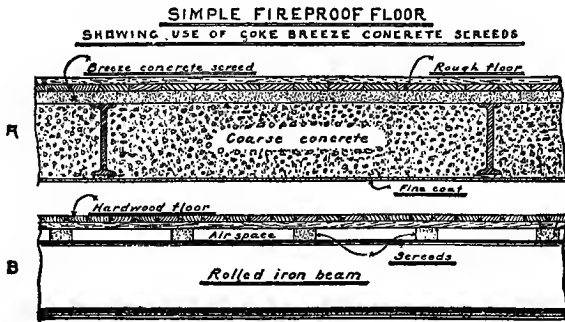
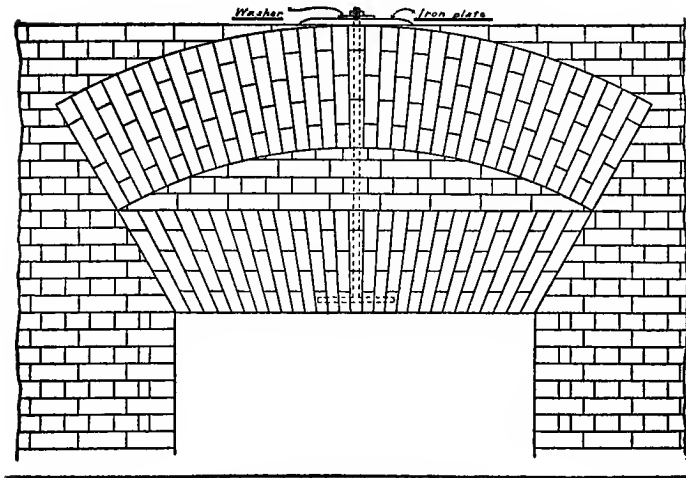


Fig. 115. Details of Fireproof Construction.

Reinforced Concrete Stairs. Concrete for stairs is rapidly taking the place of other materials in buildings of every kind. A few simple instructions as to the stair load and some remarks concerning the weak points of stairs

built several years ago, together with a description of the reinforced concrete stairway as it is built at present, will be useful.

In Fig. 116 is shown a stairway with platform and return, that being the type mostly used in public buildings and apartments; but this stairway is equally well adapted to the long single flight from floor to floor, so common in dwellings or business blocks.

This design differs from the earlier form in the use of double reinforcing rods at the upper and lower ends of the flight, one set to tie the stair slab to the floor slab through the beam, the other extending the full length of the stair slab to tie it to the beam rods. This double reinforcing requires only a few additional rods, and adds much strength to the weakest spot of the stair slab.

The thickness of the stair at its thinnest place, **A A**, must always be taken as the thickness of the stair slab in calculating its strength. The treads have no strength, but are dead load; therefore it is well to make the treads hollow if possible.

For single-flight stairs less than sixteen feet long and less than five feet wide, it is well to use a four-inch slab, unless for very heavy loads, and support it so that no two supports are more than ten feet apart.

This slab is reinforced with half-inch square twisted or five-eighths round rods, spaced as follows—for dwellings, ten inch centers; for busi-

ness blocks, six to eight inch centers; and for public halls and factories, two to four inch centers. These rods have one inch of concrete under them. At every tread is a cross-rod of same weight tied to each with No. 10 wire.

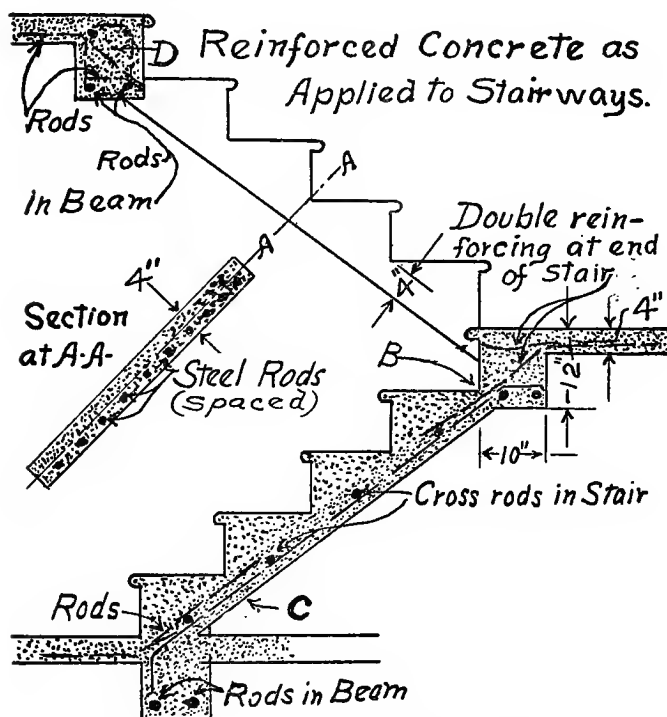


Fig. 116. Details, Concrete Fireproof Stairs.

The full-length rods all pass over or hook onto the rods in the cross-beams; and the double reinforcing consists of rods about five feet long, passing over the beam, with the ends projecting equally into the stair and floor slabs.

An examination of concrete stairs built without this additional reinforcing, has in several instances revealed the fact that cracks, if any, appear near the ends of the slab; in fact, within ten inches of the supporting beams, most frequently at the point marked **B**, but occasionally at **C**.

Beams of the size shown, for spans less than ten feet between supports, are amply strong if reinforced with two rods of one-inch diameter placed on two inches of concrete; however, for long flights, four rods should be used, as at **D**, the rods being looped with strap iron every two to four feet lengthwise of the beam.

The composition of the concrete should not be weaker than one part cement, two sand, and four aggregates. When treads are to be cement finish, the finishing should be done the same as in the case of sidewalks.

When treads are covered with marble or slate, a cinder or light-weight concrete is preferable for the treads only; and when covered with wood, locomotive cinder concrete should be used, as it can be penetrated readily with finishing nails. Great care must be used in mixing and tamping concrete for stair work.

How to Apply the Wood Trim. There are a number of features in connection with modern fireproof construction that are of particular interest to carpenters, especially to those working in the larger cities where steel, tile, and cement are now so generally used. A question

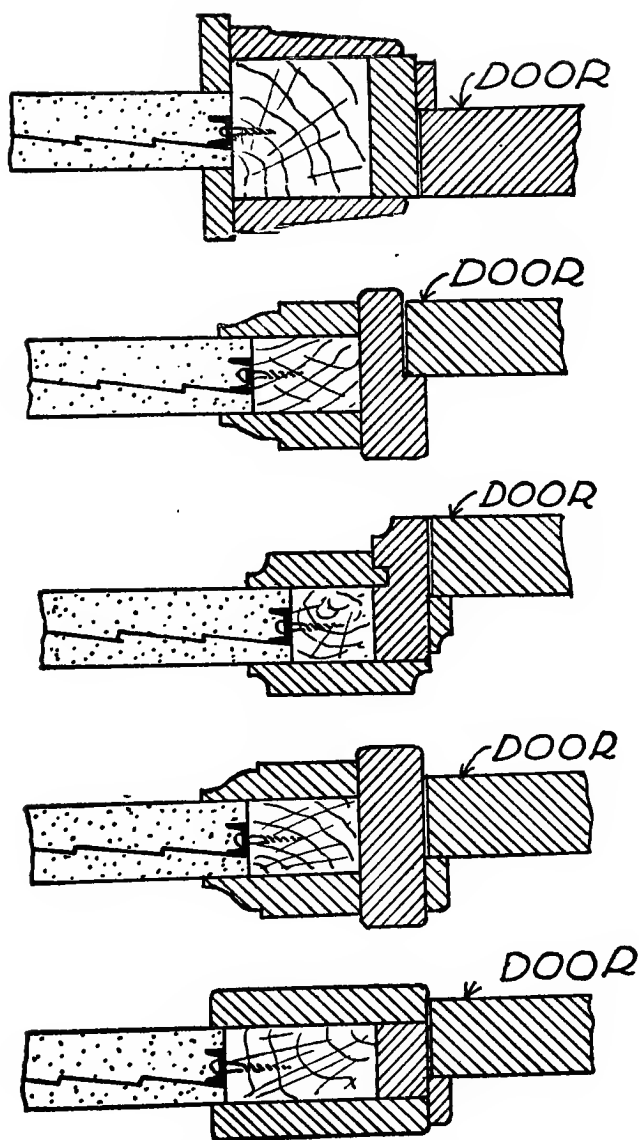


Fig. 117. Door Framing in Plaster Partitions.

very frequently heard is—How do they nail on the finish to make a good job of it? The detail sketches (Figs. 117 and 118) show the answer with special reference to plaster partitions—a type of wall, by the way, which is often very serviceable in small wooden store and office buildings.

In order to economize floor space as much as possible in fireproof buildings, thin partitions, as a rule about 2 inches thick, are introduced.

Fig. 117 shows methods of framing for doors in this kind of partition. The rough wood frames are set in place before the partition is erected, and to these the metal studs are secured with screws. The partitions themselves are usually erected by the plasterer.

The difference in the various styles of framing shown is principally in the character of the finish. Naturally, those sections which have the widest door jambs will be found the stiffest. Various modifications of these details, to suit the judgment or taste of the architect, may of course be made.

Fig. 118 shows the method adapted for securing the base-board. The rough 2 by 3-inch piece is laid on the line of the partition and secured directly to the floor strips, and the partitions built on this piece.

After the floor is laid, the base is nailed directly to this strip. For securing picture moulding, strips of wood may be laced to the

metal lath at the required height, before the plastering is done. These are sufficiently firm, after the plaster has dried, to hold the picture

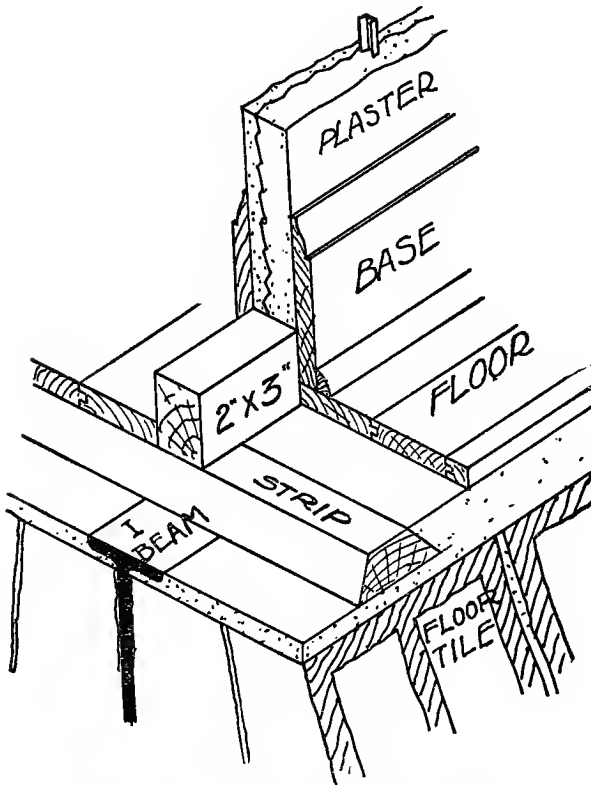


Fig. 118. Baseboard and Floor Construction.

moulding, which should be put up with screws instead of nails. In case close-warp metal lathing is used, the screws will engage the meshes of wire work sufficiently to hold the picture moulding without any preliminary strips.

With slight modifications, the methods shown for door framing could be adapted to hollow tile partitions.

Framing for Heavy Roofing—Tile. There are some special features that should be noted in regard to the proper framing of a tile roof and its preparation to receive roofing tile. Rafters should be at least 2 inches by 6 inches, and 24 inches on centers, or closer according to length of span. Sheathing should be securely nailed, and should be either of $\frac{7}{8}$ -inch common lumber laid tight and well joined together, or of matched and dressed sheathing securely fastened. The roof pitch may be as low as one-fourth (provided slope is not of extreme length), and from that to the vertical.

Before the tile are laid, the entire roof should be carefully covered with one layer of good roofing felt, laid to lap two inches in every course, and to be turned up against the sides of the building at least four inches. If the building has a box or cornice gutter, felt should lap over top of metal at least four inches, and the same at valleys. After felt is so laid, same should be stripped with good white pine plastering lath, laid parallel, true, and straight, to facing board at eaves. The top edge of first line of lath should be 12 inches above the lower edge of facing board or starting strip; and thereafter not less than 12 inches nor more than $12\frac{1}{4}$ inches space allowed from the top edge of each line of lath to the top edge of the next above

and parallel. The tile hook over these strips; and each tile is fastened with a seven-penny galvanized or copper wire nail.

All ridge-boards should extend three inches above top of sheathing, and hip boards two and one-half inches, and both be of seven-eighths-inch common lumber. Facing board or starting strips at eaves under bottom end of tile will extend up above the top edge of sheathing one and five-eighths inches. In all cases facing boards at gable ends should be flush with the sheathing.

In some cases an **open** roof construction is used—that is, one with no sheathing under the tile. In that case, there must be a space of twelve inches between the lower edge of the lowest purlin to top edge of the purlin next above it, and thereafter a space of not less than twelve inches nor more than twelve and one-fourth inches between the top edge of each purlin to the top edge of the purlin next above it. These purlin strips should be $\frac{7}{8}$ inch by 2 inches or over, the bottom strip $1\frac{1}{4}$ inches higher than the strip next above it—that is, $2\frac{3}{8}$ inches by $\frac{7}{8}$ inch. In this construction the hip and ridge strips should be the same as if the building were sheathed.

Framing for Slate Roofs. It is the prevailing opinion of people not familiar with the use of slate for roofing purposes, that a building should be constructed very much stronger for slate than for other roofing materials. This is

a mistake, as any building strong enough for shingles, tin, or iron is strong enough for slate. Two-by-six rafters, eighteen feet long, two feet from centers, give all the strength necessary. The writer has seen hundreds of houses roofed with slate where the rafters were two-by-four, two feet from centers, sixteen feet long, with collar beam nailed across one-third of the way down from the top.

Slate can be depended upon to make a roof perfectly water-tight on any pitch down to one-fifth. Half-pitch or steeper makes the best roof both for looks and strength, as it throws the weight on the walls more than on the rafters, and causes the snow to slide off clean, thereby never overloading any one part of the roof.

Matched lumber is best for sheathing for any roof; but surfaced boards from six inches to ten inches wide make a good job, and are used on a large majority of the buildings now being put up. Sheathing boards, when not matched, should be nailed at both edges on rafters, which should not be over two feet apart. Wide boards, when used for sheathing, are liable to warp and curl up at the edge, thus affecting the slate. While it may not break the slate, it raises the courses, marring the appearance of the roof. Very often a roof that lies well and smooth when done, apparently gets rough and the slates stick up. The roofer is often blamed for this when the cause is really in the sheathing. Great care should be used in putting on

the sheathing, that there are no lumps or uneven thicknesses in the boards, as they will surely show after the slate is put on. This especially applies on curved roofs or round towers, dormers, etc. In all such, the rafters should be close together and the sheathing perfectly solid and smooth. Where the sheathing is not solid it is almost impossible to make a good smooth job, for the reason that in driving one nail it jars the next slate loose.

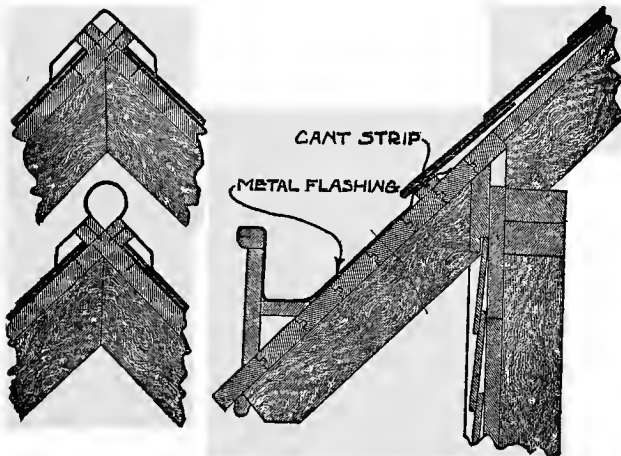


Fig. 119. Proper Construction at Ridge and Eaves for Slate.

Lath or strips are often used instead of sheathing boards on which to lay slate; but in such case the lath should be at least one and one-quarter by two and one-half inches, and must be spaced to suit the size of slate used. They should be placed so that the upper end of each slate will rest in the center of the lath. This plan is a good one for barn roofs, as it

allows some ventilation between the slate; but where a perfectly snow-tight roof is wanted, the slate should be pointed with hair mortar on the under side of the slate at the upper end of each course, also at the joints between the slate.

Tarred or other waterproofed paper should be used under slate where the same is laid on sheathing boards. This will insure a roof perfectly tight against fine snow.

Slate roofs require about the same foundation as shingles. The better the foundation, the better will be the roof. In beginning at the eaves, a thin **cant strip** is put on just above the eaves; or, in case of a roof gutter, the strip is put about a foot above the gutter, as in Fig. 119. This strip is usually about two inches wide and three-eighths of an inch thick, nailed across the roof. The first course of slate is made shorter than the other courses; or the usual size is turned and laid horizontally, so that the first two courses may be double, the same as in shingles. The lower part of the slate should project about one and a-half inches. The second course up should lap about three inches over the first or double course. When nearing the peak, the lap may be varied a little to make the slate come out right.

Barn Framing

Next to house framing of the various kinds already discussed, the branch of construction most important for the practical carpenter, as offering itself most frequently in actual work, is **barn framing**. There are building contractors who make a specialty of this kind of work; and their advice on numerous special points—which we have been able to gather and here present—may be taken as authoritative. Barn framing, for itself and because of its relation to other kinds of timber framing, should be well understood.

At the present time there are two general types of timber-framed barns in use. The first are **heavy timber barns**, all structural members being heavy, squared timbers, with joints tenoned and pinned—a survival of the sturdy construction of earlier days when timber was plentiful and was all hewed out by hand; and the second, **plank-framed barns**, claimed by many to mark a decided improvement over the other as being more easily erected, just as substantial, and decidedly cheaper, especially where large timber is not easily secured.

The principles and important features of these types of barn construction, together with some considerations common to them both, will now be given.

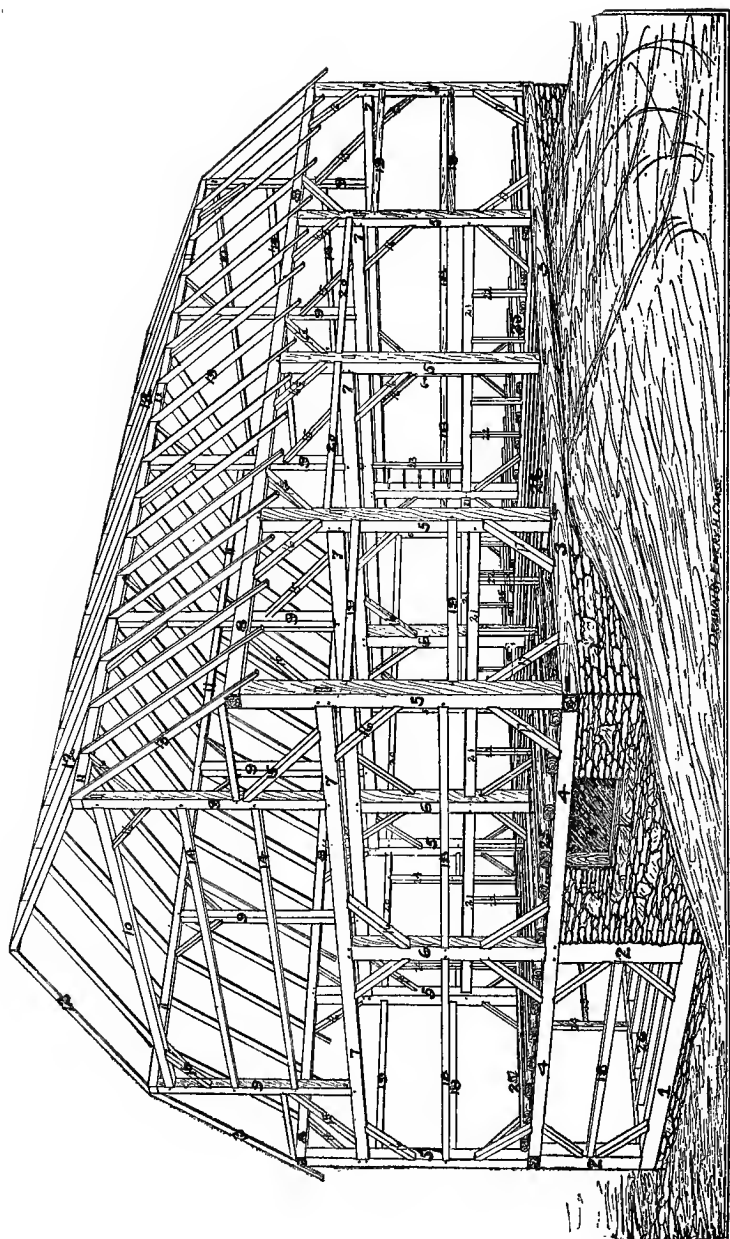


Fig. 120. General Framing Plan for a Heavy Timber Barn.

HEAVY TIMBER BARN

General Framing Plan. Fig. 120 shows the general plan of a barn frame of a building 38 by 64 feet, with 16-foot main posts, gambrel roof, basement, and double driveway floors. It is typical heavy timber construction, with boxed mortise-and-tenon joints.

One point worthy of note for storage barns such as this, is the effort to get height—not width—to get as much under a given amount of roof as possible. That this is an advantage, has been slowly but well learned; the farmer will tell you that the bay or mow is only half-full when filled even with the main plates. The weight of the portion to be stored above keeps pressing the lower part down—an advantage that is lost in the low, wide barn. All the crops are lifted by means of rope and tackle, and carried by means of a steel track and car the full length of the barn just under the ridge of the roof, and then dropped to their proper places in the bays, mows, or the loft, over the driveway floors, the power being furnished by a horse team.

Another important principle in the construction of these buildings is that no timbers supporting a heavy load—as beams, cross-sills, etc.—are made to rest on their tenons alone, but all have a shoulder or bearing across the whole end of the stick.

The drawing shows the ends of beams boxed

into the posts, while the ends of the cross-sills have a bearing on the end of the basement posts below. Good framing requires also that no braces shall hold against the tenon alone, but they should have a boxing of at least one-half inch in depth.

Another important principle is that of **draw-bore pinning**. By this is meant pins that hold the tenons; ordinary drift bolts or spikes would not do, as a pin made of wood is larger than the iron ones would be, and will not side-cut or press into the wood so much as the iron ones would do under a heavy load. Also, the pins must have a long taper, to give **draw**. The draw-bore holes in the tenon and those through the mortise are given one-eighth inch draw or variation in such direction as will tend to pull the tenon and seizing tighter into the mortise and boxing. That is to say, the distance from the joint to the draw-bore hole is one-eighth inch greater in the mortise than in the tenon.

All of the large cross-timbers should be of whole sticks—not spliced—that is, the beams and cross-sills in particular; but the main sills and plates may be spliced at every bent or post if desired. Sometimes long timbers are very hard to get, in which case the width of the barn can be made to conform to length of timbers obtainable, from 30 to 40 feet.

Some people have a notion that several planks spiked together will make a stronger stick of timber than a solid one. This is not

true; after having tried it many times, the writer is prepared to say that you can make a stick fairly stiff one way; but, with all the spikes you can drive, it cannot be made as stiff the other way.

The length and number of posts in such a barn are entirely arbitrary, depending on the

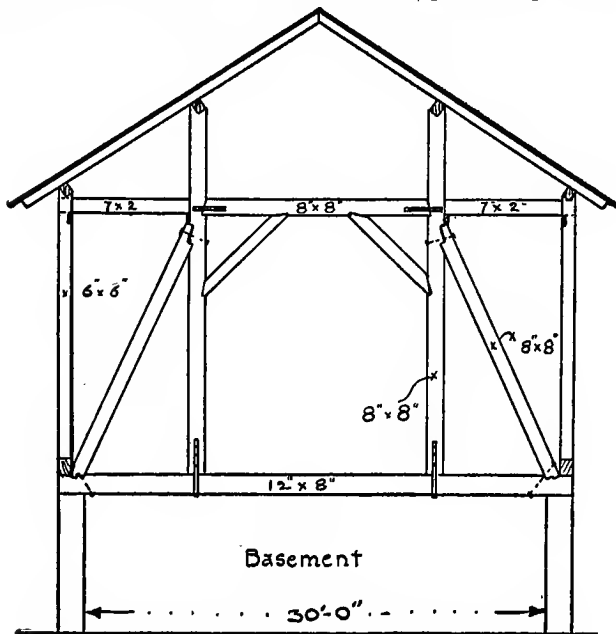


Fig. 121. Truss for Barn without Basement Posts.

size of barn desired. The height of the purlin plates is also variable.

This kind of barn is built to best advantage on a gentle hillside, thus allowing an easy driveway to the main floor of the barn, and giving opportunity for a basement underneath to

afford valuable storage room for implements; this basement space also provides warm stables.

While there are other forms of heavy timber construction which afford greater strength than

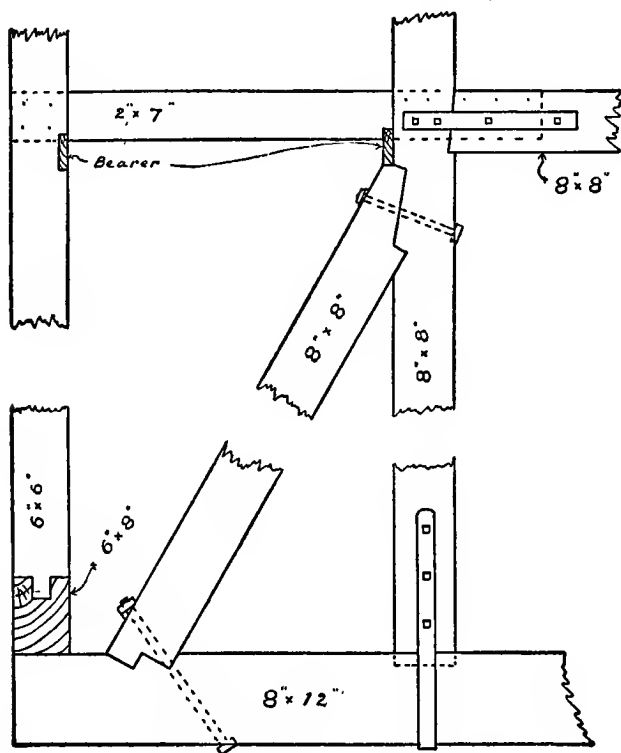


Fig. 122. Details of Heavy Framing.

that shown in the drawing, this method has been found to answer every purpose; and the added advantages of other methods of framing seldom warrant the difference in cost.

At first glance at the construction shown in Fig. 120, one would think such a frame a wilderness of timbers. As a matter of fact, however, the system is simple, and the number of names of different members or parts is not great. The accompanying list gives the names and sizes of the different numbered parts:

PARTS OF A HEAVY TIMBER BARN.

	Name of Part	Size
1.	Basement sill	10 by 12 inches
2.	Basement posts	12 by 12 "
3.	Main sill	10 by 10 "
4.	Cross-sill	10 by 10 "
5.	Main post	8 by 8 "
6.	Center post	8 by 8 "
7.	Main beams	8 by 10 "
8.	Main plate	8 by 8 "
9.	Purlin posts	6 by 6 "
10.	Purlin beams	6 by 6 "
11.	Purlin plate	6 by 6 "
12.	Upper rafters	2 by 6 "
13.	Lower rafters	2 by 6 "
14.	Purlin girts	4 by 6 "
15.	Purlin braces	3 by 4 "
16.	3-ft.-run brace	3 by 4 "
16½.	2½-ft.-run brace	3 by 4 "
17.	3½-ft.-run brace	3 by 4 "
18.	End girts	4 by 6 "
19.	Side girts	4 by 6 "
20.	Door girts	4 by 6 "
21.	Breast girt	6 by 8 "
22.	Breast girt studs	3 by 4 "
23.	Ladder post	3 by 4 "
24.	Door posts	4 by 4 "
25.	Overlays, top and ends flattened to...	6 "
26.	Sleepers	6 by 6 "

Details for Heavy Timber Framing. Fig. 121 is a sketch of a barn bent on an eight-foot basement, framed as a simple truss so as to do away with the posts in the basement. The roof and floor loads are supported, the raking members carrying the stress down to the side walls of basement.

Fig. 122 shows details of framing; which should be carefully done, as the truss has to bear moving loads as well as the weight of hay, animals, etc., and the roof itself. The sizes of

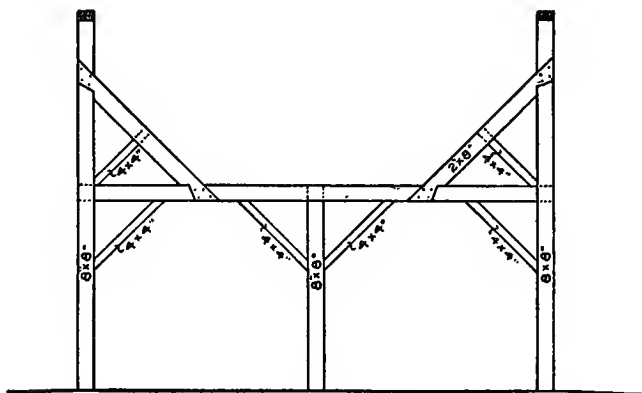


Fig. 123. Bracing to Prevent Outward Spreading.

timber given allow for trusses being about 8 feet apart.

Special bracing is sometimes necessary to prevent a large barn from spreading in the hay-mow. Some arrangements are all right for outside pressure, but not to withstand the hay pressure from the inside. Frequently barns

give out in that way and have been fixed over; but it is not a very desirable job. Fig. 123 is a small sketch which shows how to make a stronger frame than the others, and with less braces. The long braces go in between the 2 by 8-inch braces, and should be well spiked. There should be braces between bents to keep the posts from twisting, in case the foundation should settle.

Strong Purlin Post Bracing. Fig. 124 shows a method of framing the center bents of a barn,

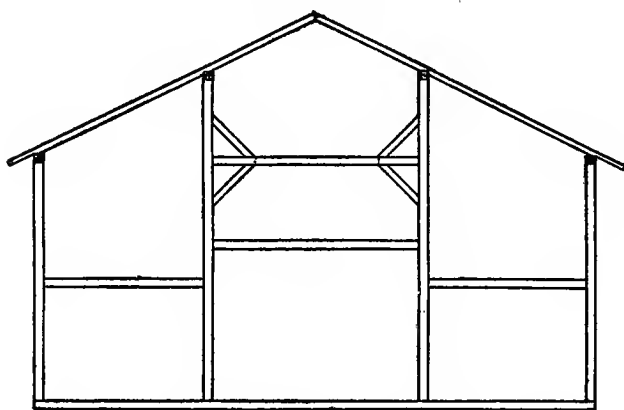


Fig. 124. Center Bent, Showing Purlin Post Bracing.

which is especially adapted to barns having flat roofs and equipped with hay carriers. A very strong bond is needed in such barns between the purlin posts, to prevent the excessive weight placed on the top rafters by the hay carrier from spreading them apart. The girder is also low

enough for the loaded hay carrier to pass over it.

There is no girder between the top of the shed post and the purlin; for, when the purlins are framed as described, there is no need of

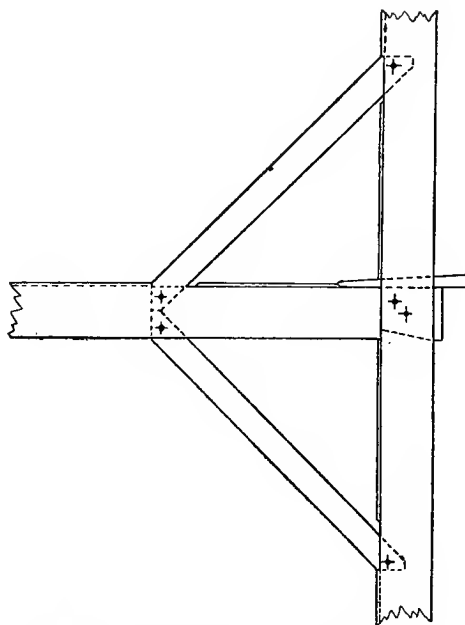



Fig. 125. Mortise Joint for Cross-Tie.

such a girder, as the rafters will hold the shed post to its place if it has a tie at the bottom and a loft tie up some 8 or 9 feet. Of course, where the barn is extremely high, it is well to put in this girder.

Fig. 125 shows a section of the purlin post, center girder, and braces, drawn to a large scale

to illustrate the method of dovetail mortise joint used.

Expert advice was asked not long ago concerning the best method of construction for a barn somewhat similar to this one. It was to be a barn for 50 acres of land; its dimensions 26 by 46 feet, and 18 feet to plate, with a solid concrete wall under the entire barn. Would it be advisable to use big timbers mortised and

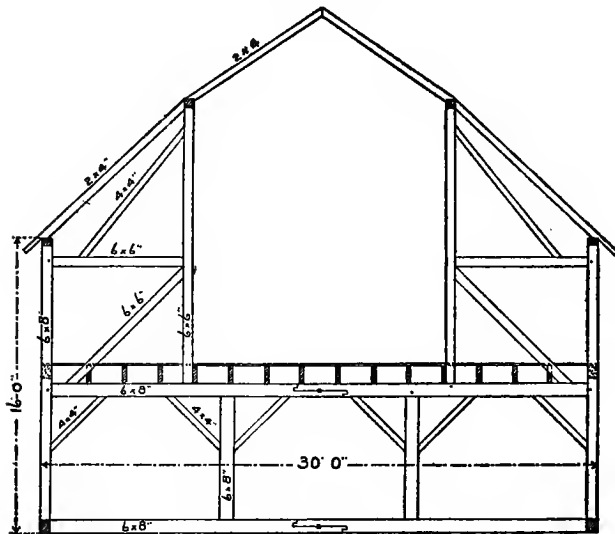

CROSS SECTION.

Fig. 126. Center Bent of Hay Barn.

tenoned together, or a balloon frame with 2 by 4's placed on 2-foot centers and sided with patented siding? How should it be tied together? Would 2 by 8 inches, 26 feet long, be all right with tight mow floor over all except driveway?

Will 2 by 6-inch rafters be all right for that width to be used with a shingle roof?

These were the points inquired about. As this barn is not large, it would not be necessary to use heavy timbers, except for the sills; and for this, not more than 6 by 8 inch, properly

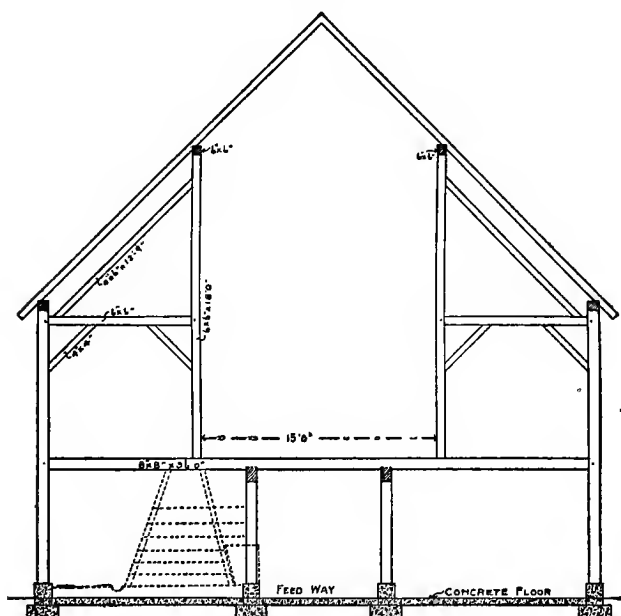


Fig. 127. Center Bent of Hay Barn.

framed and anchored to the concrete with bolts. Two-by-four studding set on 24-inch centers would be all right, but heavier than 2 by 8-inch joist should be used for the hay-mow floor, unless there is to be a support through or near the center. About every third studding above

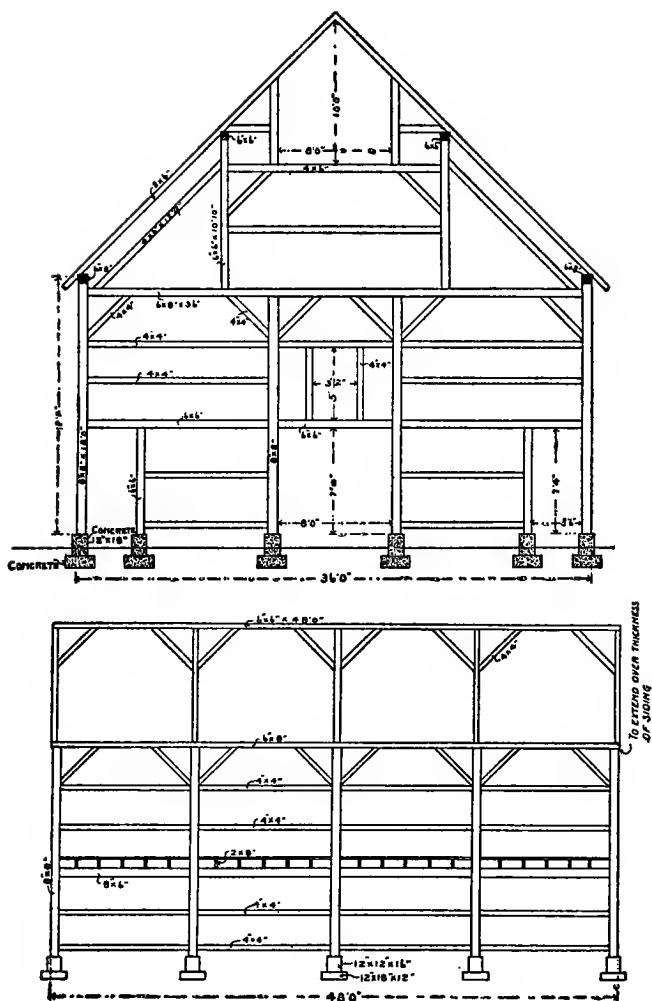


Fig. 128. End and Side Wall Framing for Hay Barn.

the hay-mow floor should be tied with braces to the joist to prevent spreading of the walls. Two by six-inch rafters set on 24-inch centers will be amply heavy for this roof for all that will be required of it.

Framing for Hay Barns. What is usually wanted in a general purpose barn on the farm

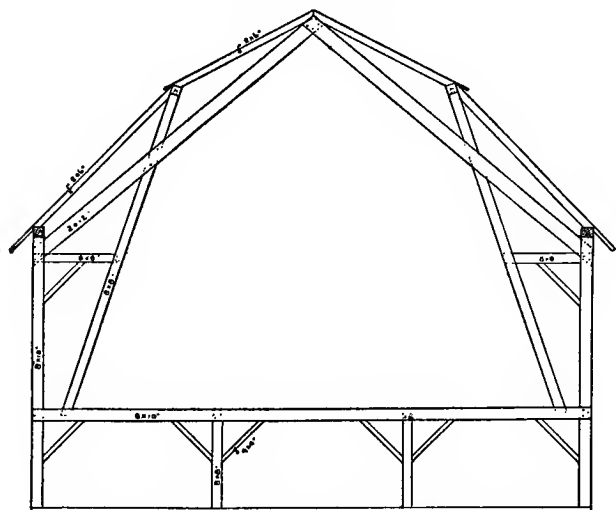


Fig. 129. Center Bent of Gambrel Roof Hay Barn.

is an abundance of hay room, with as little timber in the mow as possible. A good many carpenters are puzzled when it comes to framing a barn so as not to have much timber in the way, and yet to make a good substantial job. Fig. 126 shows good construction for a country barn that pleases all who see it. It is the center bent to which attention is called.

Figs. 127 and 128 show three sections of another barn well framed for hay storage. It is a good plan, having no timbers in the way if a fork is used in mowing hay. This is a barn very often built.

All floors are of concrete, and the posts rest on concrete blocks. All main posts are 8 by 8 inches; girders, 6 by 8 inches; plates, 6 by 8 inches; purlin plates, 6 by 6 inches; purlin posts,

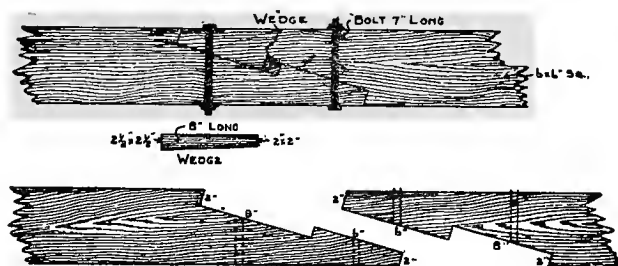


Fig. 130. Good Splice for Heavy Timbers.

6 by 6 inches; joist bearers, 6 by 8 inches; cross-ties, 6 by 6 inches; rail ties, braces, etc., 4 by 4 inches; rafters, 2 by 6 inches; joists, 2 by 8 inches, spaced two feet apart. The entire frame should be put together with mortise-and-tenon joints. This kind of barn should be sided with No. 1 barn siding, and cracks battened with bevel batten. The general dimensions are 36 feet by 48 feet. Fig. 129 shows the center bent of a Gambrel roof hay barn, 40 by 80 feet.

Splice for Heavy Timbers. It often happens that timbers of proper dimensions for a given

purpose are not long enough and have to be spliced. Fig. 130 is a diagram of as good a spliced joint as there is. It is strong, durable, and easily made.

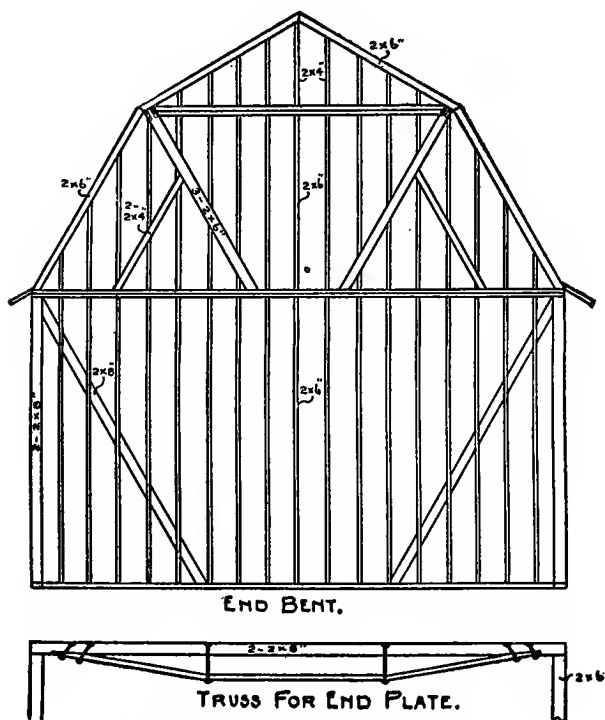


Fig. 131. Plank-Frame Construction.

PLANK-FRAMED BARNs

With the scarcity of heavy timbers and consequent cost, it is time carpenters who are to erect barns should give some study to the newer methods of framing, where timber is from 6 to

12 inches wide, and none thicker than 2 inches. The use of modern hay and grain elevating machinery, calls for barns with open centers; hence upper cross-ties, collar beams, etc., are in the way, and they are quite unnecessary.

A plank frame of size and construction indi-

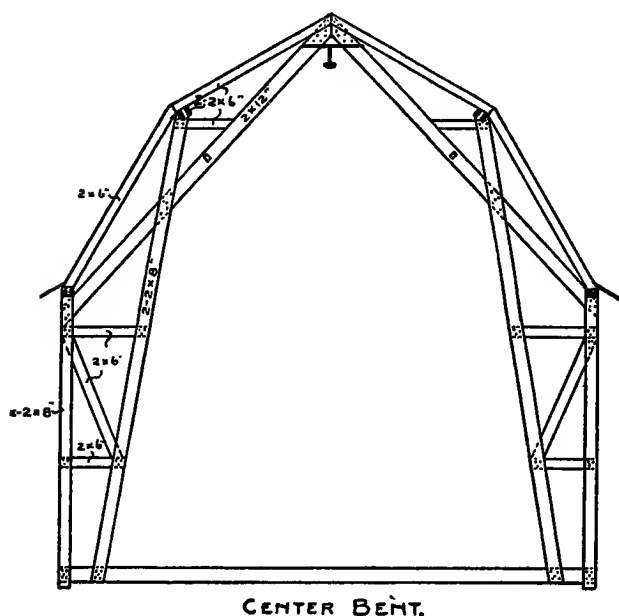


Fig. 132. Wind Bracing for Plank-Frame Barn.

cated in Figs. 131, 132, and 133, is in every way satisfactory, and is fully as strong as an old-fashioned frame made of timbers 8 to 12 inches square. It is about two-thirds as costly; and less experienced carpenters are required to erect it.

In this plank frame, there are no timbers larger than 2 by 12 inches, which are doubled and trebled where great strength is required. Where tensile strength is required, two 2 by 8-inch are nearly as good as an 8 by 8-inch tenoned and fastened in the old-fashioned way with a

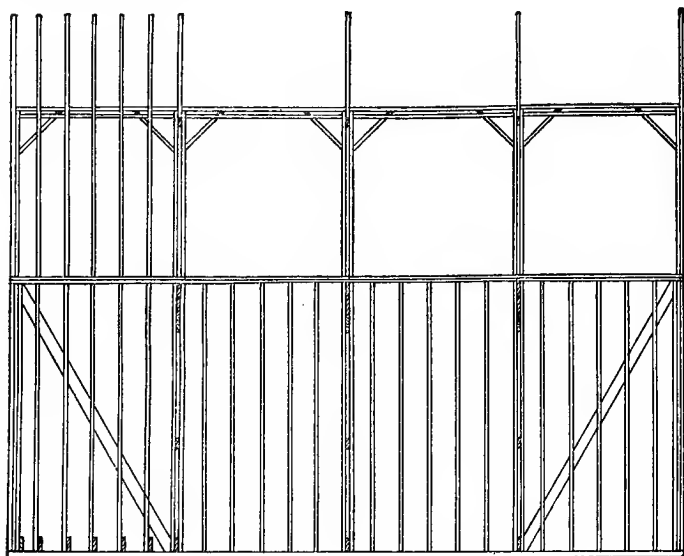


Fig. 133. Side Wall Plank Framing.

pin. In this frame there are no tenons, all members being put together with spikes.

Fig. 134 shows the method of **raising** or erecting the bents after they are framed.

The posts for this barn are 20 feet high, and are built up of joist spiked and bolted together. The bracing and cross-pieces were framed together in sections before raising to their posi-

tion. The inner set of posts, set raking, extend up to form the purlin. The rafters, of which there are two sets, are placed on two-foot centers, lapping at this point.

This kind of construction is very popular in some sections of the country, and, when well built, makes a very substantial job. The timbers, being entirely of joist, are such as can be readily obtained from any lumber yard that is worthy of the name. This is a thing in itself that should not be overlooked, as solid framing timbers are not so plentiful as in years gone by, and in many places are not carried in stock.

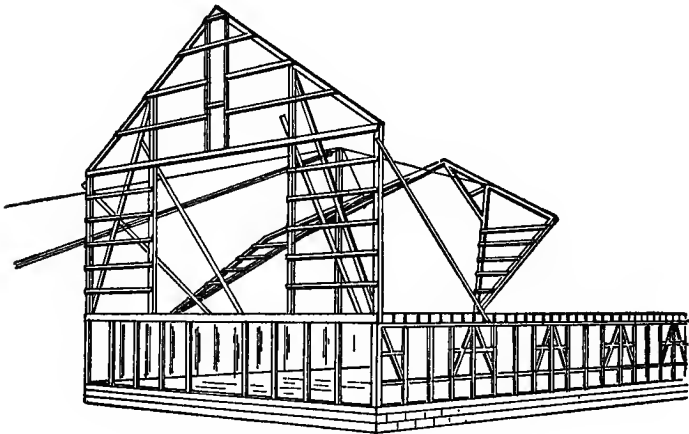


Fig. 134. How the Bents are Raised.

The dealer places the order after he receives the contract to furnish the lumber; and this means that the contractor must wait for the lumber to be shipped from some distant mill, and more

than likely to be first cut from the round timbers; and when it does finally arrive on the building site, it is yet green and really not fit to frame for the best results.

Another thing in favor of the plank frame is that the timbers are light and more easily put together than by the mortise-and-tenon method.

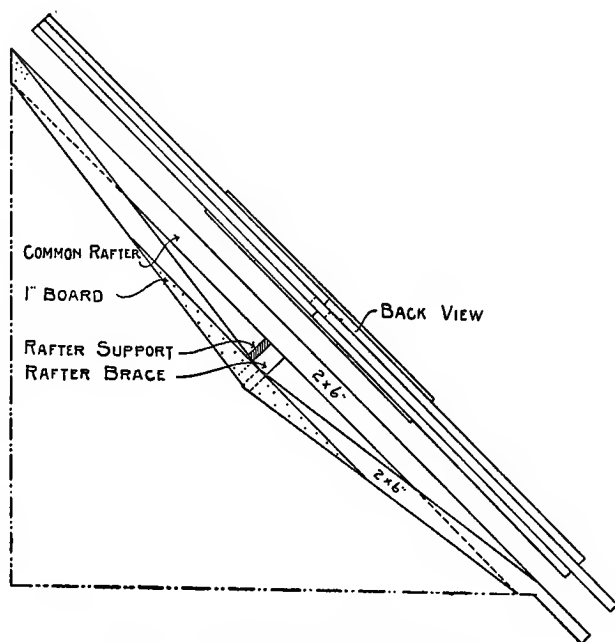


Fig. 135. Queen Rafter for Roof Support.

Roof Supports. Fig. 135 is a sketch of what is called a queen rafter. It is used for barns up to 34 feet wide, without putting in purlins.

While it possesses considerable merit for stiffening the roof, there is nothing in it to keep the sides of the building from spreading, as it does not form a tie, which is necessary when the loft floor is far below the plate.

To secure the additional strength needed, the rafters should be set on 24-inch centers, and

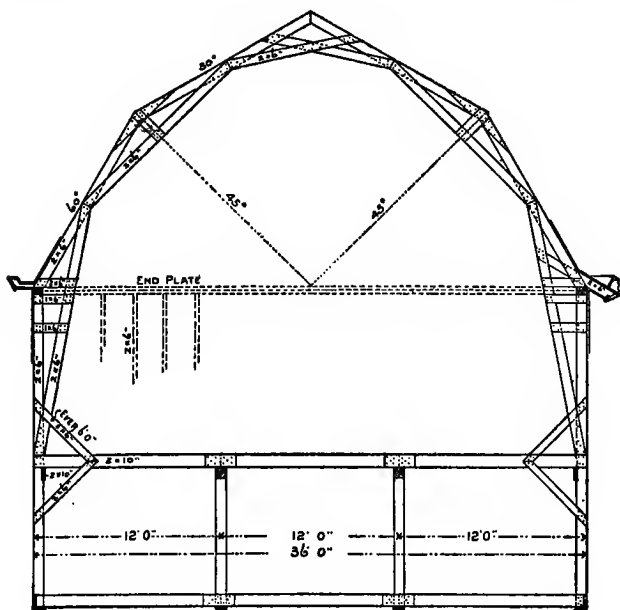


Fig. 136. Plank-Framed Truss for Gambrel Roof.

sheathing put on diagonally toward the center, close and well nailed. The center rafters where the sheathing meet should be doubled and well spiked together. The floor-joint lap onto each stud, and should be well nailed to prevent spreading.

Support for Gambrel Roof. To support a gambrel roof on a barn 36 feet wide, having posts 20 feet high, the floor being 11 feet below the plate, requires extra strong bracing. A construction using 6-inch studding set on 24-inch

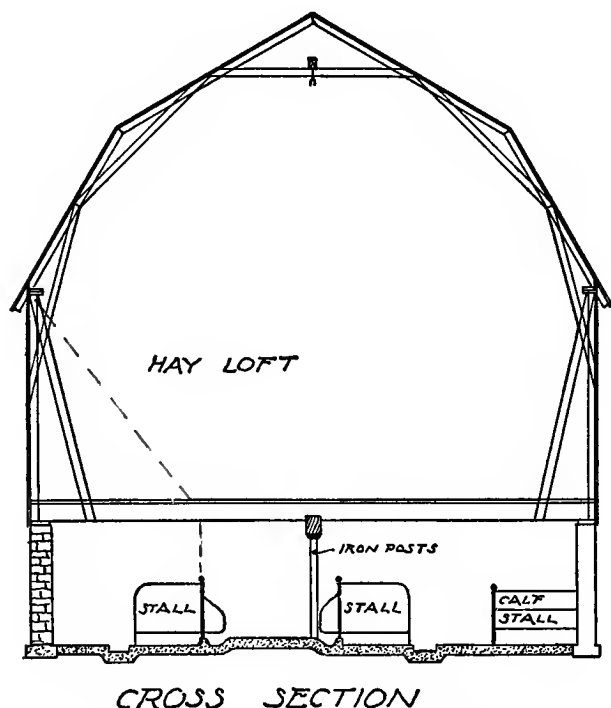


Fig. 137. Arrangement of Dairy Barn.

centers, and braced as shown in Fig. 136, can be recommended. The rafters should set directly over the studding, and be braced to same. The floor-joist should be tied to each other, either by letting them lap, or by nailing

a board on the side. All parts should be framed accurately, and well spiked.

Fig. 137 is a cross-section of a large dairy barn; it clearly shows the general arrangement of stalls, mangers, gutters, etc., all constructed out of cement laid on solid ground. The stall partitions are built up out of wrought-iron bars and pipes, leaving nothing to get out of order or decay. The wood superstructure is constructed

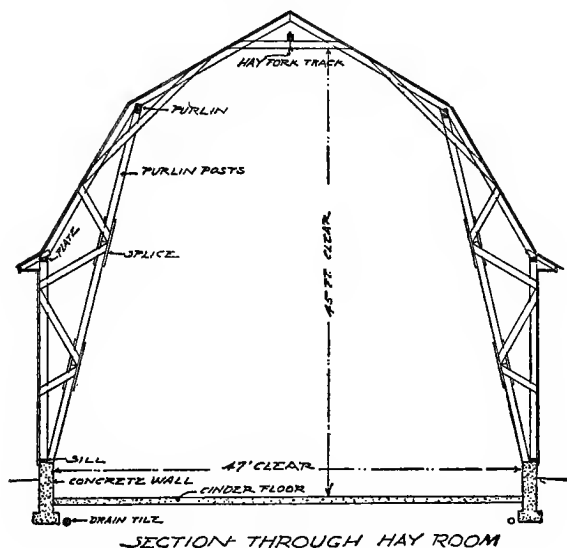


Fig. 138. Self-Supporting Roof Construction.

out of plank; and the roof is self-supporting, without posts or purlins, through each set of rafters being braced, forming a continuous arch from one sill to the other.

This roof gives an enormous capacity to the

hay room, and is well braced against sagging and wind pressure.

The framing arrangement for the hay track support is good, since it distributes the stress evenly to all the roof bracing without an undue amount coming on the top rafters.

The exterior of the barn is sided with matched siding, and the roof is of shingles, making a very durable and good-looking building, and at the same time a barn that can be built within a reasonable figure of cost.

Fig. 138 shows another type of self-supporting roof construction for use in a very large gambrel roof barn. The hay track is well framed for heavy loads. Bracing to withstand wind pressure—which is a very large factor in the case of such a barn, especially in an exposed location—is amply provided for by this system of framing.

Concrete Stable Floors. For the basement story of modern barns where the horses and cows are usually stabled, concrete has been adopted quite generally for the flooring. This is either left bare, or is covered with plank.

For a floor built on sandy soil, no drainage or foundation is necessary. If the soil is clay or spongy, however, eight inches of coarse gravel, stone, or cinders should be well tamped and leveled before placing the concrete; but if the soil is porous, then tamp the soil under the center driveway.

When a foundation for floor is necessary,

drainage to conduct the water gathering in the foundation is also required; therefore the foundation must have large stone in the bottom to afford ample air space, and the excavation must have a slope to one or more points. These low points have tile drains leading the water from the building. This will insure dry floors, and prevent cracking from frost.

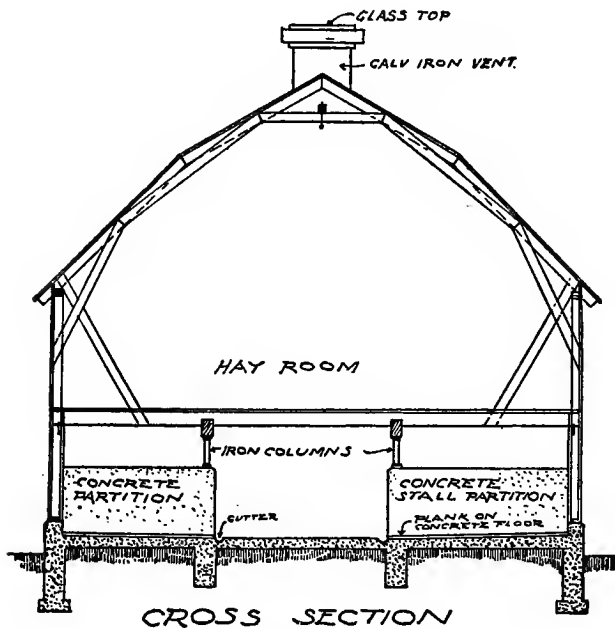


Fig. 139. Concrete Stable Floor and Partitions.

Four inches of concrete for horse and cattle floors is ample; and five inches for driveway will do, though some are made six inches thick. The proportion of concrete depends on the kind of

sand and aggregates. One of the following will prove desirable: Cement one, sand two, gravel three, makes very sound work. Cement one, fine sharp sand one, coarse sharp sand two, gravel or crushed stone four parts, will equal in strength the first formula, and save much in cost. Add sufficient water to make a stiff grout, and tamp well into place so that the top will be one-half to one-quarter inch lower than the top of floor; before this has set, apply the top coat, which should consist of one part cement and two parts sharp sand, and trowel smooth. After this has set for one hour, tamp with stiff scrub brush or wire foundry brush. This will produce a non-slipping surface. These floors will be uninjured by the sharpest shod horses after four weeks.

In large barns, a tile drain is necessary, and an outlet from every other stall to this drain is sufficient; but in small barns the gutter alone is sufficient. This gutter is eight inches wide for horse floors, and six inches wide for cattle, both gutters being two and one-half inches deep. For the mangers, 2 by 4-inch scantlings are bolted to the floor with half-inch bolts eight inches long, embedded five inches into the concrete. Manger partitions are boarded on both sides and filled between with tamped concrete four feet high, so that when the wood partition has served its purpose a solid concrete wall will remain. Use 4 by 4 timbers for framing stall partitions (see Fig. 139).

Water-Tight Barn Floors. Sometimes it is desired to construct a floor in a horse barn to catch all fluids and keep them from going through into the basement. One way suggested is to lay a tight floor of $\frac{7}{8}$ -inch matching, then cover that first with asphalt about $\frac{1}{2}$ to $\frac{3}{4}$ inch, and on that lay a $1\frac{3}{4}$ -inch matched floor. This floor should be properly graded, so as to drain to a trough for carrying off fluids.

This method is all right, but it would prove to be expensive in the course of a few years. Another and possibly a better way would be to lay a rough floor on the joists, and put on this floor 4 or 5 inches of good concrete, well laid down, not leaving more than 25 square feet in one block, using 1-inch expansion joints filled with pitch. This will keep the floor from cracking, and will also be water-tight. There should be a gutter just behind the horses, and the floor should have at least $\frac{1}{2}$ -inch fall to each foot. The floor should not be troweled smooth, but left rough, except in the gutter; put on this concrete (after it has been down six or seven days) about 2 inches of clay. Wet it thoroughly and tamp lightly into place. Clay is one of the best materials for horses to stand on.

If it seems preferable to have wood for the animals to stand on, lay a floor of rough planks, somewhat open, over the concrete, leaving cracks wide enough so that all liquid will immediately run through to the concrete and be drained to the desired points.

How to Make Barn Doors

Large-size barn doors that are strong and rigid, yet do not take up too much room in thickness, are the kind most wanted.

Fig. 140 shows two sectional drawings with elevations suitable for barn doors. The first is made of three thicknesses of boards as shown. The center is of $\frac{7}{8}$ -inch boards placed verti-

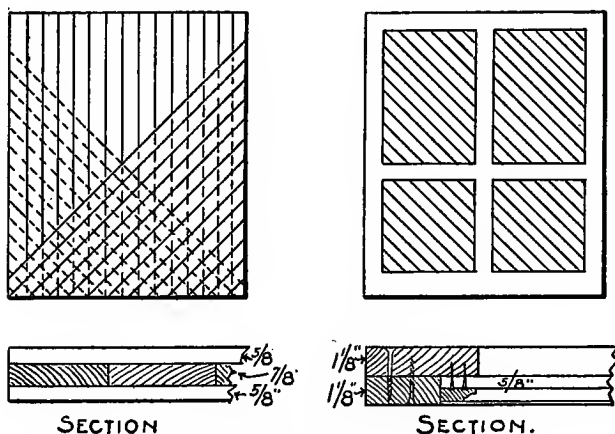


Fig. 140. How to Make a Heavy Barn Door.

cally, and $\frac{5}{8}$ -inch ceiling placed diagonally on both sides, covering the whole space, and well nailed. This will make a door $2\frac{1}{8}$ inches thick.

The second is made of two $1\frac{1}{8}$ -inch pieces for the framework, lapped and screwed together. The panel work is made of $\frac{5}{8}$ -inch ceiling cut in and nailed with a stop-mould to cover the nail-heads. All the laps and joints should be painted

with white lead paint. This will make a door $2\frac{1}{4}$ inches thick.

Hay-Mow Doors. The best way to hang hay-mow doors for a barn with hay track high up in the gable, the door eight or ten feet wide, and made to swing clear back, is a point that often gives trouble to the barn builder who wants to make a neat job.

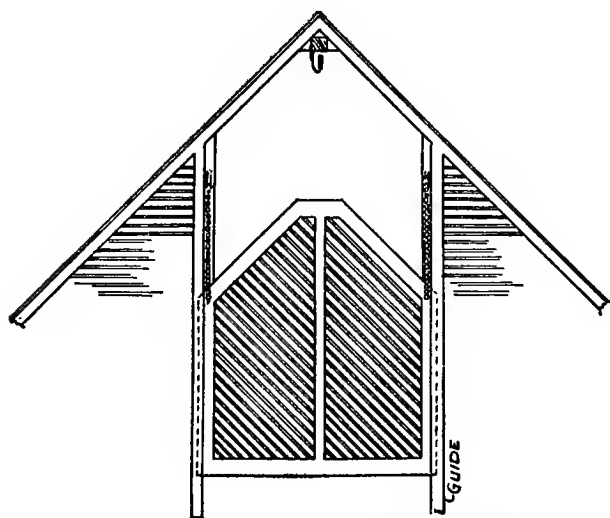


Fig. 141. Hay Door Hung with Weights.

Figs. 141 to 145 show the various arrangements. Fig. 141 is for a single door hung with weights and run in grooved jambs on the outside of the building. With this kind of arrangement, the door is made to slide up and down, and in this way can be made to slide close up to the comb.

Fig. 142 is for double doors, with small doors from these up to the carrier. With this arrangement, the doors can be hung with butts, and will swing clear of the cornice; but there should be a movable cross-bar at the top of the big doors to give a solid bearing to shut against. The bar can be removed when putting in hay, thus leaving a clear space down to the larger opening,

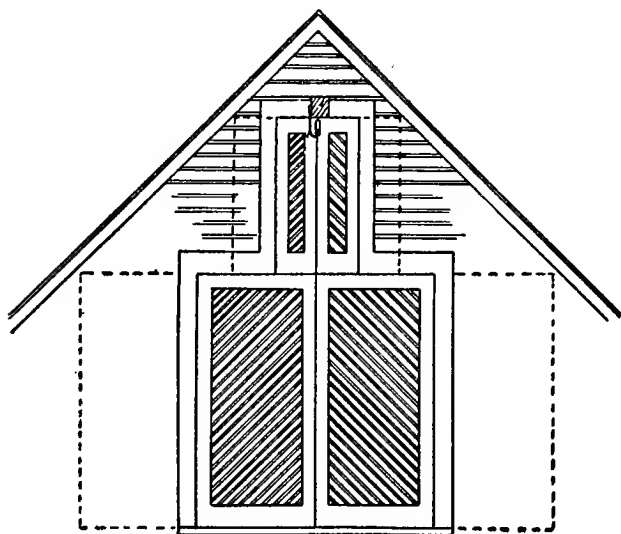


Fig. 142. Double Hay-Mow Doors.

as it is not particularly necessary to have the full-sized opening run all the way up to the carrier.

Fig. 143 is a sketch of **double hay doors** for a barn that are very satisfactory. The general instructions for making are as follows:

Lay off the door in halves to fill the opening clear up to the track. Next begin at the outer upper corner and lay a downward line towards the center of the door at the same angle as the pitch of the roof. Cleat and saw on this line, and put hinges on the inside. This top leaf will

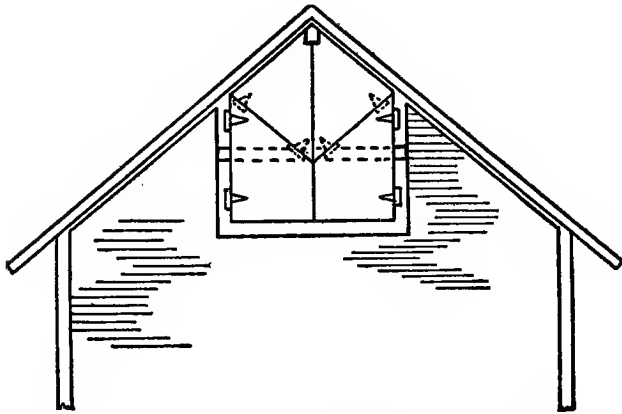


Fig. 143. Double Doors to Swing and Fold Down.

then fold down as the door opens, and all will swing under the cornice and lie flat against the wall.

To fasten the doors open, make a double-ended spiked pole, with which press the outer or top fold of the door up firmly against the fascia, seating the lower end of spiked pole near the bottom of the door. There should be a 2 by 4 or a 2 by 6 bar across the opening to hook the doors to, as well as for safety, while opening or closing.

Fig. 144 is a sketch of another way of hanging large barn doors, which has given good satisfaction wherever it has been used.

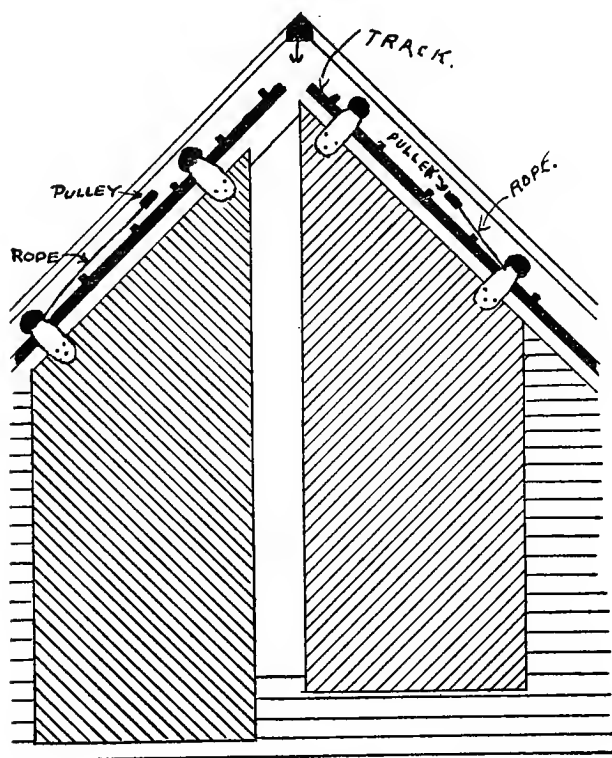


Fig. 144. Weighted Doors on Inclined Tracks.

Any flat barn-door track will do. A $\frac{5}{8}$ -inch rope is tied to the lower hanger and run through a 5-inch wooden pulley set in rafter; from there it is run down inside of rafter 3 or 4 feet to another pulley; and from there to a small

weight below, which will run between two studs. Hanging a door this way does not take as heavy a weight as running it up and down the grooves, and it runs more easily. When doors are both closed, they can be fastened together on the inside with a hook. Bumpers on the outside of the barn prevent them from running off the track.

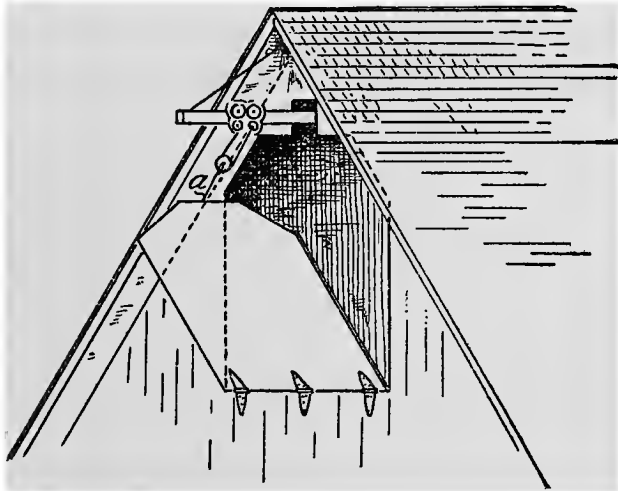


Fig. 145. Hay-Mow Door to Fold Down.

A practical barn builder writes concerning hay-mow doors as follows:

“For some time I thought to hang the door with weights was the only way; but the last one of that kind I put up, two of us worked over an hour trying to get it to work right; finally we made the guides so loose that the door would nearly fall out. It did not work well then. If the wall springs either in or out, the door will bind.


“The enclosed illustration (Fig. 145) will give you my plan. The wire, *a*, has a hook on the upper end to hook into the pulley, as shown. A pull on the hay-rope will raise the door with ease. The carrier trips the same as with a load of hay. The door is pulled up close, or left open a little for ventilation. Tie the hay-rope any place, and it holds the door, which, being hinged at the bottom, hangs below the opening, out of the way.”

Ventilating a Barn. Systems of ventilation are in demand for large barns, without putting on the common roof ventilators, which are often a nuisance on account of the sparrows and insects. This nuisance may be almost entirely avoided by screening the openings of the ventilator just the same as for the windows in a residence. As for ventilation from the stable part, this may be accomplished as shown in Fig. 146. It is simply done by boarding up the space between two studdings, boxing out at the cornice to clear the plate, and finishing with turret effect on the roof, with screened openings on all sides. The interior openings should be as shown, provided with slide shutters. One of these vent shafts should be placed about every eight feet, or opposite every other stall.

Barn Windows. As barn windows, as a general rule, are one-sash windows, it is sometimes difficult to contrive a convenient way to open them. The slide window is not well liked, because it is almost impossible to make it so that rain will not beat in. Besides, it is necessary to have a stop outside to guide the sash,

which at best is a dirt catcher and holds moisture, causing the window-sill to rot in a short time.

Fig. 147 illustrates, at the right, a type of basement window which has given good satisfaction. It being impossible to raise the base-

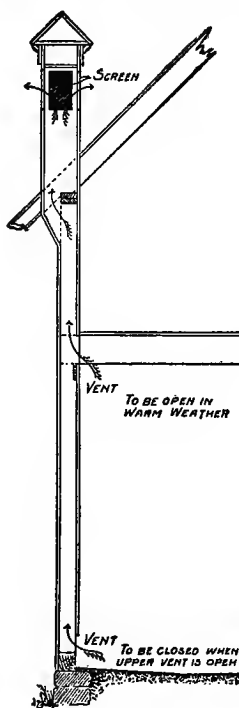

ment windows on account of the main sill just above them, the frames are made as shown. This allows the window to be opened by drawing top of sash back onto the pieces at-

VENT
TO BE OPEN IN
WARM WEATHER


VENT
TO BE CLOSED WHEN
UPPER VENT IS OPEN

Fig. 146. How to Ventilate a Stable.

tached to frame and floor above, which will give ventilation without a direct draught; or sash can be raised as far as floor will allow. Sometimes the side jambs are made wide at the top, so that there is no opening at the sides, when

the window is open; but this is not necessary unless the window is close to the live-stock.

A gable window is shown also, in Fig. 147, at the left. It is hung just above the center

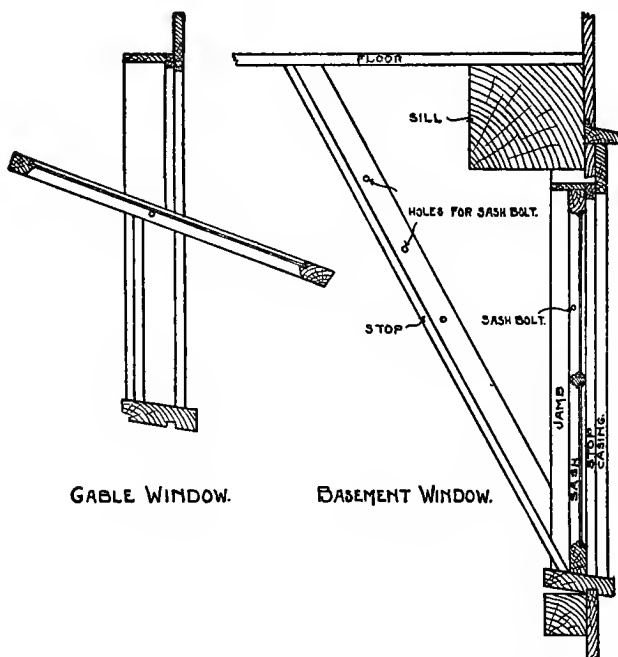

Figs. 147 and 148. Barn Gable and Basement Windows.


with sash bolts, and can be opened and closed with cords running to some convenient place, as not everybody likes to climb to the peak of a high barn when it is empty, to open or close windows.

Framing of Factories, Stores and Public Buildings

When we come to the framing of larger buildings, such as factories, stores, halls, etc., the work becomes more complicated and technical in its nature, falling perhaps more within the province of the structural engineer than the ordinary carpenter and builder. Nevertheless, certain of the fundamental principles of such work should be understood, and may well be considered here. They are, briefly: **standard mill construction; strength of timbers; principles of truss construction; and framing of public buildings** for safety and also for architectural effect.

STANDARD MILL CONSTRUCTION

The succession of heavy fire losses each year is the penalty which this country is paying for the erection of light, cheap, and poorly designed buildings. The cost of fire insurance is a direct yearly tax on the building and its occupants. It is the duty of those responsible for the design of buildings, to plan them so that this tax may be the smallest possible, and this can be done often without any great increase in the cost of the building itself.

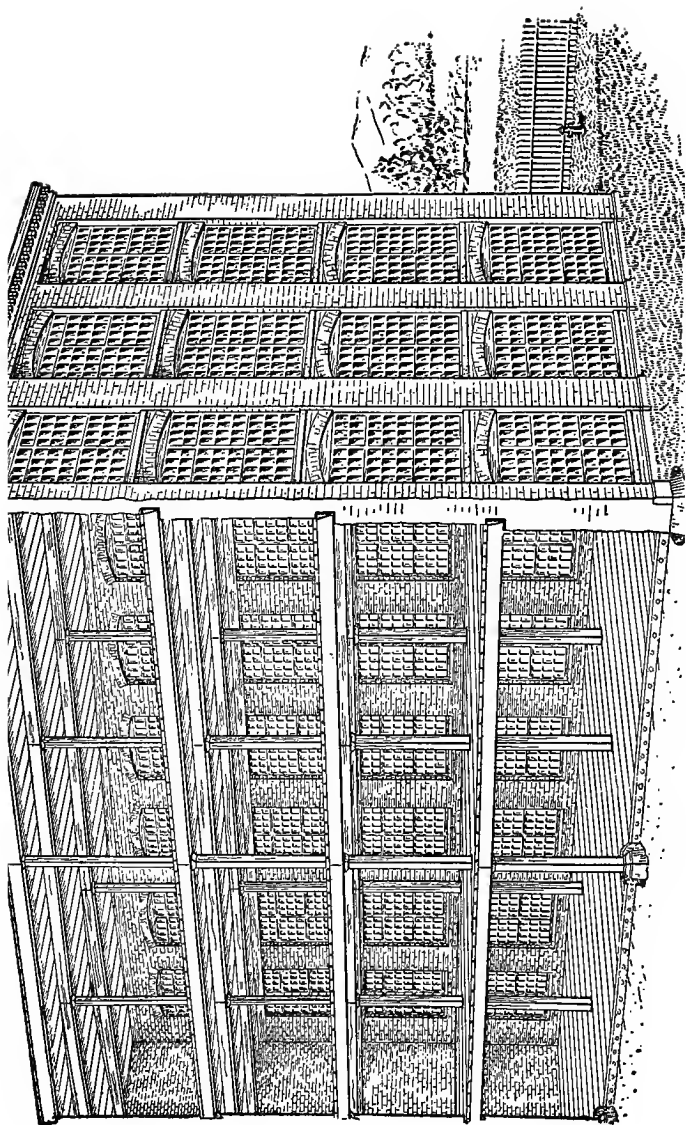

According to tests made by the Boston Insurance Engineering Experiment Station—which only confirm and bear out the experience of years—it has been clearly shown that, all things considered, the **mill** or **slow-burning** type of construction is to be recommended for most factory and warehouse buildings. In some cases, where the contents will be extra inflammable, the extra expense of the thoroughly fireproof reinforced concrete structure is warranted; otherwise mill construction should be used.

In order that there shall be no misunderstanding of what is meant by **mill construction**, we shall say that it consists in disposing the timber and plank in heavy solid masses so as to expose the least number of corners or ignitable projections to fire. Also it consists in separating every floor from every other floor by fire stops.

The essential features of standard mill construction are illustrated in Fig. 149, and are, briefly, as follows:

1. The walls should be of brick or concrete block, at least 1 foot thick (16 inches for best work) in top story, and increased in thickness at lower floors to support additional load. The pilastered wall has many advantages, and is often preferred to the plain wall. Window and door arches should be of brick; window and outside door-sills and underpinning, of granite or concrete.

2. The roofs should be of 3-inch pine plank,

spiked directly to the heavy roof timbers and covered with 5-ply tar and gravel roofing. Roofs should pitch $\frac{1}{2}$ inch to $\frac{3}{4}$ inch per foot. An incombustible cornice is recommended when there is exposure from neighboring buildings.

3. Floors are best made of spruce plank 4 inches or more in thickness according to the floor loads, spiked directly to the floor timbers

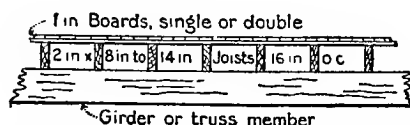


Fig. 150. Undesirable Floor Construction.

and kept at least $\frac{1}{2}$ inch clear of the face of the brick walls. Figs. 150 and 151 show bad and good forms of floor construction. In floors and roof, the bays should be 8 to $10\frac{1}{2}$ feet wide; and all plank two bays in length, laid to break joints

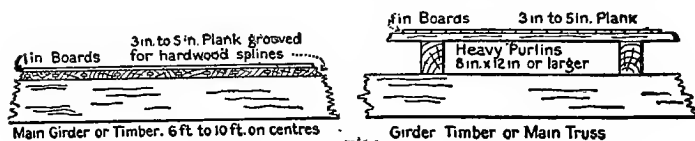


Fig. 151. Good Types of Floor Construction.

every 4 feet, and grooved for hardwood splines. Usually top floor of birch or maple is laid at right angles to the planking; but the best mills have a double top floor, the lower one of soft wood laid diagonally upon the plank, and the

upper one laid lengthwise. This latter method allows boards in alleys to be easily replaced when worn, and the diagonal boards brace the floors, reduce vibration, and distribute the floor load even better than the former method.

Between the planking and the top floor should be two or three layers of heavy tarred paper, laid to break joints, and each mopped with hot tar or similar material to produce a reasonably water-tight as well as dust-tight floor.

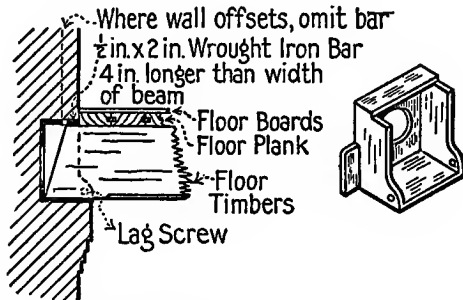


Fig. 152. Cast-Iron Wall Box for Floor Timbers, with Lugs for Anchoring to Walls.

Rapid decay of basement or lower floors of mills makes it desirable, whenever wood is not absolutely necessary, to provide cement floors for these places. If wooden floors are required, crushed stone, cinders, or furnace slag should be spread evenly over the surface and covered with a thick layer of hot tar concrete, on which is often laid tarred felt, well mopped with hot tar or asphalt. On this a floor of 2-inch seasoned

plank should be pressed, nailed on edge without perforating the waterproofing under it, and the hardwood top floor boards nailed across the plank. Cement concretes promote decay of wood in contact with them. If extra support is required for heavy machinery, independent foundations of masonry should be provided.

4. In regard to timbers and columns it should

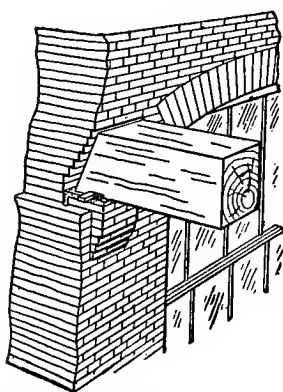


Fig. 153. Floor Timber Resting on Cast-Iron Wall-Plates, with Lugs for Anchoring Timber to Wall.

be remembered that all woodwork in standard construction, in order to be slow-burning, must be in large masses that present the least surface possible to a fire. No sticks less than 6 inches in width should be used, even for the lightest roofs; and for substantial roofs and floors, much wider ones are needed. Timbers should be of sound Georgia

pine; and for sizes up to 14 by 16 inches, single sticks are preferred; but timbers 7 or 8 inches by 16 are often used in pairs, bolted together without air-space between. They should not be painted, varnished, or filled for three years because of danger of dry rot; and an air-space should be left in the masonry around the ends for the same reason. Timbers should rest on cast-iron plates or beam boxes, in the walls, and

on cast-iron caps on the columns, as shown in Figs. 152, 153, 154, and 155.

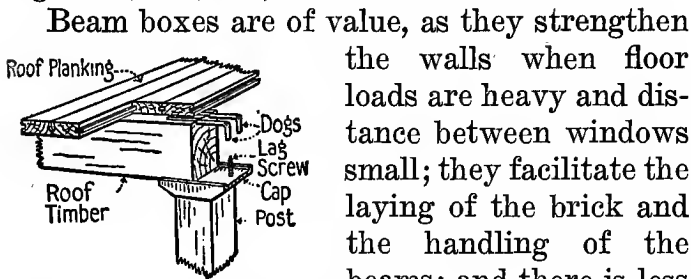


Fig. 154. Roof Timber Resting on Column Cap—Timbers Held Together by 1-Inch Wrought-Iron Dogs.

the walls when floor loads are heavy and distance between windows small; they facilitate the laying of the brick and the handling of the beams; and there is less possibility of breaking away the brick in putting the beams in place.

They also insure a proper air-space around beams.

Columns should be set on pintles, which may be cast in one piece with the cap, or separately, as preferred (see Figs. 156 and 157.) Columns of cast-iron are preferred by some engineers; and, when the building is equipped with automatic sprinklers, have proved satisfactory, but are not so fire-resisting as timber.

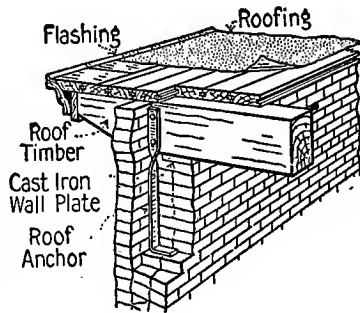


Fig. 155. Roof Timber Resting on Cast-Iron Wall-Plate, Showing Overhanging Open Wood Cornice and Wrought-Iron Anchor.

Wrought-iron or steel col-

umns should not be used unless encased with at least 2 inches of fireproofing.

One of the most important features of slow-

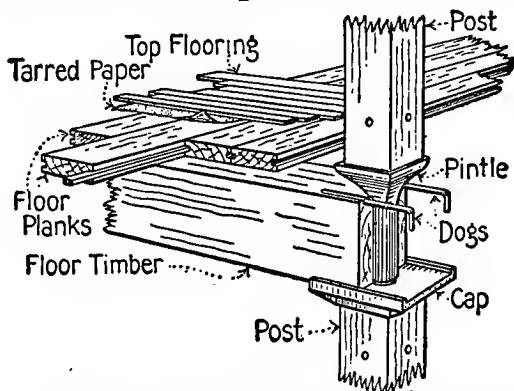


Fig. 156. Cast-Iron Cap and Pintle for Columns and Dogs for Holding Floor Timbers Together.

burning construction is to make each and every floor continuous from wall to wall, avoiding

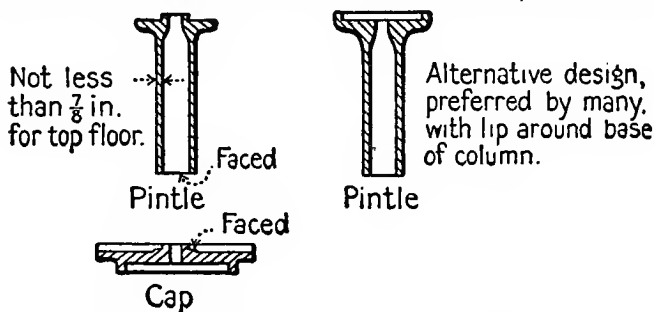


Fig. 157. Cap and Pintle Cast to Fit Columns.

holes for belts, stairways, or elevators, to the utmost extent possible, so that a fire may be confined to the floor where it starts. No well-informed mill owner, engineer, or builder will

therefore fail to locate elevators, stairs, as well as main belts, in brick towers or in sections of a building cut off by incombustible walls from all the rooms of a factory. Openings in these walls should be provided with fire-doors, preferably self-closing. These should be hung on heavy, inclined, solid steel rails at least $3\frac{1}{2}$ inches by $\frac{3}{8}$ inch, and balanced by a weight held by a fusible link.

In modern practice all belts and ropes which may be used for transmission of power to the various rooms are placed in incombustible vertical belt-chambers, from which the power is transmitted by shafts through the walls into the several rooms of the factory. There should be no unprotected or unguarded openings in the inner walls of this belt-chamber.

Saw-Tooth Roof Construction. The great advantages and the increasing use of **saw-tooth** roof construction, together with the lack of familiarity with it in many sections, make it desirable to outline its important features.

Two typical designs are illustrated—one, Fig. 158, a textile weave shed with good basement for shafting for driving looms on main floor above, thus dispensing with the overhead shafting and belting in the weave room; the other, Fig. 159, a design for a light machine shop or foundry. Other designs are applicable, with light wooden trusses or reinforced concrete.

The important advantages of this form of roof construction are:

Uniform diffusion of light throughout the room, thus making all space in it available. With all interior surfaces painted white, and with ribbed glass in the sash, the diffusion of light is almost perfect.

Adaptability for lighting large floor areas in wide buildings with low head room, compared with what is necessary in wide buildings with the ordinary form of monitor skylights.

They provide the true solution to the problem of excluding the direct rays of the sun and obtaining the very desirable north light in all sections.

Economy in lighting, in that they lessen the fixed charges due to the lessened number of hours per day during which artificial light is necessary.

Better working conditions, especially in textile mills, therefore increasing production and encouraging permanency of the help.

The saw-tooth form is especially adapted to buildings for weaving and similar processes in textile factories, machine shops, foundries doing light work, and for similar or allied operations, such as assembling and drafting; and in some dye houses, where careful matching of colors is necessary.

As to the disadvantages, while testimony of those having had experience with saw-tooth roofs is almost uniformly favorable, more or less difficulty has been experienced. Practically all of it, however, may be summed up as due

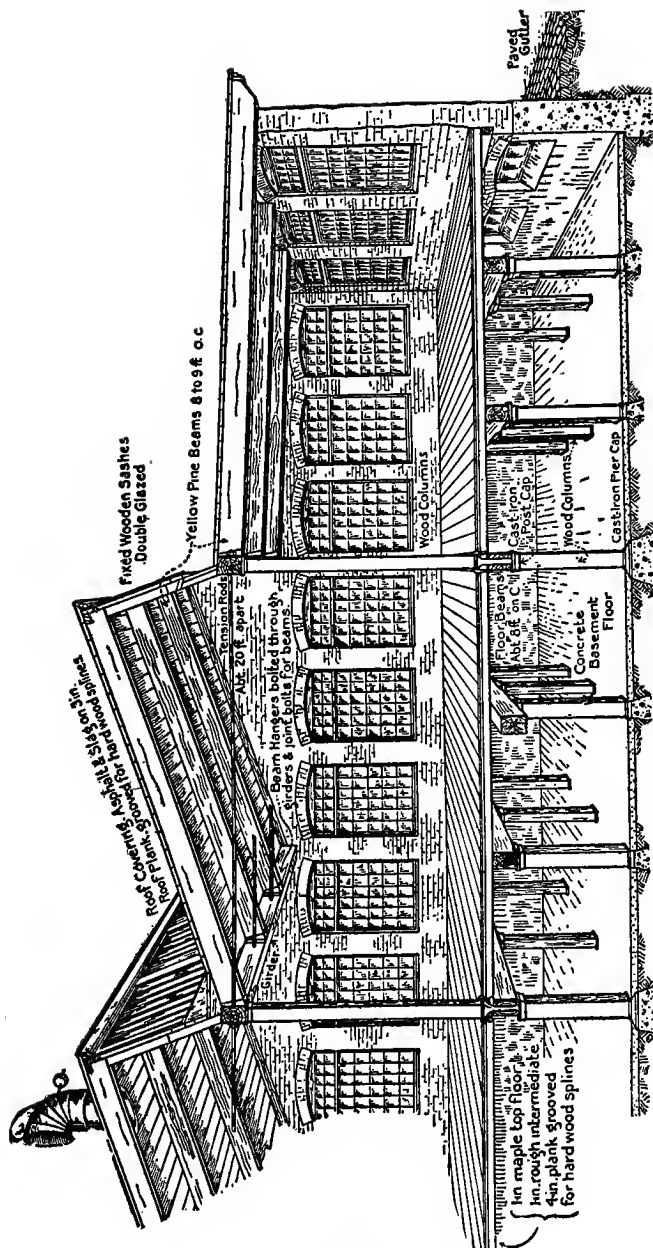


Fig. 158. Textile Weave Shed—Standard Mill Construction with Saw-Tooth Roof.

either to faulty design or to poor workmanship. The difficulties in general are caused by leaks due to severe conditions during winter in our northern climate, poor ventilation, excessive heat when roofs are thin, or excessive condensation on under side of roof and glass when the temperature outside is low and there is considerable moisture in the rooms.

It may here be well to state that the light roof of 2-inch and 3-inch joists and boards should never be used; and that, while the principles of slow-burning or mill construction, with the heavy timbers, are preferred, the increasing difficulty of promptly obtaining yellow pine lumber of good dimensions, and its increasing cost, often necessitate the use of trussed forms, using rather light timbers. In no case, however, should they be less than 6 inches in width, and of depth sufficient to carry the load—this in order that they may be slow-burning. The roof in all cases should be of plank, with wide bays.

The adaptability of the light forms of steel for framing trusses, especially when wide spans are needed, often compels their use; and in plants having safe occupancy, such as metal workers, they are not objectionable, provided adequate sprinkler protection with good water supply is available to prevent quick failure of the steel work due to heat from combustion of contents or roof. Similar protection is, of course, needed in shops with wooden trusses, if disastrous fires are to be prevented; but ex-

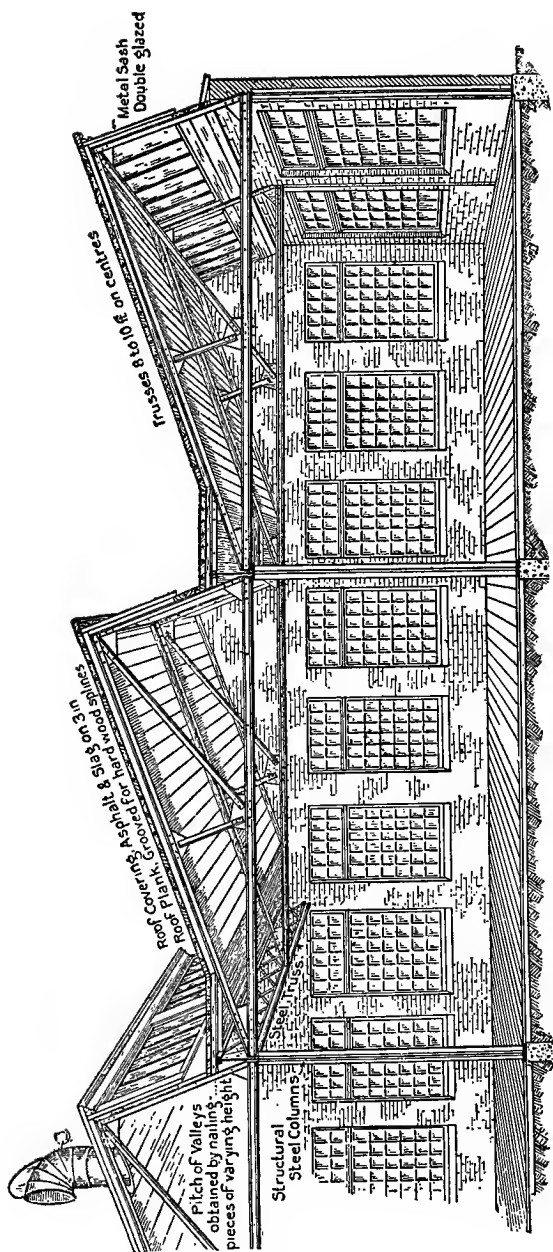


Fig. 159. Light Machine Shop—Saw-Tooth Roof Construction.

perience has shown that the steel-trussed roof will fail much quicker than would one of wood under similar conditions. Wooden posts are nearly always available, and should be given preference; but if light steel columns are necessary, they should be well protected by insulating materials if in rooms containing combustibles, as the column is the vital part of the roof support.

The following suggestions show the best practice in saw-tooth roof construction to overcome the difficulties and to make this type of roof a thoroughly satisfactory piece of work. What is good engineering from the view-point of the manufacturer can also be good fire protection engineering. Any design should be adapted to both if the best interests of the manufacturer are to be served.

It being desirable to avoid direct sunlight and at the same time obtain abundance of light perfectly diffused, the saw-teeth should face approximately north; and the glass should be inclined to the vertical, to take advantage of the brighter light in the upper sky, and to prevent cutting of the light by the saw-tooth immediately in front. This also assures the diffusion of the light upon the floor rather than on the under side of the roof planking.

For the glass, an angle of 20 degrees to 25 degrees with the vertical, and an angle of approximately 90 degrees at the top of the saw-tooth, will be about right, the variations to de-

pend on the amount of light required, and on the latitude. A sharper angle at the top is not needed, as it increases the cost, there being more roof to cover and larger spans. More glass is also required in proportion, and the light is not so good, more sky light being lost and too much thrown on under side of roof.

Double glazing, with space between, is preferred on account of its conducting qualities; but is not always necessary, except in the North.

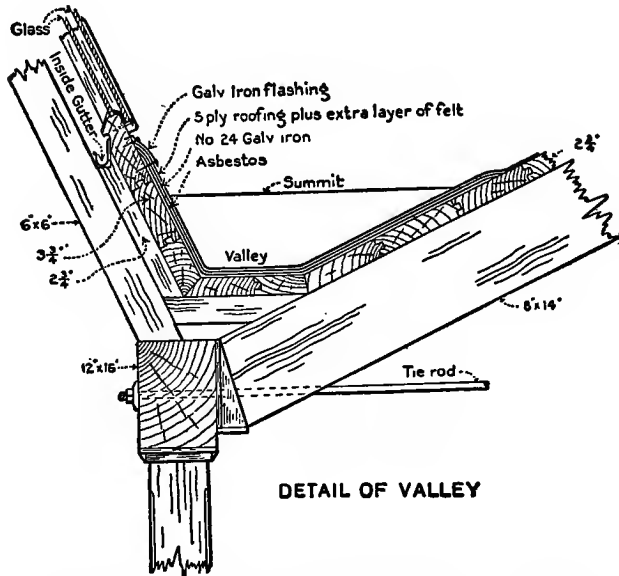


Fig. 160. Saw-Tooth Roof Framing—Detail of Valleys.

The inside glazing should be factory ribbed glass, with ribs vertical and inside. Shadows cast by trusses are then almost unnoticeable.

Condensation gutters, as shown in the detail drawing, Fig. 160, are needed inside at the bottom of the sash; and they should be drained through inside conductors, and not outside, under bottom of sash, as these latter admit cold air and are liable to freeze.

Valleys between the saw-teeth should be flat, 14 inches to 2 feet in width; and should pitch one-half inch per foot toward the conductors, which should be of ample size, and not much over 50 feet apart, preferably less. The necessary pitch may be obtained by cross-pieces of varying heights on top of the trusses, thus avoiding hollow spaces. Leaks, a common fault, may ordinarily be prevented by careful design of gutters, valleys, and sashes, and by insisting on good workmanship and materials. The roof covering of asphalt or pitch should be continuous through the valleys, and extend up to the glass.

Experience has demonstrated the advantage of a combination of direct radiation, with a fan sufficient only for ventilation and tempering the room. Heating pipes should usually be placed overhead, and directly under the front of the saw-teeth, and should run the entire length, and in this position assist in preventing condensation.

Where there is no moving shafting, some forced circulation is necessary. This is best obtained by a fan, often driving air from a dry basement or outside as required, and discharg-

ing it over heating coils to the floor above. In weave and similar rooms, is this especially necessary and advantageous in promoting health and comfort of employees, making greater efficiency possible.

Ventilation and cooling of these large areas with comparatively low stories must not be neglected. Ample vents are needed at top, in shape of large metal ventilators with double walls and tight dampers. They are recommended instead of pivoted or swinging sash, which are apt to leak in driving storms, and which, when open, allow dirt to blow in off the roof. Good windows are advised in side walls, and experience has shown their value.

Framing of the saw-teeth may be in timber, steel, or reinforced concrete. The design should be such as to obstruct the light as little as possible; strong enough to hold wet snow without sagging; and stiff enough to carry shafting motors, etc., when they are to be overhead. When wood or steel is used, the roof planking should be 3 inches or over, spanning wide bays of 8 to 10 feet.

Hollow spaces in roofs should not be permitted. They are very undesirable from a fire standpoint, and any condensation which may take place in them during cold weather soon rots both plank and sheathing.

Sheathing, even without spaces behind it, is more or less a bad feature, as it is readily combustible; but, if used, should be applied directly

to the under side of the roof plank, with only a layer of some insulating material between, so that there may be no concealed space. If 3-inch plank is sufficient for a flat roof, it should be for a saw-tooth; and, with good circulation of air, there should be no trouble, except in wet rooms, where condensation is bound to occur whether under a roof or the floor of the room above, unless large quantities of dry air are discharged into the room.

Saw-tooth roofs necessarily cost more, as there is practically the same amount of roofing as in flat roofs, and in addition there is the cost of windows, glazing, flashing, conductors, condensation gutters for the skylights, and a somewhat larger cost of heating. The additional cost of these items does not, however, fairly represent comparative cost, as there should be considered the total cost of the building compared with that of an ordinary one of sufficiently high stories and narrow enough to give the required light. When this is done, the slight additional cost is far outweighed by advantages of the saw-tooth type for work where good light is desirable.



Strength of Timbers

Strength of Beams Supported at Both Ends.

“Will you decide a little argument which my mate and I have been having?” said a carpenter friend of mine as he and his mate came into the office the other morning. “We want to know which is the stronger of two pitch pine beams we have outside here. One is 9 inches by 6 inches, and the other 8 inches by 7 inches; and both are to be used over openings of 12-feet span. My mate thinks the 9 by 6 is the stronger of the two, but I hold that the 8 by 7 will carry more weight.”

“I shall be very pleased to work it out for you, and can tell you the result in about a minute;” said I, “but if you have half an hour to spare, I should prefer to show you how I arrive at my figures, and thus enable you to make the necessary calculations for yourselves whenever you desire.”

As work was not very pressing that morning, they readily agreed to take a lesson, and I proceeded somewhat as follows:

A piece of wood 1 inch square placed on bearings one foot apart, will break under a certain weight. This weight varies with different woods and with different specimens of the same wood; but most authorities have agreed to re-

gard certain average weights as standards. These averages were obtained from hundreds of experiments, and are therefore fairly reliable. The following table deals with a few woods only, but is sufficient for our present purpose.

Breaking weights of wood beams 1 foot long, 1 inch broad, and 1 inch deep, loaded in the center and supported at both ends (the length means the span of the opening—that is, the distance in clear of bearings), are as follows:

Ash	7	cwt.
White oak	5½	“
Georgia pitch pine.....	5	“
Norway red pine.....	4	“
Spruce	3½	“
Teak	8	“

(1 cwt.=112 pounds.)

Referring to the illustration, Fig. 161, we find at **A**, that, taking pitch pine as our wood, a piece 1 inch by 1 inch, on bearings 1 foot apart, will break with a central load of 5 cwt. Now, it is quite clear that if we increase the breadth to 3 inches, as at **B**, it will take three times five, or 15 cwt., to break the piece.

But suppose that we put this piece of 3 by 1 pitch pine on edge and see what it takes to break it. Instead of 15 cwt., we shall find that it takes no less than 45 cwt. to do so. Or, as the books put it, **the strength of a beam is as the square of its depth**. That means that instead of saying, as in **B**, three times five, we square the three, and say three times 3 are nine, and nine times

5 cwt. is 45 cwt., which is the breaking weight (approximately) of a piece of 1 by 3 pitch pine on edge over a 12-inch bearing.

THE STRENGTH OF BEAMS

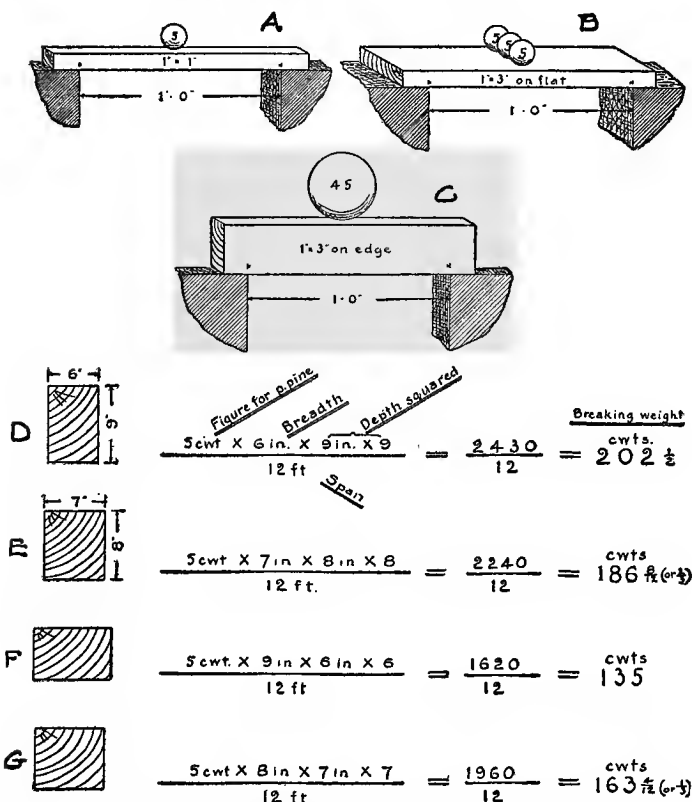


Fig. 161. Ultimate Strength of Beams Supported at Both Ends with Load Concentrated at the Middle.

But suppose, further, that instead of the bearings being 12 inches apart the distance between them had been 2 feet. It is clear that the

beam would only carry half as much, and we should have to divide our answer by two. And as the longer the beam, the less it will bear, this gives us another rule which will be referred to later.

The diagrams, **A**, **B**, and **C**, represent in a pictorial and striking way one of the most useful formulas or rules which a carpenter can carry in his head. By it he can calculate the strength of any beam in a couple of minutes.

"But," objected my friend, the seeker after information, "you haven't answered our question yet. And, as for making calculations, I haven't done any arithmetic since I left school, and know just about enough of it to reckon up my pay when pay-day comes round."

While bound to admit that his case was not uncommon amongst many first-class craftsmen, I pointed out that the necessary calculations for finding the strength of a beam do not call for more than the very simplest operations in multiplying and dividing, and thereupon proceeded to work out, as shown at **D** and **E**, the problem propounded by him at the outset of this article.

The diagrams explain themselves fairly well; and, as will be seen from them, the 9 by 6 man was the winner, presuming that the beams had been placed (as they should be) with their greatest dimensions upright.

But suppose the same beams had been laid flat instead of on edge, how would they work out then? **F** and **G** give the results, which show

that the 8 by 7 beam is a good deal stronger than the 9 by 6 if used in this position.

It must be observed, of course, that these are the breaking weights for beams, and it is obvious that the safe load is what is wanted. This is found by dividing the breaking weight by a certain factor (known as the **factor of safety**)—generally 4 or 5 for a dead load, and 8 or 10 for a live load.

It must also be remembered that the foregoing formula is for a beam loaded in the center. If the load is distributed evenly throughout the length of the beam, it will carry just double what it would if loaded in the center.

REMEMBER THE RULE!!

$$\begin{array}{l}
 \text{WRITE DOWN} \rightarrow \\
 \text{Figure for wood in cwts.} \times \text{breadth} \times \text{depth} \times \text{depth} \\
 \hline
 \text{Opening (in feet)} \\
 \text{Divide by} \rightarrow
 \end{array}
 = \frac{\text{ANSWER}}{\text{S. F. in cwts.}}$$

X means multiply by.

Fig. 162. To Find Breaking Weight for Beams Supported at Both Ends—Load Concentrated at the Middle.

To sum up the matter, the points to carry in one's head are these: First, the figure given in the table for the particular wood. Second, the way of putting down the simple sum or formula, which must be as shown in Fig. 162. Third, divide your result by figure (factor) of safety, say five for dead load and ten for live load. (This gives safe load for center of beam. If load is distributed, multiply this by two.)

Thus divested of all formal language, this useful little working formula was easily grasped by my two interrogators; and, in the hope that it may prove similarly useful to many others, the writer begs to present it.

Strength of Beams Supported at One End.

“More work for the calculator,” was the remark which greeted the writer the other day, as his two carpenter friends once more came into the office. “We have been applying your last little lesson on the strength of beams to several cases which have occurred in our work lately, and have found no difficulty in arriving at correct results. In fact, we have been ‘showing off’ a little amongst our mates, in consequence,” continued the spokesman. “But we are up against another little problem now, and shall be glad of another lesson if you can give us half an hour or so.”

Proud of his apt pupils and their evident appreciation of his efforts, the writer was only too pleased to put his services again at their disposal, and, after a brief talk, found the problem to be as follows:

A wooden beam was to be fixed so as to project some five feet from the face of a building, for the purpose of hoisting goods from the street level to a warehouse on the upper floor. (The technical term for a beam in this position is **cantilever**, and such a beam will be referred to by that name throughout this discussion.) A piece of pitch pine 7 inches by 5 inches had been

selected for the job, and the question arose as to the amount of weight which could safely be hoisted upon it.

First of all, we ran over our last lesson on the strength of a beam when supported at both ends, and found out what load a piece of pitch pine, 7 inches by 5 inches, and 5 feet long, would carry if placed on edge, when supported at both ends and carrying a central load. Our rule, or formula, used in the last lesson was of course required.

This gave us the result shown in Fig. 163, at **A**—namely, 245 cwt. as the breaking weight required. It will be remembered that in the previous article it was stated that a beam with a distributed load will carry twice as much as the same beam with a central load, and that therefore the answer to this sum could be doubled for such conditions. But it is obvious that the strength of a beam supported at both ends is much greater than that of one supported (or fixed) at one end only, and is, relatively, as 4 is to 1.

Therefore, to find the breaking weight of our piece of 5 by 7 when fixed as a cantilever, we divided our result by 4, giving us $245 \div 4 = 61\frac{1}{4}$ cwts. But it was the amount our cantilever would carry which we wanted to find; and that brought in the question of the relation between the breaking weight and safe load—or, as it is termed, the **factor of safety**—to which reference was made before.

In this connection, the nature of the load or stress to which the beam is to be subjected is important, and may cause the safe load to vary

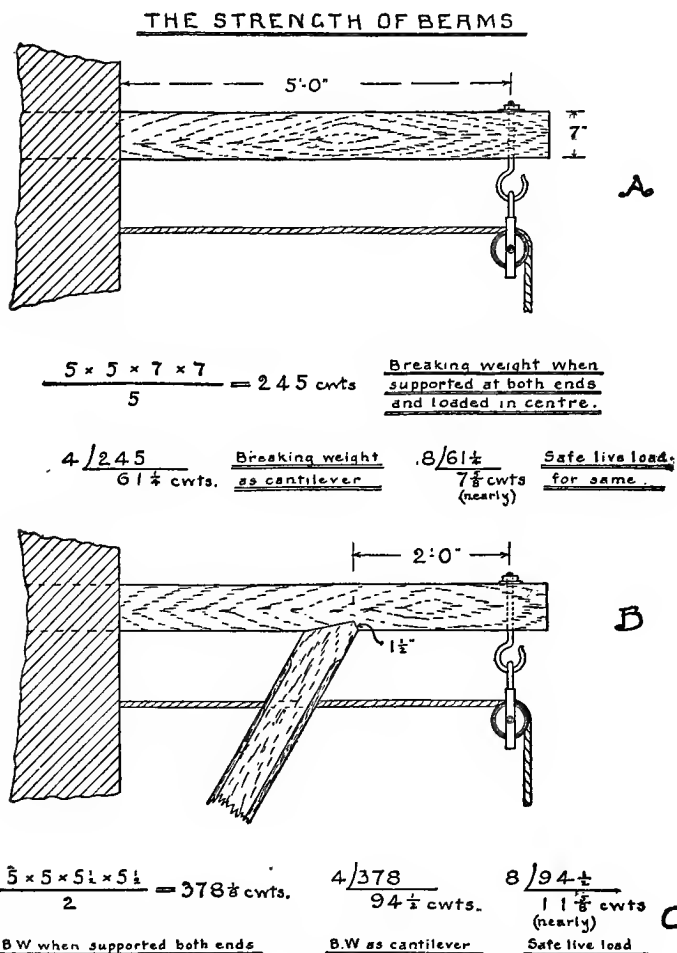


Fig. 163. Ultimate Strength of Beams Used as Braced and as Unbraced Cantilevers, Loaded at Outer End.

from one-fifth to one-tenth of the breaking weight, according as the load is a live or dead one. Our load in this case was, of course, a live one; but another consideration entered into the question—namely, the manner of applying the hoisting force. That is to say, we had to consider whether the force was to be applied in a series of jerks such as given by sailors in pulling on a block and tackle, or to be steadily and continuously applied as by a winch or hoisting drum. If in the first manner, the greatest margin of safety would have to be allowed; and, at most, only one-tenth of the breaking weight should be carried. For the continuous, steady, pull, however, a factor of safety of one-eighth would probably be sufficient. As the power in this case was a drum driven by an electric motor, we decided upon eight as our factor, and applied it to our breaking weight ($61\frac{1}{4} \div 8$), obtaining approximately $7\frac{5}{8}$ cwts.

As this was a much greater weight than was generally to be hoisted to the warehouse in question, my two carpenter friends felt quite satisfied when our calculations showed that their guess at the size of the cantilever had been on the safe side, and that it was strong enough for any emergency.

A Braced Cantilever Beam. On inquiring as to the reason why the point of suspension for the load was so far out, it was explained that bulky packages were carried up and down, and it was therefore necessary that they should swing well

clear of the stories below. That led to the suggestion that a strut or brace could be used under the cantilever; and, as this would increase its strength very materially, it was decided to calculate just what would be gained by so doing.

Taking the sketch of the strutted cantilever (Fig. 163, **B**), we found that the amount overhanging the end of the strut was 2 feet. But the under side had been weakened at the joint where the strut had been let into the cantilever, and the effective depth of the beam was thereby reduced by $1\frac{1}{2}$ inches, the depth of the shoulder. Our sum, therefore, was changed, reading as at **C**; and gave us for result $378\frac{1}{8}$ cwts. as the breaking weight of a pitch pine beam 2 feet long, $5\frac{1}{2}$ by 5 inches. Dividing this by 4 (neglecting the odd $\frac{1}{8}$ cwt.), we obtained our breaking weight for the cantilever $378 \div 4 = 94\frac{1}{2}$ cwts. Again dividing this by 8, we obtained as our safe load $94\frac{1}{2} \div 8 = 11\frac{5}{8}$ cwts., approximately, thus showing a considerable increase of strength over the cantilever without the strut.

The foregoing example of a cantilever used for permanent hoisting purposes is not, perhaps, met with so commonly to-day as formerly, elevators inside of buildings having largely superseded them. For purposes of temporary work, however, such as the raising of some heavy article to the upper floor of a building, the piece of timber projecting from some opening is still frequently in evidence. The nearest carpenter is generally called upon to rig up the affair, and


the formula worked out here (see Fig. 162) is an exceedingly useful one to have at hand in such cases. For, unlike beams, girders, joists, etc., the sizes of which are calculated in most cases by the designer of the building, these temporary rigs are left wholly to the skill and ingenuity of the carpenter, who may be called upon at a moment's notice to supply something upon which the lives of some of his fellows and the safety of some valuable piece of work may depend.

Strength of Projecting Veranda. To the craftsman who is desirous of adding a little theory to his practical knowledge, there is nothing, perhaps, so repellant as the apparently difficult arithmetical formulas with which he is confronted in the pages of many of his trade books. The writer's success in making some of these formulas clear to a couple of his craftsmen friends, led to a continuation of the lessons, and he begs to offer an account of the next step taken in helping his two friends past some more little difficulties.

It is a well-known maxim in all teaching, that we "must proceed from the known to the unknown," and it seems that the consideration of the strength of a wooden cantilever beam, just discussed, leads naturally to the question of the method of calculating the strength of verandas and similar structures, which are supported by a number of projecting beams or cantilevers.

The method given by which the strength of the projecting beam used for hoisting goods to an upper story is ascertained, can be easily applied to a series of such beams, and their combined strength readily ascertained.

THE STRENGTH OF BEAMS

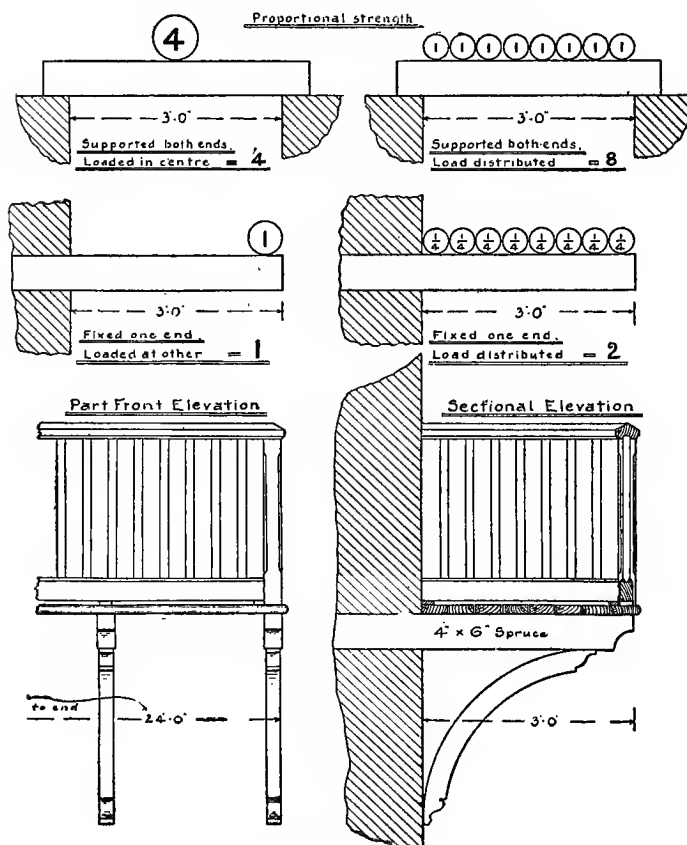

VERANDA

Fig. 164. Strength of a Projecting Veranda.

The first step, then, was to look about for a suitable example of such a structure, the strength of which could be calculated for purposes of the lesson. A very short excursion round the neighborhood led to the discovery of a veranda or balcony which suited the purpose admirably; and our two craftsmen pupils soon measured the structure and jotted down the necessary particulars, which were as follows:

The veranda, Fig. 164, projected from the second story of a dwelling-house some 3 feet, the house itself being 24 feet in width, with the veranda right across the face. It was carried on 11 spruce beams, each 4 by 6 inches, projecting through the face of the wall, giving 10 bays of flooring. There was a sloping roof to the veranda; but, as this was carried on some beams projecting from the floor above, its weight had not to be taken into account. A light balustrade about 2 feet 6 inches high completed the structure.

The first proceeding was to calculate the strength of one beam, or cantilever, of the size used in the veranda. Going back to the first lesson, we proceeded to find the strength of such a piece, supposing it to be a simple beam loaded in the middle and supported at each end, the calculation being as shown in Fig. 165, the steps being as follows:

Put down the figure for spruce (see table) = $3\frac{1}{2}$ cwts. Put down the breadth 4 inches, then the depth 6 inches, and, as that was to be

“squared,” 6 again. Put underneath, the length, 3 feet. This sum gave us 168 cwt. as the breaking weight when the piece was supported at both ends.

But we had already seen that a cantilever loaded at the end is only one-fourth as strong as the same piece is when supported at both ends and loaded in the middle. In the case of the verandâ, however, the load would not be at the end, but would be distributed along the length of the cantilever, thus bringing in another rule, which is: **A cantilever loaded evenly throughout will carry twice as much as a similar one loaded at the end only.** (A similar rule applies when the beam is supported at each end.) Accordingly, we divided our answer by 2, giving us $168 \div 2 = 84$ cwts. as the breaking weight for a spruce cantilever, 4 inches by 6 inches, projecting 3 feet from its support, the wall of the house.

As the veranda would have to carry a live load, we divided this again by 8, the factor of safety, and obtained $84 \div 8 = 10\frac{1}{2}$ cwts. as the safe load for one cantilever.

The next step was to find what safe load the whole veranda would bear. As there were eleven cantilevers, the first thought of the pupils was to multiply the safe load of one of them by 11. A little consideration, however, showed them that it was the number of bays of floor which had to be counted; each bearer having to support half the load of the bays on each side of it. As 11

bearings gave us 10 bays, our sum was $10\frac{1}{2}$ cwts. multiplied by 10, giving us 105 cwts. for the whole veranda.

The next consideration was one about which

THE CALCULATIONS

A

$\frac{\text{cwts } 3\frac{1}{2} \times 4" \times 6" \times 6}{3} = 168$	cwts
--	---------------

B

168 cwts. is Breaking Weight of piece when as in Fig. 1.

C

$\frac{2}{2} \overline{) 168}$	$\text{84 cwts. is B.W. when as in Fig. 4}$
--------------------------------	---

D

$\frac{8}{8} \overline{) 84}$	$10\frac{1}{2} \text{ c. Safe load } (\frac{1}{8} \text{ B. Weight})$
-------------------------------	---

E

Verandah has 11 bearer or 10 bays of floor; $10\frac{1}{2}$ cwts. $\times$ 10 = 105 cwts

F

Verandah is $24' \cdot 0" \times 3' \cdot 0" = 72 \text{ sq.ft.}$

Load cannot exceed $1\frac{1}{2}$ cwts. per foot.

G

$72 \times 1\frac{1}{2} = 108 \text{ cwts., the greatest load possible for whole verandah.}$

Fig. 165. Steps to be Taken in Figuring Strength and Load of Veranda.

the craftsmen pupils had no definite knowledge—namely, as to the weight of a number of people standing on a floor. As this is a very useful thing to remember, it should be noted that numerous experiments have shown that the weight of a crowd of people does not exceed one cwt. per foot super of floor space. “But, suppose,” said one of the pupils, “that the veranda was filled with people excitedly watching a street procession.” (“Or a dog fight,” interposed his mate.) “Would not that make some considerable difference?” As this was a very proper matter to take into account, it was decided to count upon a live load of $11\frac{1}{2}$ cwts. per super foot. The veranda being 24 feet by 3 feet gave us $24 \times 3 = 72$ feet super, which, at $11\frac{1}{2}$ cwts. per foot, gave us $72 \times 11\frac{1}{2} = 108$ cwts. as the greatest possible load which would be likely to be placed on it.

As this came marvelously near to the previously calculated strength of the structure, it appeared that the designer of it had been fairly correct, and that it was perfectly safe as long as its members were not weakened by age, rot, or other defects.

NOTE—The curved rib or bracket shown under the cantilever in the drawing, Fig. 164, is almost wholly ornamental and was not considered at all in the calculations.

To Determine Width of Beam to Support a Given Load. “Well, how are you getting along with your calculations of the strength of timber?” was the writer’s greeting as his two

craftsmen friends and pupils came into the office again one day recently.

“Oh! we are doing pretty well, and we can now remember the first rule or formula which you gave us without having to turn to refresh our memories. But we struck a small snag yesterday. We have a sort of solution; but we felt that there was a proper way to work it out, and that is the reason of our visit to-day.”

The writer having expressed his readiness to help, the spokesman went on to explain the little problem which was worrying him, somewhat as follows:

“Up to now we have been finding the strength of some particular piece of timber when fixed and loaded in various ways. But suppose we knew the load that was to be carried by a beam, and wanted to calculate the size of the timber—is there not some way of doing that just as easily as finding the strength of a piece whose size we know?”

Having been assured that the calculations for such a problem were only a trifle more difficult than for the one now familiar to them, the speaker went on to state his problem more particularly.

“There is an 8-foot driveway to be made through a new brick store, and we want to find the size of the beam that will safely carry the weight of the brickwork in the story above the beam. We want to have the beam of such a depth that it will be equal to so many courses of

the brickwork, and thus save a lot of cutting for the bricklayer and a poor appearance afterwards. The wall is one brick thick (8 inches), and is to be carried up nine feet above the beam. The bricks are $2\frac{1}{8}$ inches thick, and four courses measure just 10 inches."

Having these particulars, we proceeded as follows: First, we found the weight of the brickwork to be carried by the beam. Nine feet high, 8 feet wide, and 8 inches thick, gave us 48 cubic feet. A cubic foot of brickwork weighs about 1 cwt. (112 lbs.); so the weight to be carried was, of course, 48 cwt.

But the roof had also to be considered, and we next proceeded to calculate the weight of that portion of the roof carried on the wall over the beam. From ridge to eaves, the roof slope measured 20 feet; 20 feet times 8 feet gave us 160 square feet. Slates were to be used as coverings; and as the weight of a slate covered roof, allowing for wind pressure, is usually taken at $\frac{1}{2}$ cwt. per square foot, we obtained as the weight to be considered, 80 cwt. (160 times $\frac{1}{2}$).

The problem then resolved itself into this: One hundred and twenty-eight cwt. was to be carried as a **distributed load** on a beam 10 inches deep over an opening of 8 feet span. The load was to be stationary, or "dead." How broad should our beam be to carry the weight safely?

It seemed best to follow the plan adopted in the earlier lessons, and to give another rule or formula which could be easily referred to and

in time remembered. This was written down as in Fig. 166, which is merely a simple way of stating a reversal of our first rule for finding the strength of a given beam.

With this rule before us, we put down our particulars as in Fig. 167, Calculation No. 1—namely, 128 cwts. for our load; 8 as our length; 5 as our factor of safety (dead load); 10 times 10 as our depth (squared), equal to four courses of brickwork; 5 as our figure for oak (see table); and 2 because our load was to be evenly distributed along the beam.

To find the breadth of a beam when the other data are known

REMEMBER THE RULE,

Put down:—

$$\frac{\text{Load} \times \text{Length} \times \text{Factor of Safety}}{\text{Depth} \times \text{Depth} \times \text{Figure for wood} \times 2} = \text{Result:— Breadth in inches}$$

Note The figure 2 is used when the load is evenly distributed


If the load is to be a central one, this figure must be left out

Fig. 166. To Find the Breadth of a Beam Supported at Both Ends Required for a Given Load Evenly Distributed.

The result, $5\frac{1}{8}$ inches, being less than the thickness of the wall to be carried, led us to try what breadth our beam would have to be if we made it only $7\frac{1}{2}$ inches deep—that is, equal to three courses of brickwork—Calculation No. 2 shows this, which gave as a result rather over nine inches (see Calculation No. 2, Fig. 167). As this was more than the thickness of the wall to be carried, it was decided to make the beam 10 inches deep, and, for the better convenience of the bricklayer in starting his courses, to make

the beam the full thickness of the wall. This, of course, was a stronger beam than was actually required, but was an error in the right direction.

THE STRENGTH OF BEAMS

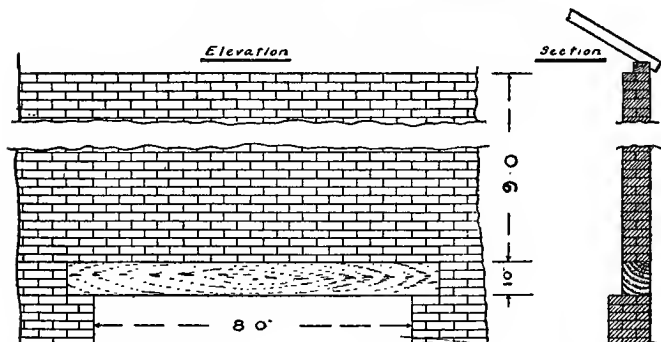

Calculation No. 1

$$\begin{aligned} \text{Load on Beam} &= \left\{ \begin{array}{l} \text{Brickwork, 48 cwt} \\ \text{Slate roof, 80} \end{array} \right\} & \text{Total 128 cwt} \\ \text{Length} &= 8.0 & \text{Factor of safety} = 5 & \text{Depth} = 10 \text{ in.} \\ \text{Figure for wood (Oak)} &= 5 & \text{Figure for distributed load} &= 2 \end{aligned}$$

$$\frac{128 \times 8 \times 5}{10 \times 10 \times 5 \times 2} = \frac{5120}{1000} \text{ or (about) } 5\frac{1}{8} \text{ ins.}$$

Therefore a piece of oak 10" x 5 1/8" is strong enough.

Calculation No. 2

Beam 7 1/2" deep — other particular the same.

$$\frac{128 \times 8 \times 5}{7\frac{1}{2} \times 7\frac{1}{2} \times 5 \times 2} = \frac{5120}{562\frac{1}{2}} \text{ or (about) } 9\frac{1}{8} \text{ ins.}$$

Therefore a piece of oak 7 1/2" x 9 1/8" (on flat) would also do.

Fig. 167. How to Determine Size of Beam Required above Opening in Brick Wall.

In point of fact, it is always wise to err on the side of strength in deciding on the sizes of timber to be used in construction, for no two pieces give the same results if tested. As already remarked, the strengths of the various kinds of woods as given in most textbooks were obtained by averaging the results of hundreds of actual tests; and it was found that different pieces, even from the same tree, varied considerably. So serious is this variation, that many architects require that beams or girders carrying heavy weights shall be ripped in half and the ends reversed. It is very common to find in specifications for beams in positions similar to that which is the subject of this present calculation, a requirement that (in addition to the usual clauses as to the quality, etc., of the lumber) the piece be **halved, reversed, and bolted together again**. By doing this, any possible weakness at one end of the stick would be obviated, and a piece of even strength obtained.

Of course, in many parts of the world, iron beams have largely superseded wooden ones; but for a long time to come, wood will hold its own in many districts for a variety of reasons.

To sum up this lesson, then, the first thing is the new rule or formula for putting down the known particulars. In doing this the things to be remembered are: (1) the factor of safety (5 for a dead load, 8 or 10 for a live load); (2) the figure for the particular timber used; and (3) the fact that a beam carries a distributed

load just double of what it would carry when loaded in the center only.

To Determine Depth of Beam to Support a Given Load. There has just been given the method of finding the **breadth** of a beam when the **depth** was already fixed, the length (span) and load being also known. The case worked out is only one of numerous instances in which the depth of a beam is limited. A very common case is that of a floor where a beam has to be placed to carry a partition above, but is flush with the lower edges of the joist below. The last formula given will apply to that and all similar cases.

Very often, however, it happens that it is the **breadth** of a beam that is fixed; and the problem then is to find what **depth** the timber should be to carry the load safely. To find this requires, of course, merely a slight turning about of the formulas used in the cases dealt with previously, and presents no difficulty to anyone at all acquainted with mathematics. It will be worked out, however, in the same manner as the other problems, and divested as much as possible of all complicated and repellant algebraic signs and symbols. The writer's attempts to interest and instruct his two craftsmen friends showed that it is usually the look of the formulas in books that scares the seeker after knowledge who is some years away from his schooldays. Also, that if these mystifying formulas are properly and simply explained, any man with a knowl-

edge of the elementary rules of arithmetic can make calculations for the size of practically all the timbers of the average building.

As before, certain conditions will be laid down, being as follows:

A beam is to carry an 8-inch wall over an opening. The beam is of Southern hard (or pitch) pine; the opening is 10 feet wide; the height of the wall above the beam is 13 feet 6 inches, giving 90 cubic feet (10 feet by 13 feet

REMEMBER THE RULE !!!

To find DEPTH of a beam when the following particulars are known:—

(a) LENGTH, (b) LOAD, (c) BREADTH, (e) NATURE OF LOAD.

(f) POSITION OF LOAD, (g) SORT OF WOOD

PUT DOWN:—

$$\frac{\text{LENGTH} \times \text{LOAD} \times \text{FACTOR OF SAFETY}}{2 \times \text{BREADTH} \times \text{FIGURE FOR WOOD}} = \frac{\text{Result}}{\text{SQUARE OF THE DEPTH}}$$

Note. The figure 2 must be left out for a central load.

Fig. 168. To Find the Depth of a Beam Supported at Both Ends, Required for a Given Load Evenly Distributed.

6 inches by 8 inches)—say, 90 cwt. as weight to be carried on beam.

The method of putting down these particulars is shown in Fig. 168, which will be seen to resemble the earlier formulas, although the several factors are differently arranged. Fig. 169, **A**, shows the calculations for our present case, which works out in exactly the same manner as earlier ones; that is, all the values **above** the line are multiplied together, and divided by the product of all the values **below** the line.

The only difficulty is in working out the final answer, for the result obtained at first will be the square of the required depth—that is, the depth multiplied by itself. To arrive at the exact depth, it is necessary to **extract the square root** of the answer, which means to find what number multiplied by itself will give the answer. For all ordinary practical purposes of wooden beam calculations, however, the exact result is not absolutely necessary, and a sufficiently accurate one can be obtained by inspection of the first answer. For instance, in the foregoing problem the answer is $56\frac{1}{4}$. Now, the nearest square of a whole number to this is 49, the square of 7 ($7 \times 7 = 49$); therefore the depth of the beam is more than 7. The next square of a whole number is 64, the square of 8 ($8 \times 8 = 64$); and, as that is greater than our answer, evidently our beam should be somewhere between 7 and 8 inches deep. As a matter of fact, it proves in this case to be exactly $7\frac{1}{2}$ inches ($7\frac{1}{2} \times 7\frac{1}{2} = 56\frac{1}{4}$); but if the sum had not worked out so exactly as that, a result quite good enough for practical purposes could have been arrived at by the method indicated above—namely, by finding the nearest squares of the whole numbers above and below the answer, and allowing a sufficient amount over and above the root number of the square below. As in the previous articles, the nature and position of the load must be considered in any calculations made. The factor of safety used is 5, the usual

for a dead load. That is, one-fifth of the breaking weight is considered to be the amount a beam can safely carry when the load is a stationary one.

The position of the load is important, for, as shown in the earlier lessons, a beam will carry twice as much if the load is evenly distributed along it, as it would if the load were in the cen-

A. For distributed load

$$\frac{10 \text{ ft.} \times 90 \text{ cwt.} \times 5, \text{ factor for dead load}}{2 \times 8 \text{ in.} \times 5, \text{ figure for pitch pine}} = \frac{4500}{80} = 56\frac{1}{2}$$

The square root of $56\frac{1}{2}$ is $7\frac{1}{2}$, the required depth for beam

B. For central load

$$\frac{10 \times 90 \times 5}{8 \times 5} = 112\frac{1}{2} \quad \begin{array}{l} \text{The square root} \\ \text{of } 112\frac{1}{2} \text{ is nearly } 10\frac{1}{2} \end{array}$$

A piece 8"x7½" would carry the given load if it were evenly distributed



A piece 8"x10½" would be required if load were central




Fig. 169. Calculation for Finding Depth of Beam to Support a Given Load.

ter only. The figure 2 is therefore placed below the line in the present case. The effect of this is shown by comparing the result at **A** with that at **B**, Fig. 169.

From the several calculations made, it will be seen that if two beams or joists are of the same length and sectional area, the one of greater depth will be the stronger of the two.

This can readily be seen by taking as examples two joists of the same sectional area, but of different dimensions. A piece of 12-inch by $2\frac{1}{2}$ -inch, another 10 inches by 3 inches, have the same sectional area (30 square inches); but their relative strength when placed on edge is as 360 to 300. The rule stated covering this, is that **the strength of a beam is as the square of its depth**—that is, the depth must be multiplied by itself; $12 \times 12 \times 2\frac{1}{2} = 360$, and $10 \times 10 \times 3 = 300$, or a proportion of strength between the two as 6 is to 5.

There is, of course, a limitation in the practical application of this; for if a beam be made very deep in relation to its breadth, it will buckle and twist when loaded. In the case of floor-joists, the disproportion of depth to breadth is very marked; but their tendency to buckle is overcome by strutting, either with solid blocks the same depth as the joists cut in between each pair, or with herring-bone strutting cut from narrow battens.

Many experiments have been made to find the best proportion for the breadth and depth of wood beams, and it has been laid down that a ratio of 5 to 7 gives the best section. This is a useful thing to remember and easily kept in mind.

In concluding our discussion of the strength of beams, the writer trusts that some of the readers who may have been deterred from going into the matter of calculating the strength of

materials will be in some measure led to see that a formula is only a simple way of putting down a rule for some arithmetical process that would take a long time to describe in words. The strength of beams is a question that is so often cropping up that this discussion may be directly valuable in showing how to find it in any given case; but the writer also hopes that the discussion may lead many readers to take up other lines of calculation equally simple and useful to the practical man.



Truss Construction

The principle of a **truss** is theoretically a number of straight bars joined near their ends by flexible joints, and arranged so that all their internal stresses are sustained by its members, and only the vertical pressures (the weights of the truss and its load) are transmitted to its abutments. Trusses differ from **solid beams** inasmuch as the weight of the truss and its load may be regarded as divided into portions which are concentrated at the joints between the members, and which act through the centers of gravity of their cross-sections. So placed, the stresses caused by them could not act **transversely** of the members, as in a beam, causing secondary stresses, but must act **longitudinally** of the members, and must be uniformly distributed over their entire cross-sectional areas. This is the distinguishing feature of all trusses; while in a solid beam, when it bends under its load or its own weight, all the fibers above the neutral axis are compressed, and all those below are extended, the resulting change of length in each fiber being proportional to the distance of the fiber from the neutral axis.

Most of the trusses in common use consist of two long members, called **chords**, extending the entire length of the span, and connected by

web members, which are sometimes all inclined and sometimes alternately vertical and inclined. Inclined web members are called **diagonals**, such web members being known as **ties** and **struts**. A member sustaining tension is called a **rod** or **tie**; and one sustaining compression is called a **strut** or **post**; while one capable of sustaining both tension and compression is called a **tie strut**.

The simplest form of truss consists of a single triangle (Fig. 170). Truss **a** is in com-

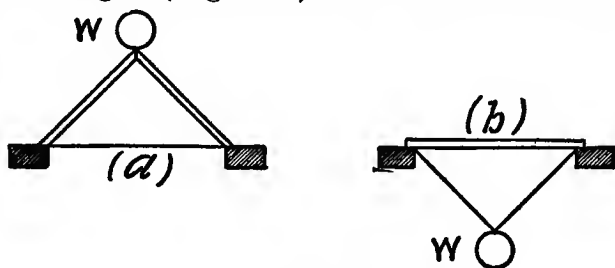


Fig. 170. Simplest Form of Truss.

pression in the rafters, and in tension in the chord or tie-rod; and truss **b** is in compression in the chord, and in tension in the tie-rods—the reverse of **a**. This, of course, is in common use for roofs of small span, as in dwellings, and, in practice, is loaded along the rafter, and not alone at the apex as in **a**; but in calculating the stresses in the members, we commonly first assume that the loads are concentrated at the intersection of the truss members, and the effect of actual distribution along the members is then determined, separately treating the members as

beams. Other more elaborate and complicated trusses are all built up on this principle of the simple triangle.

Simple Roof Trusses. A simple structure which is sometimes misunderstood is a common **king-post roof truss**, such as is shown at **A** in Fig. 171.

If two rafters are placed as at **B**, they will,

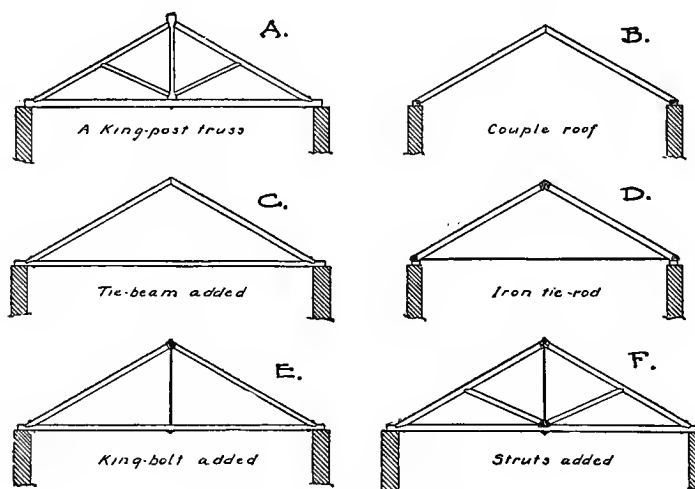


Fig. 171. Simple Roof Trusses.

of course, tend to spread at the bottom and push the walls apart. This is prevented by a wooden tie-beam, as at **C**, or by an iron tie-rod, as at **D**. But after a certain span has been exceeded, the tie-beam commences to sag and has to be supported either by a king-post or by a bolt from the apex of the rafters, as at **A** and **E**.

The writer has found many carpenters with

the impression that the king-post rests on the tie-beam to support the ridge; but a little reflection and a study of these diagrams should convince even the beginner in roof framing of the fallacy of that view. As a matter of fact, both the tie-beam and king-post are in tension; that is, they are being pulled, and their work can be, and often is, done equally well with a wrought-iron rod.

But, as the span becomes so great as to necessitate the support of the tie-beam from above, the rafters will also become so long as to tend to sag in the center, and they in turn must be supported. This is done by struts from the foot of the king-post or rod, as at **F**. It is clear that these struts are in compression, and that they must be of wood or some other stiff material, such as angle or T-iron, in the case of an iron roof or other roof of heavy construction.

There are thus two kinds of stresses in such a truss, the tie-beam and king-post being pulled, or **in tension**; and the struts and rafters being pressed, or **in compression**. For the former, a flexible material, such as a wrought-iron rod, is suitable; but for the latter, a stiff and unyielding material must be employed, so as to resist the tendency to buckle or bend under the weight of the roof.

Light Trusses for Broad Span. Two light timber trusses designed for broad span are shown in detail in Figs. 172 and 173. They are suitable to support the roof of a hall or rink.

They are designed for a span about 65 feet wide, and are intended to carry nothing but the roof.

The top and bottom chords, Fig. 172, will

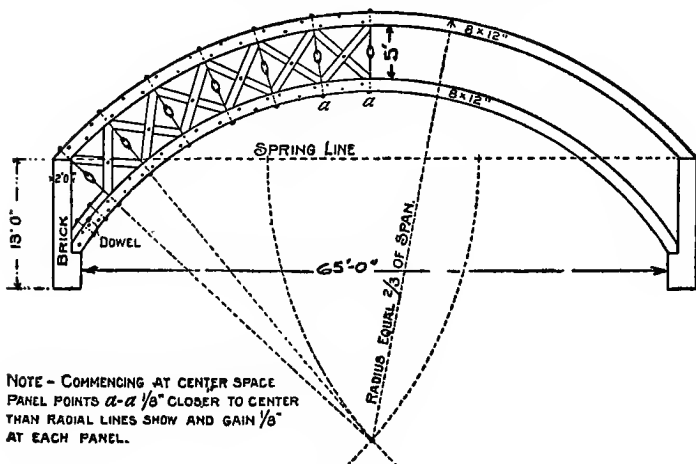


Fig. 172. Strong, Curved Roof Truss.

have to be built up segmental. Use $\frac{1}{2}$ by 4-inch iron jib strap on bolts, so as to catch all the timbers. Braces and counters can be

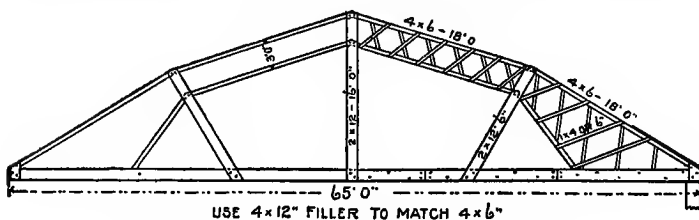


Fig. 173. Cheap Roof Truss for Broad Span.

dressed, and chord left rough and boxed afterward. Have all rods fitted with turnbuckle in the center, as the end will not be exposed. Have

tension on all rods as near the same as possible. Make first panel point $\frac{1}{8}$ inch closer than radial lines shown, which will make the next one $\frac{1}{4}$, and next $\frac{3}{8}$, and so on, to allow for compression in the top chord. Brace bottom transversely to prevent warping.

If it is not desired to have finished appearance, a cheaper truss for the same use may be made as shown in Fig. 173.

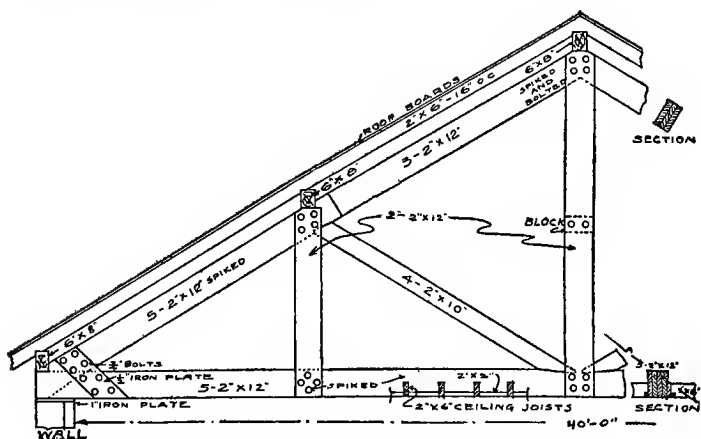


Fig. 174. Cheap Plank-Framed Truss.

Plank-Framed Truss. A plank-framed truss is very popular where a cheap truss is wanted to support a roof of say 40-foot span, as for a hall. Fig. 174 shows a well-designed built-up truss of satisfactory and at the same time cheap construction, for such a purpose. The wind and snow load on a roof of this kind is a factor that has to be considered. Such trusses will prove amply safe for a 40-foot span. They

should be set in 16-foot bents. The expensive large-dimension timbers are not used, the different members being built up of 2 by 10 and 2 by 12-inch pieces, spiked together to break joints as specified on the drawing.

Light Truss for 100-Foot Span. In designing trusses of wide span such as those used to support temporary roofs of light construction, the same principle of triangulation is carried out as for very small trusses. Carpenters sometimes overlook this; and, in their amazement

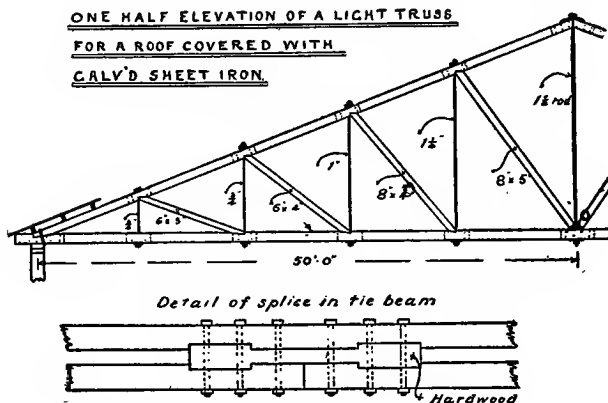


Fig. 175. Light Truss for 100-Foot Span.

at the width of span, trying to arrange framing adequate to the task, lay out a series of members not a truss at all, but a number of quadrilateral panels which offer little resistance to change of form, and which would easily be racked by an extra force acting on one side, such as a gale of wind.

Fig. 175 shows a good form for a long-span truss. For the bottom chord (tie-beam), two pieces of 9-inch by 4-inch, at least, will be necessary. The splicing of the pieces to obtain length enough for the span will reduce the sectional area considerably, and must be allowed for. The system of tension rods and struts must be carried out carefully as to joints. The blades or rafters (top chords) should be of two pieces of 8-inch by 3-inch, blocked and bolted together at frequent intervals. The sizes of the other members are shown in the diagram. It is very much better to use iron rods for all the tension members as shown. If wood is used, straps and bolts at top and bottom of each member will be required, to hold up the weight of tie-beam and thrust of strut. If the rods are upset at the ends, and a plus thread cut upon them, slightly smaller iron can be used.

It is usual to allow on trusses of this description a camber of half an inch for every ten feet of span. Five inches may seem a lot for this truss, but is none too much when the number of joints is considered.

A Lattice Truss. A cheap truss for broad spans is the **lattice truss**, built up out of light timbers which can be had in any lumber yard. It is easily constructed. Fig. 176 shows such a truss of 60-foot span. No unsightly rods are required to keep the side walls from spreading, since in this form of truss, the truss itself acts as a tie, and, when properly anchored, there can

be no tendency to crowd the walls out. Six trusses, exclusive of the ends, will be sufficient for a building 80 feet long, which would call for a spacing a little less than 12 feet from centers. The covering for this form of roof may be of almost any of the roofing materials, aside from the gravel-coated, as the inclines at the sides are too steep to stand for any great length of time the wind and wash that the gravel roof would be subjected to.

Trusses for Flat Roof. A carpenter recently had a typical flat-roof store building to erect.

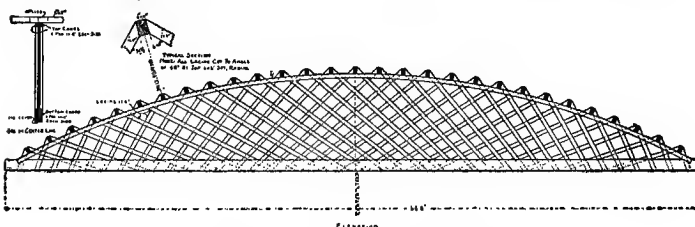


Fig. 176. Cheap Lattice Truss.

It was to be 44 feet wide and 100 feet long, the roof to slope from front to rear and to be covered with gravel roofing. The building was two stories high, one room on each floor. The following advice was asked: "How would you frame roof without having columns under second-story ceiling? Second floor is to be used for skating rink. How would you deaden floor? Joists are to be 2 by 12-inch hard pine."

The best way to carry such a roof is by a series of trusses, as shown in Fig. 177. The heights of these trusses vary according to their

position, a fall of 1 inch to the foot being allowed for the slope of the roof. The truss shown in elevation in Fig. 178 is the lowest of the series; but the rest would be similar in all respects.

It is difficult to deaden a floor effectively when used for such a noisy purpose as roller

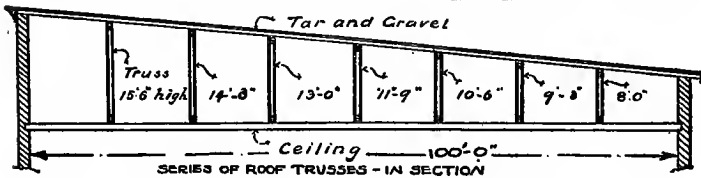


Fig. 177. How to Support a Flat Roof.

skating; but we advise a double deadening as most likely to fill the bill. One method, shown in Fig. 179, consists in nailing strips near the lower edges of joists to support short lengths of boards, upon which is laid a rough mortar either of sand and lime, ashes and lime, or sawdust

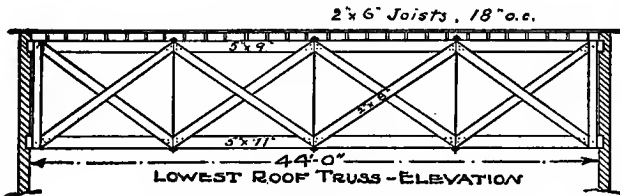


Fig. 178. Truss for Flat Roof.

and lime. Or one of the special patent compositions, such as slag wool, made for the purpose, might be used.

The second deadening is applied between the rough floor and the hardwood upper flooring, and consists of heavy deadening felt made for

the purpose. In the case of a rink, the felt should be laid on the rough floor; then strips of 1 by 2-inch stuff laid flat, 12 inches apart; and then the hardwood floor laid to form the skating surface.

To Strengthen a Truss. Occasionally, from one cause or another, trusses weaken and sag. It is then necessary to brace or strengthen them in some way. Fig. 180 is a sketch of a truss which settled about five inches. The truss is in

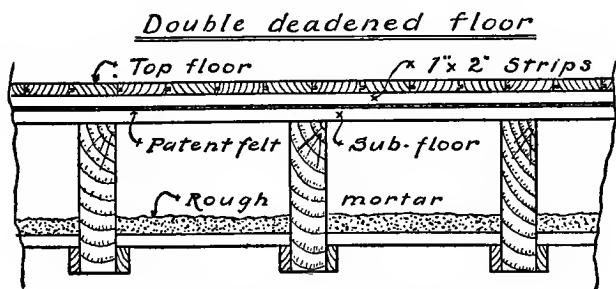


Fig. 179. Method of Deadening Floor for Rink.

a theater above the gallery, and is used to support same.

The trouble with this truss is probably in the spacing of braces at top and bottom, and changing them would be impracticable. To make it perfectly safe, it would do to jack it up in center until it has sufficient camber, and then reinforce the bottom chord with a couple of 2 by 12-inch planks, one bolted on each side, and put a $1\frac{1}{4}$ -inch truss-rod on each side, as shown in sketch, with turnbuckle. If ends of rods are not upset, to depth of thread, use heavier ones,

so that the diameter at bottom of thread will be not less than $1\frac{1}{4}$ inches. This will result in a change of length of braces, and they should be replaced. As the middle vertical rod carries no part of the load of the truss proper, it is not necessary to have nut and washer under bottom chord; and the rod may pass on down through the gallery. Theoretically the rod serves only to prevent deflection in the two unloaded middle chord panels under their own weight, but in practice it is usually employed for convenience.

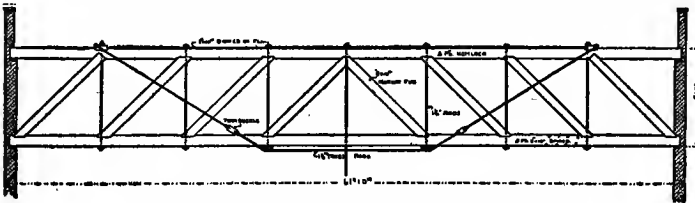


Fig. 180. Strengthening a Truss with Rods.

Top chord should be reinforced with a 2 by 10 spiked on flat, between angle washers. See that foot of end brace is held rigidly in place.

To Camber a Truss. Fig. 181 is a truss, specification for which says "frame it so it will have 2-inch camber when tightened up." Now, the question is, how to get the proper location of the holes for the rods, also the lengths of each stick of timber.

The method of cambering such a truss involves some knowledge of mathematics and drawing. Nearly all engineers are now in the habit of making the necessary calculations and figuring the exact lengths of the braces upon

the drawings before they are sent out. The proper angle of the cast-iron shoes is also worked out, and a full-sized drawing of each casting is made in the drafting room.

In theory, when such a truss is cambered, the upper chord becomes longer than the bottom. The panels will thus be out of square and the braces slightly longer in consequence. A rule for finding the increase of length has been

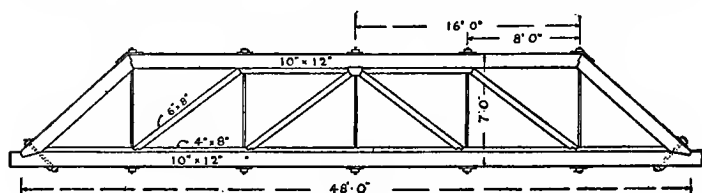


Fig. 181. Simple Wood Truss to be Cambered Two Inches.

worked out and is as follows: To find increase in length of upper chord, put down:

$$\frac{\text{Depth of truss} \times \text{Camber} \times 8}{\text{Span}},$$

(all in feet or inches). Applying this rule to the problem at hand, we have:

$$\frac{7 \text{ ft.} \times 1-6 \text{ ft.} \times 8}{48} = 7\frac{7}{8} \text{ ft., or } 2\frac{1}{8} \text{ inches.}$$

The figure 8 in the formula is a constant, and is used in all cases.

The increase found by working this very simple calculation, is divided amongst the panels. If your drawings have not been figured for camber, you will require to make a full-

sized drawing of one panel of the truss upon a board platform or convenient floor. The drawing should show the panel as much wider at the top as your calculations will direct, and the braces can then be cut to length and bevel on your drawing. Of course, the upper chord is not actually lengthened $2\frac{1}{3}$ inches, all that is necessary being to cut your braces to fit the full-sized drawing of the distorted panel. In this case the distortion (out of square) is very small, as the truss is shallow. It may be taken as one-half inch for each panel; and the braces may be made five-eighths or three-quarters of an inch longer than they would be if panel were square.

This applies, of course, not to all cases, but only to the case of a simple wooden truss. It must be noted that in steel trusses, where the braces abut against machined surfaces, very exact calculations are necessary for finding the lengths of braces, and angles of bearing surfaces. In large wooden trusses, great care is also taken in this respect, although it is easier to adjust the length and cuts of the braces in this material.

The positions of bolts are obtained by spacing evenly, as shown, and should present no difficulty.

Trussed Partitions. In a four-story building, ground plan 42 by 72 feet, the first floor was to be one large room without posts. Two trusses on the second floor, each in a partition

running across the building, were desired. The ceiling on the second floor was ten feet. The diagrams, Fig. 182, show two trussed partitions, 42 feet by 10 feet, with the doors arranged as desired. The studding is omitted for the sake of clearness, but would be cut in between the

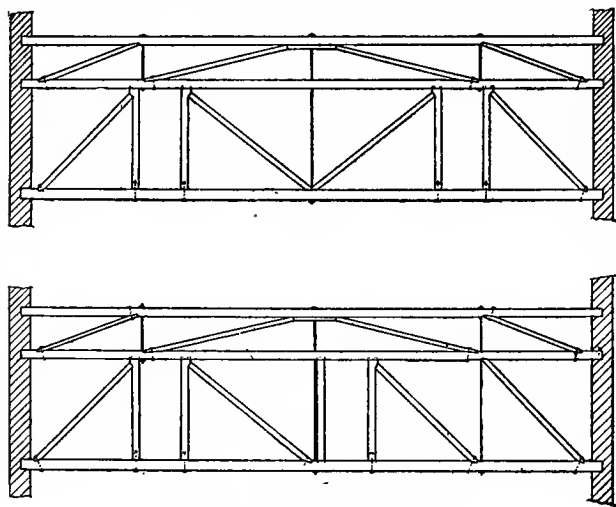


Fig. 182. Trussed Partitions.

ties and braces and spiked to them at proper distances apart.

If these trussed partitions were calculated to carry simply their own weight, the dimensions of the framing would be as follows: Bottom member, 10 inches by 5 inches; inter-tie and top member, 8 inches by 5 inches; long struts, 4 inches by 5 inches; upright members, 4 inches by 5 inches; tension rods, $1\frac{1}{4}$ -inch iron; other bolts, $\frac{5}{8}$ inch.

335

	PAGE		PAGE
F		L	
Face Line	3	Lath	182
Factor of Safety.....	299	Metal and Wood.....	169
Factories, Stores, Office and		Lattice Truss.....	327
Public Buildings.....	275	Lintels for Fireproof Work.	222
Finishing Cement Plaster...	173		
Fireplaces	83	M	
Fireproof Floors.....	225	Mill Construction, Standard.	275
Fireproofing	222	Mortars, Coloring of.....	174
Flat Roofs, Trusses for....	328	Moulding	155
Floors			
Cement Cellar.....	11	O	
Value of Sub-Floors....	73	Octagon Bay Window.....	59
Fireproof Floors.....	225	Octagon Scale.....	118
Concrete Stable Floors..	262		
Water-tight Barn Floors.	265	P	
Foundations, Concrete.....	6	Parlor Doors, Sliding.....	71
Foundation Walls.....	9	Partitions	
Framing, Definition and Di-		Double, Trussed	32
visions	1, 2	Braced	33
Furring Strips, Lath and		Trussed	333
Plaster	182	Parts of Heavy Timber	
		Barns	245
G		Pivoted Casement Windows.	200
Gables	37	Plank-Framed Barns.....	254
Gambrel Roofs.....	260	Plank-Framed Truss.....	325
Gauged Arches.....	219	Plaster	182
		Substitute for	30
H		Cement	173
Hay Barns	252	Porches	
Hay Mow Doors.....	267	Screened Porch.....	75
Heavy Timber Barns	241	Circular Porch.....	76
Heavy Timber Framing, De-		Projecting Veranda.....	303
tails for.....	246	Public Buildings.....	275
Hip Roof.....	101	Purlins	
House Framing.....	16	Strong Post Bracing....	247
Housed-String Stairs.....	135		
		Q	
I		Queen Rafters	258
Industrial Buildings.....	275		
		R	
J		Rafters	97
Joists and Studding.....	22	Curved	116
Joist Framing.....	208	Reinforced Concrete Stairs.	227
		Relieving Arch.....	216
K		Ribbon or Ledgerboard....	26
Kerfing a Riser.....	152	Risers	139, 152

	PAGE		PAGE
Roofing		Closed-String Stairs.....	139
Heavy Roofing Tile.....	234	Open-String Stairs.....	141
Slate	235	Various Stair Arrange-	
Roof Construction.....	282	ments	146
Roof Pitches and Degrees..	91	Winders	149
Determining the Pitch...	95	Kerfing a Riser.....	152
To Find Cut for Rafter..	97	Short Cuts in Stair Work.	153
To Find Length of Crip-		Paneled Moulding for	
ple Jacks.....	100	Stair Finish	155
Framing Plan for Hip		Picture Moulding under	
and Valley.....	101	Stairs	158
How to Roof a Circular		Height of Wainscoting...	159
Bay	113	Simplified	128
Curved Rafters.....	116	To Fit Circular Wall...	151
How to Use Octagon		Staking Out.....	3
Scale	118	Stores	275
To Frame Degrees with		Strength of Timbers...293,	308
Steel Square.....	120	Struts	321
To Prevent Ridge from		Studding	22
Sagging	122	Sub-Floors	73
To Prevent Ice Formation			
on Eaves.....	123		
Roof Supports.....	258		

S

Sagging Roofs.....	122
Saw-Tooth Roof Construc-	
tion	282
Screens	193
Screened Porch.....	75
Sheathing	26
Shingling Sides of a Build-	
ing	87
Short Cuts in Stair Work..	153
Show Blocks.....	38
Sill Construction.....17,	208
Sills, Box.....	17
Built-Up Sills.....	21
Single Sash Windows.....	40
Slate Roofing.....	235
Sound-Proof Walls.....	29
Splice for Heavy Timber...	253
Squaring a Corner; 6, 8,	
and 10 rule.....	4
Stable Floors, Concrete....	262
Stairs, Reinforced Concrete.	227
Stair-Building	
Head Room.....	129
How to Lay Out Stairs..	130
Types of Stair Construc-	
tion	135
Laying Out Stair Strings.	137
Box Stairs.....	139

T

Temporary Frames (Win-	
dows)	184
Ties	321
Tie Struts	321
Tile Roofing	234
Tile Veneer for Frame	
Buildings	211
Timbers, Strength of.....	293
Tinting, Cement Plaster...	173
To Find Cuts for Rafters..	97
Transom Window Frames..	56
Treads	139, 152
Trusses	320
Simple Roof.....	322
Light for Long Span...	323
Plank-Framed	325
Light for 100-ft. Span...	326
Lattice	327
For Flat Roof.....	328
To Strengthen a Truss...	330
To Camber a Truss.....	331
Trussed Partitions.....	333

V

Valley Rafters.....	101
Veneer for Frame Buildings.	211
Veneer and Masonry Houses.	174
Air Spaces and Bonding.	177

Ventilators	60
Ventilating a Barn.....	272
Verandas, Projecting.....	303


W

Wainscoting	159
Walls	174
Cellar	12
Foundation	9
Segmental Arches in Brick Walls	216
Wall Framing.....	26
Sound-Proof Walls.....	29
Wall Construction, Brick Veneer	174
Waterproofing Cellars.....	15
Water-tight Barn Floors...	265
Window Framing.....	39, 162
In Masonry Walls.....	179
Windows	
Single Sash.....	40

Outward-Opening Case-ments	41
Inward-Opening Case-ments	49, 189
Triple Windows.....	57
Framing for Octagon Bay.	59
Window Ventilator.....	60
For Open-Air Room.....	62
Roof Dormers.....	105
Casement Window Con-struction....	41, 49, 165, 183
Temporary Frames.....	184
Casement Screen and Blind	193
Casement Bay Window..	197
Sill Construction and Joist Framing	208
Barn Windows.....	272
Fine Casement Windows..	183
Winders	149
Wood Lath.....	169
Wood Trim, How to Apply.	230

THE MOST PRACTICAL BOOKS EVER PUBLISHED

A Complete Up-to-Date Explanation of Modern Carpentry

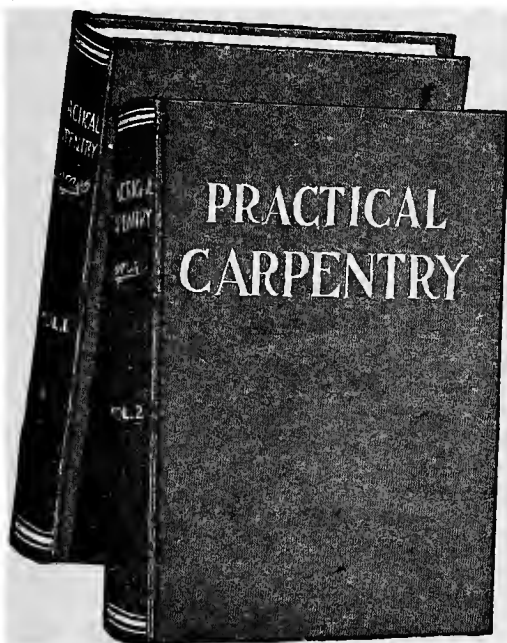

New Special Edition This work, "Practical Carpentry," is absolutely new, being completed only January 1, 1907. It is written in simple, plain, every-day language so that it can be easily understood.

It is the Most Complete most accurate, most up to date and most practical work upon this subject. It contains the best and quickest methods for laying roofs, rafters, stairs, floors, hopper bevels, mitring, coping, splayed work, circular work, and in fact for forming all kinds of joinery and carpenter work.

Special Chapters are Devoted to Building construction, which takes the carpenter from foundation to roof, with complete illustrations of each detail, such as foundation, windows, cornices, doors, roofs, porch work, etc. There are also special chapters devoted to good and faulty construction, and all kinds of framing, geometry, arches, centers, window and door heads, steel square in carpentry, house framing, roofs and roof construction, building construction, covering of roofs, mouldings, joints, straps and other fastenings, stair building and questions and answers on all subjects pertaining to the building industry.

400 Special Illustrations

There are over 400 illustrations, many of them cover an entire page, and they

illustrate completely and instructively the text. They show the detail and actual construction down to the minutest point. They enable the reader to understand the text easily and to follow the work in hand without difficulty.

Remember this work is the latest one published on this extensive subject (issued January 1, 1907). Each volume measures 6x9 inches, and is bound in cloth with cover design attractively stamped. Contains more than 300 pages in each volume. Printed on an excellent quality of paper. Each volume contains 50 modern house plans. If not satisfactory in every way they can be returned after examination and your money will be refunded.

We are fortunate in being able to present a number of full page details, showing the construction of cornices, porches, stairs, etc., which were prepared for this work by G. W. Ashby. They show the construction of each part completely, and complete dimensions are given in all cases.


Price, per volume, postage prepaid.....\$1.00

Address

The Radford Architectural Co.
Chicago—New York

The Most Wonderful Books Ever Published

A Complete Encyclopedia on the Practical Uses of the Steel Square

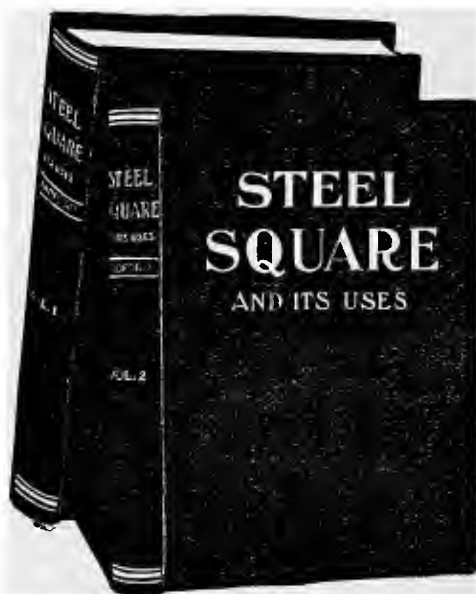

Just Published This very valuable and practical work is published for the first time. It is up to the minute, being issued January 1, 1907. This splendid edition is a brand new book from cover to cover, written in simple, plain, every-day language so that it can be easily understood and followed. Information of value that has appeared in former works appears in this work, together with a vast amount of new, practical, every-day information, such as is necessary for every progressive and successful carpenter to know.

This Up-to-Date and Practical Work on the application of the steel square, treats of the laying of the rafters, finding the lengths of jacks, securing bevels, laying out hopper bevels, treating of the steel square as a calculating machine, and showing how to measure solids, surfaces and distances.

Special Chapters are devoted to that part of stair building to which the steel square can be applied. Other chapters treat of the adjustable fence, roof framing, hip roof framing, hoppers and hopper bevels, combination squares, key to the steel square, possibilities of the steel square, polygons and miters, pitches and roof framing, and miscellaneous rules and examples.

Practical and Instructive

Illustrations to the number of more than 300 are scattered through this work. These illustrations are not technical mathematical designs,

nor geometrical problems, but are the thoroughly practical illustrations of a thoroughly practical text, bringing to the attention of the carpenter such points of interest and information as he needs in his every-day business. While the text and descriptive matter are so accurate and easy of comprehension that they could be understood without even the assistance of the illustrations, nevertheless the book has been thoroughly and profusely illustrated with diagrams and drawings.

Remember this work is absolutely up to date (being issued January 1, 1907). Each volume measures 6x9 inches, and contains over 300 pages, being the largest books on the steel square ever published. They are bound in cloth with attractive cover designs, handsomely stamped. Printed on the best quality of paper. Each volume contains 50 house plans. If not satisfactory in every way they can be returned after examination and your money will be refunded.

The Department of Questions and Answers in Volume II is one of the most useful, interesting and instructive parts of this work. In this part numerous questions, which have been sent the editors by practical carpenters all over the country, have been fully answered. They are questions which come up in your work every day, and the solutions of these practical problems here given will prove a valuable aid to you.


Price, per volume, postage prepaid, \$1.00

The Radford Architectural Co.,

::

Chicago—New York

The **Radford Ideal Homes**

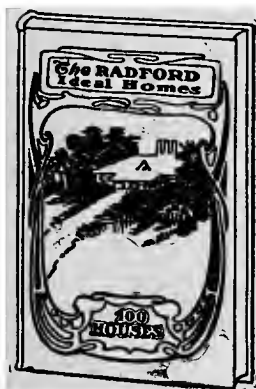

100
HOUSES
FOR
\$1.00

One Cent per House

Size of book 8 x 11 inches, bound in English cloth, cover embossed and printed in two colors. All houses illustrated with halftone cuts on the very finest enamel paper. The illustrations show the houses exactly as they will appear when built, and no liberties have been taken to make them appear otherwise. All the floor plans are shown, giving the size and location of all rooms, closets, porches, etc., so that ideas are given as to both the interior and exterior of these 100 homes. The houses illustrated are medium in price, and such as 80 to 90 per cent of the people of the United States wish to build to-day.

ADDRESS

The Radford Architectural Company
Chicago—New York

CEMENT WORLD

The Best, Largest and Most Practical Trade
Magazine of Cement
Construction

More Fine Illustrations of Cement Plaster and Concrete Block Houses appear each month than in any other cement paper. Perspectives, elevations, plans and details of moderate priced residences are a regular feature of every number.

SPECIAL ARTICLES
of Interest and Importance to Builders of Homes
make each number of value

The contents of the Cement World are exclusive and copyrighted and it is edited by men of practical experience.

Subscription Price, \$1.00 Per Year
Sample Copies on request


CEMENT WORLD

"THE WORLD'S GREATEST CEMENT PAPER"

241 Fifth Avenue, CHICAGO

New \$5,000 Book of Barn Plans

The combined thought and work of the best minds in the country in regard to farm buildings. It cost several thousand dollars to compile the book, besides the cost of printing and publishing it. It contains what might be termed a veritable storehouse of practical barn lore not to be found within the covers of any other book or obtainable in any other way.

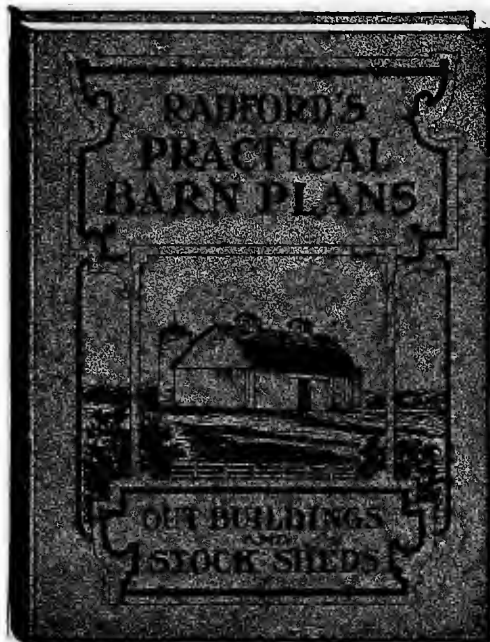

The Illustrations in the book are large drawings of floors, sides, ends and frame work, together with perspective views, sufficient to guide any carpenter or builder in the construction of same. It is a book which should be in every farm home if you only intend to repair a little, or just build a small chicken coop. It is a good thing to even sit down and read, as the knowledge so gained will be highly valuable in hundreds of other ways.

Great Many of the barn plans in this book have been contributed by farmers themselves from all over the United States and Canada, and are therefore the product of practical experience from farmers who have learned by actual necessities the barn that was most practical and best suited to their needs. They are not fancy barns and buildings, but practical barns such as every farmer likes. They contain a great many little advantages that are not usually found in ordinary barns.

Each and Every Plan in the book is accompanied by a lengthy written description explaining and giving the details of the drawings, and so worded and arranged, numbered and indexed, that it must be readily understood by anyone who reads it. Your money back if you are dissatisfied.

Our New \$5,000 Book of Practical Barn Plans shows just what every farmer needs. It contains drawings, pictures, plans, specifications and everything necessary and up to date for a barn, stock shed, wagon shed, corn crib, poultry house, hog house, horse barn, smoke house, ice house, silo, dairy barn or any other conceivable out-building on the farm. Not only one plan of each, but many of each are shown with all the latest inventions and contrivances for saving time, money and labor.

This Book Was Compiled by Mr. Wm. A. Radford, President of "The Radford Architectural Co.," Author of "The Steel Square and Its Uses," and "Practical Carpentry," and the best authority in the country on all matters pertaining to the building industry.

Price, postage prepaid.....\$1.00

The Radford Architectural Co.
Chicago—New York

Key to the Steel Square

The above title is the name given to a new framing device, perfected by A. W. Woods, and is meeting with popular favor among carpenters and builders throughout the country.

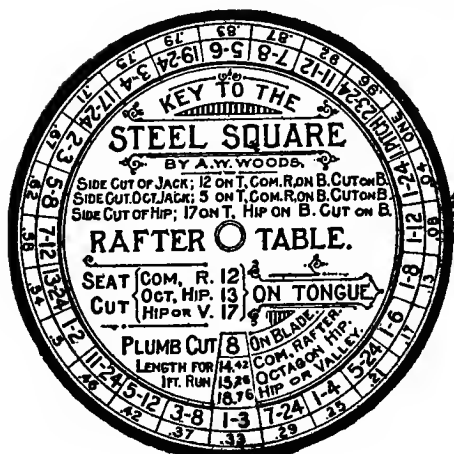


FIG. 1.



FIG. 2.

It is of celluloid, three inches in diameter, on either side of which is pivoted at the center a disk, one side giving the lengths and cuts for the common rafter, having a rise from 1 to 24 inches to the foot, also the corresponding lengths, cuts and bevels for the octagon hip or valley, and for the common hip or valley for roofs of equal pitch, while on the other side is given all the cuts for rafters and braces having a rise from 1° to 90°.

Price, \$1.50, Postage Paid.

INDUSTRIAL PUBLICATION CO.

16 Thomas Street, NEW YORK

BLUE PRINTED WORKING PLANS

AND

TYPEWRITTEN SPECIFICATIONS

The House Plans Illustrated in The Radford American Homes, The Radford Ideal Homes, Modern Carpentry, Steel Square Volume 1, Steel Square Volume 2, and Common Sense Stair Building have for their foundation the best equipped architectural establishment ever maintained for the purpose of furnishing the carpenter, contractor and home builder with complete working blue printed plans and typewritten specifications at an average price of only \$5 00 per set. All elevations and floor plans are drawn to a scale of one-quarter inch to the foot. The regular price charged by others is from \$40.00 to \$75.00 for the same work. Without this complete and exceptionally well-equipped establishment always at your service, these illustrations of plans would be useless to you. The working plans of any house illustrated by us are held in readiness for you. You do not have to wait a day for them to be prepared.

ONLY \$5⁰⁰ ONLY

For a Complete Set of Blue Prints and Specifications.

OF WHAT THEY CONSIST

We use the best quality Gallia blue-print paper, No. 1000X. We furnish for a set of plans the front elevation, right elevation, left elevation, rear elevation, all floor plans, cellar and foundation plans, and all necessary details. Our specifications consist of from fourteen to twenty pages of typewritten matter, giving full directions for carrying out the work.

Both the plans and specifications are bound in heavy water proof-material, and in an artistic and substantial manner.

OUR GUARANTEE

If upon receipt of our plans you do not find them as accurate, complete and well drawn as any you have ever used or seen, or if you do not consider them good value, we will refund your money.

Cement Houses and How to Build Them

CONTAINING SEVENTY-FIVE

PERSPECTIVE VIEWS AND FLOOR PLANS

OF

CONCRETE BLOCK AND CEMENT
PLASTER HOUSES

Illustrated Details of Construction
Standard Specifications for Cement
Standard Specifications for Concrete Blocks

GENERAL INFORMATION CONCERNING

Waterproofing, Coloring, Paving, Reinforcing
Foundations, Walls, Steps, Sewer Pipe
Tile, Chimneys, Porches, Floors,
Use of Concrete on the Farm, Etc.
PRICE 50 CENTS—POSTAGE PAID

The Radford Architectural Co.

Chicago—New York

